


Technical Bulletin

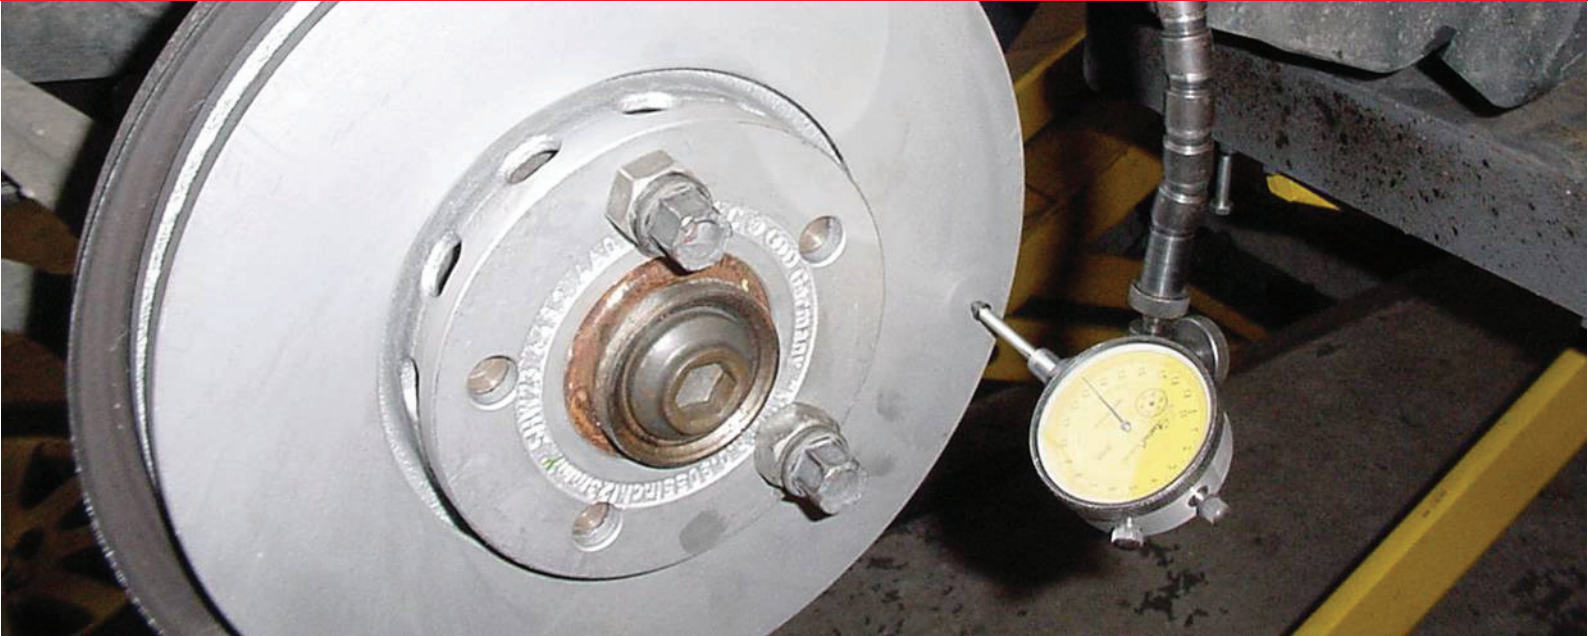

Disc run-out

When installing the new brake disc ensure that the surface of the hub is clean and free from damage. All too often disc run-out is caused by imperfections on the hub surface, resulting in the disc not fitting true on the hub.

If possible measure the run-out using a dial gauge. It should be no more than 0.1mm. The run-out on the hub itself should not exceed 0.002mm.