


Important notification

After fitting this new alternator the warning light can stay on. This can be caused by the red wire linked to the sense terminal (A) being broken. If the sense terminal connection is interrupted there will be no connection to the PCM (Power Control Module) and the warning light won't switch off.

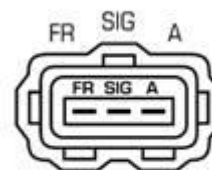

Plug 670



Terminal Markings	Reg. Type
A Sense (As)	IR
SIG Reg. Contr. (RC)	
FR Load Indicator (LI)	