TECHNICAL BULLETIN TB-79

Important notification

This starter is insulated! You must connect B- cable to the BTerminal!

