

Des.	Sheet	Pos.	Description		
B6	2	B4	Switch	l hand	
B7	2	F2		r hand	
B23	2	C4		luggage box	
B24	2	B6		front cover	
B33	2	C4		luggage box	
C1	2	B6	Connector	17-pole	
C2	2	C2			
C3	2	E5			
C8	2	D2		12-pole	
C9	2	F4			
C13	2	E5			
C14	2	A4		1-pole	
C55	2	C2	Connection bl	1-pole	
C56	2	F6	Junction block		
C107	2	C8	Connector	5-pole aux signals	
C112	2	E2		3x6-pole	
C118	2	D5	Joining sleeve	1-pole	
C131	2	A4	Connector	5-pole	
C132	2	F5			
C139	2	E5			12-pole
C155	2	C1			2-pole
C182	2	E5			8-pole
C184	2	F5			17-pole
C226	2	D4			3-pole
C241	2	D8			
C242	2	D8			2-pole
C243	2	D8			
C252	2	E4			5-pole
C253	2	C1			2-pole
C266	2	B6			3-pole
C267	2	D8			1-pole
C303	2	B6			
C338	2	C5		2-pole	
D25	2	E3	Light emitting diode		
D26	2	E3			
D27	2	B6	Diode	backup battery	
E7	2	C8	Control unit	VPS	
E12	2	C8		EDC	
F2	2	E8	Fuse panel	6-pole	
F7	2	B5	Fuse holder	1-pole	
G1	2	B4	Ground	instr panel	
G10	2	D5			front plate
G13	2	B2			
G18	2	C5			floor
M1	2	C1	Starter motor		
N8	2	A5	Signal horn		
N9	2	A5			

Des.	Sheet	Pos.	Description		
P2	2	E8	Central electric unit		
P4	2	B5	Battery		
R1	2	E6	Flasher relay		
R2	2	D6	Power relay	starter motor	
S2	2	E6	Switch	hazard warning light M	
S4	2	D6		starter	
S41	2	A5		central lock	driver's
S42	2	F5			pass's
S50	2	F6		diagnostics	
T78	2	C1	Sensor	cab tilt	
U3	2	D8	Aerial	remote control	
V45	2	C1	Solenoid valve	fuel shut off	



16:14-08

Utgåva/Issue/Ausgabe/Uitgave/Edición/Édition/Edizione/Painos 1

VPS, larm och stöldskydd

VPS, alarm and theft protection

VPS, Alarmsystem und Diebstahlschutz

VPS, alarm- en enti-diefstalsysteem

VPS, sistema de alarma y protección antirobo

VPS, alarme et antivol

VPS, allarme e antifurto


VPS, hälytin ja varrassuoja

Fordon tillverkade efter 9804
 Vehicles manufactured after 9804
 Fahrzeug gebaut nach 9804
 Na 0498 gefabriceerde voertuigen
 Vehículos fabricados después de 9804
 Véhicules fabriqués après 9804
 Veicoli realizzati dopo il 04/98
 9804 jälkeen valmistetut ajoneuvot
 Veículos fabricados após 9804

112750

1 711 187

© Scania CV AB 1998, Sweden

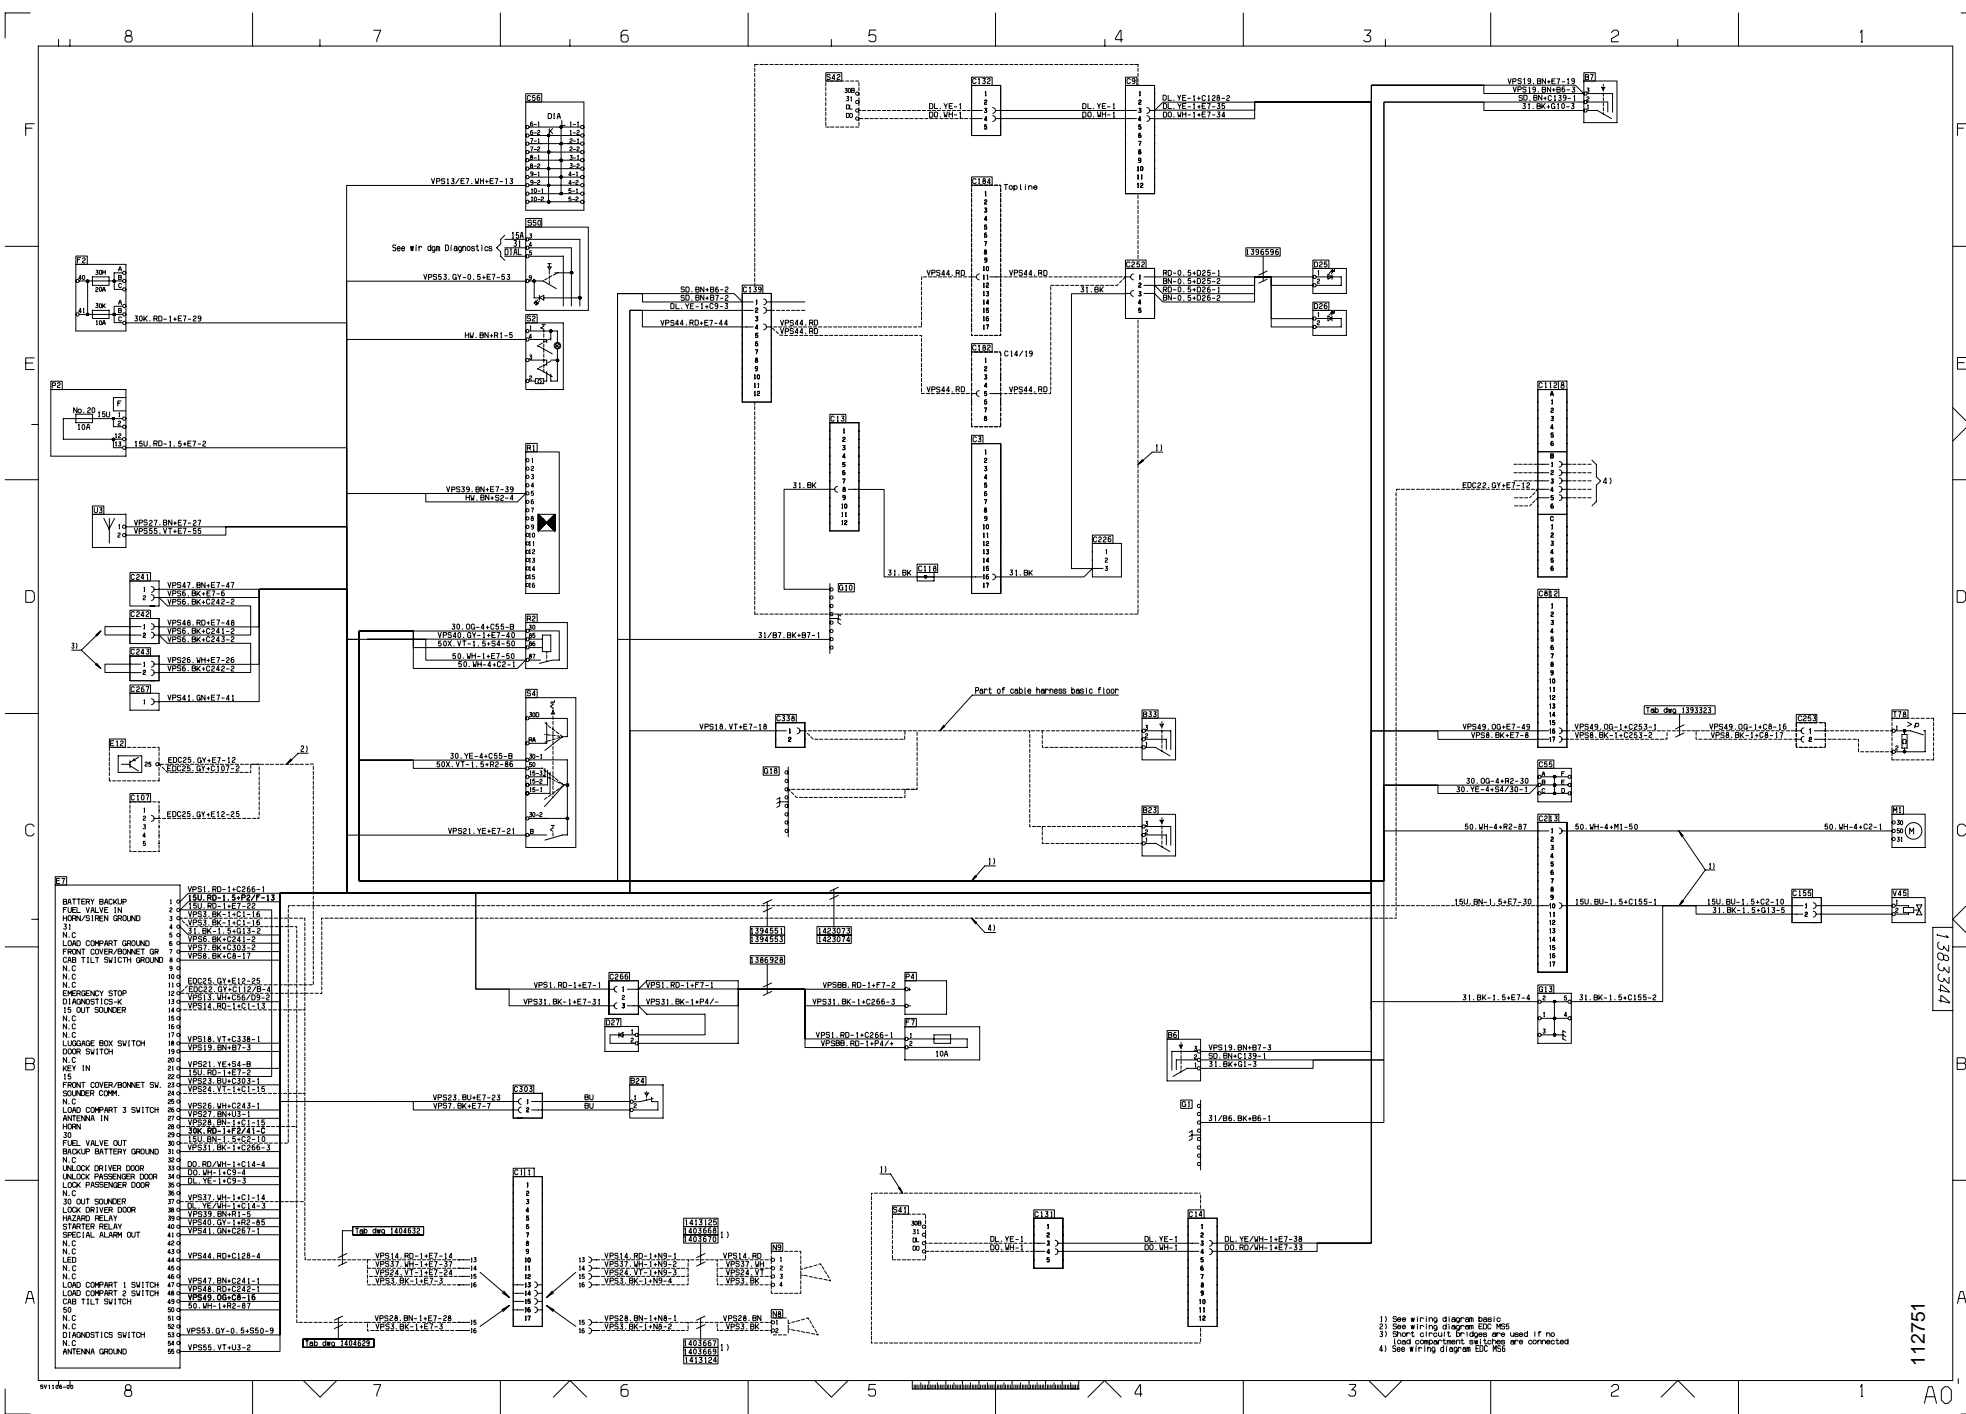

1	VPS1 RD-1-C266-1
2	FUEL VALVE IN
3	HORN/SIREN GROUND
4	N.C.
5	LOAD COMPART GROUND
6	FRONT COVER/BONNET OR CAB TILT SWITCH GROUND
7	N.C.
8	N.C.
9	EMERGENCY STOP
10	DIAGNOSTICS-K
11	15 OUT SOUNDER
12	N.C.
13	N.C.
14	LOGGING BOX SWITCH
15	DOOR SWITCH
16	N.C.
17	KEY IN
18	FRONT COVER/BONNET SW. SOUNDER COMM.
19	N.C.
20	LOAD COMPART 3 SWITCH
21	ANTENNA IN
22	HORN
23	FUEL VALVE OUT
24	INSULP BATTERY GROUND
25	N.C.
26	UNLOCK DRIVER DOOR
27	UNLOCK PASSENGER DOOR
28	LOCK PASSENGER DOOR
29	30 OUT SOUNDER
30	LOCK DRIVER DOOR
31	HAZARD RELAY
32	STARTER RELAY
33	SPECIAL ALARM OUT
34	N.C.
35	N.C.
36	LED
37	N.C.
38	N.C.
39	LOAD COMPART 1 SWITCH
40	LOAD COMPART 2 SWITCH
41	CAB TILT SWITCH
42	50
43	N.C.
44	N.C.
45	DIAGNOSTICS SWITCH
46	N.C.
47	ANTENNA GROUND

- 1) See wiring diagram basic
- 2) See wiring diagram ECU/ISS
- 3) Short circuit bridges are used if no load components between are connected
- 4) See wiring diagram ECU/ISS

112751