



SCANIA

16:14-16

Utgåva/Issue/Ausgabe/Utgave/Edición/Édition/Edizione/Painos 1

CTT med Eberspächer

CTT with Eberspächer

CTT mit Eberspächer

CTT met Eberspächer


CTT con Eberspächer

CTT avec Eberspächer


CTT con Eberspächer

CTT ja Eberspächer

CTT com Eberspächer

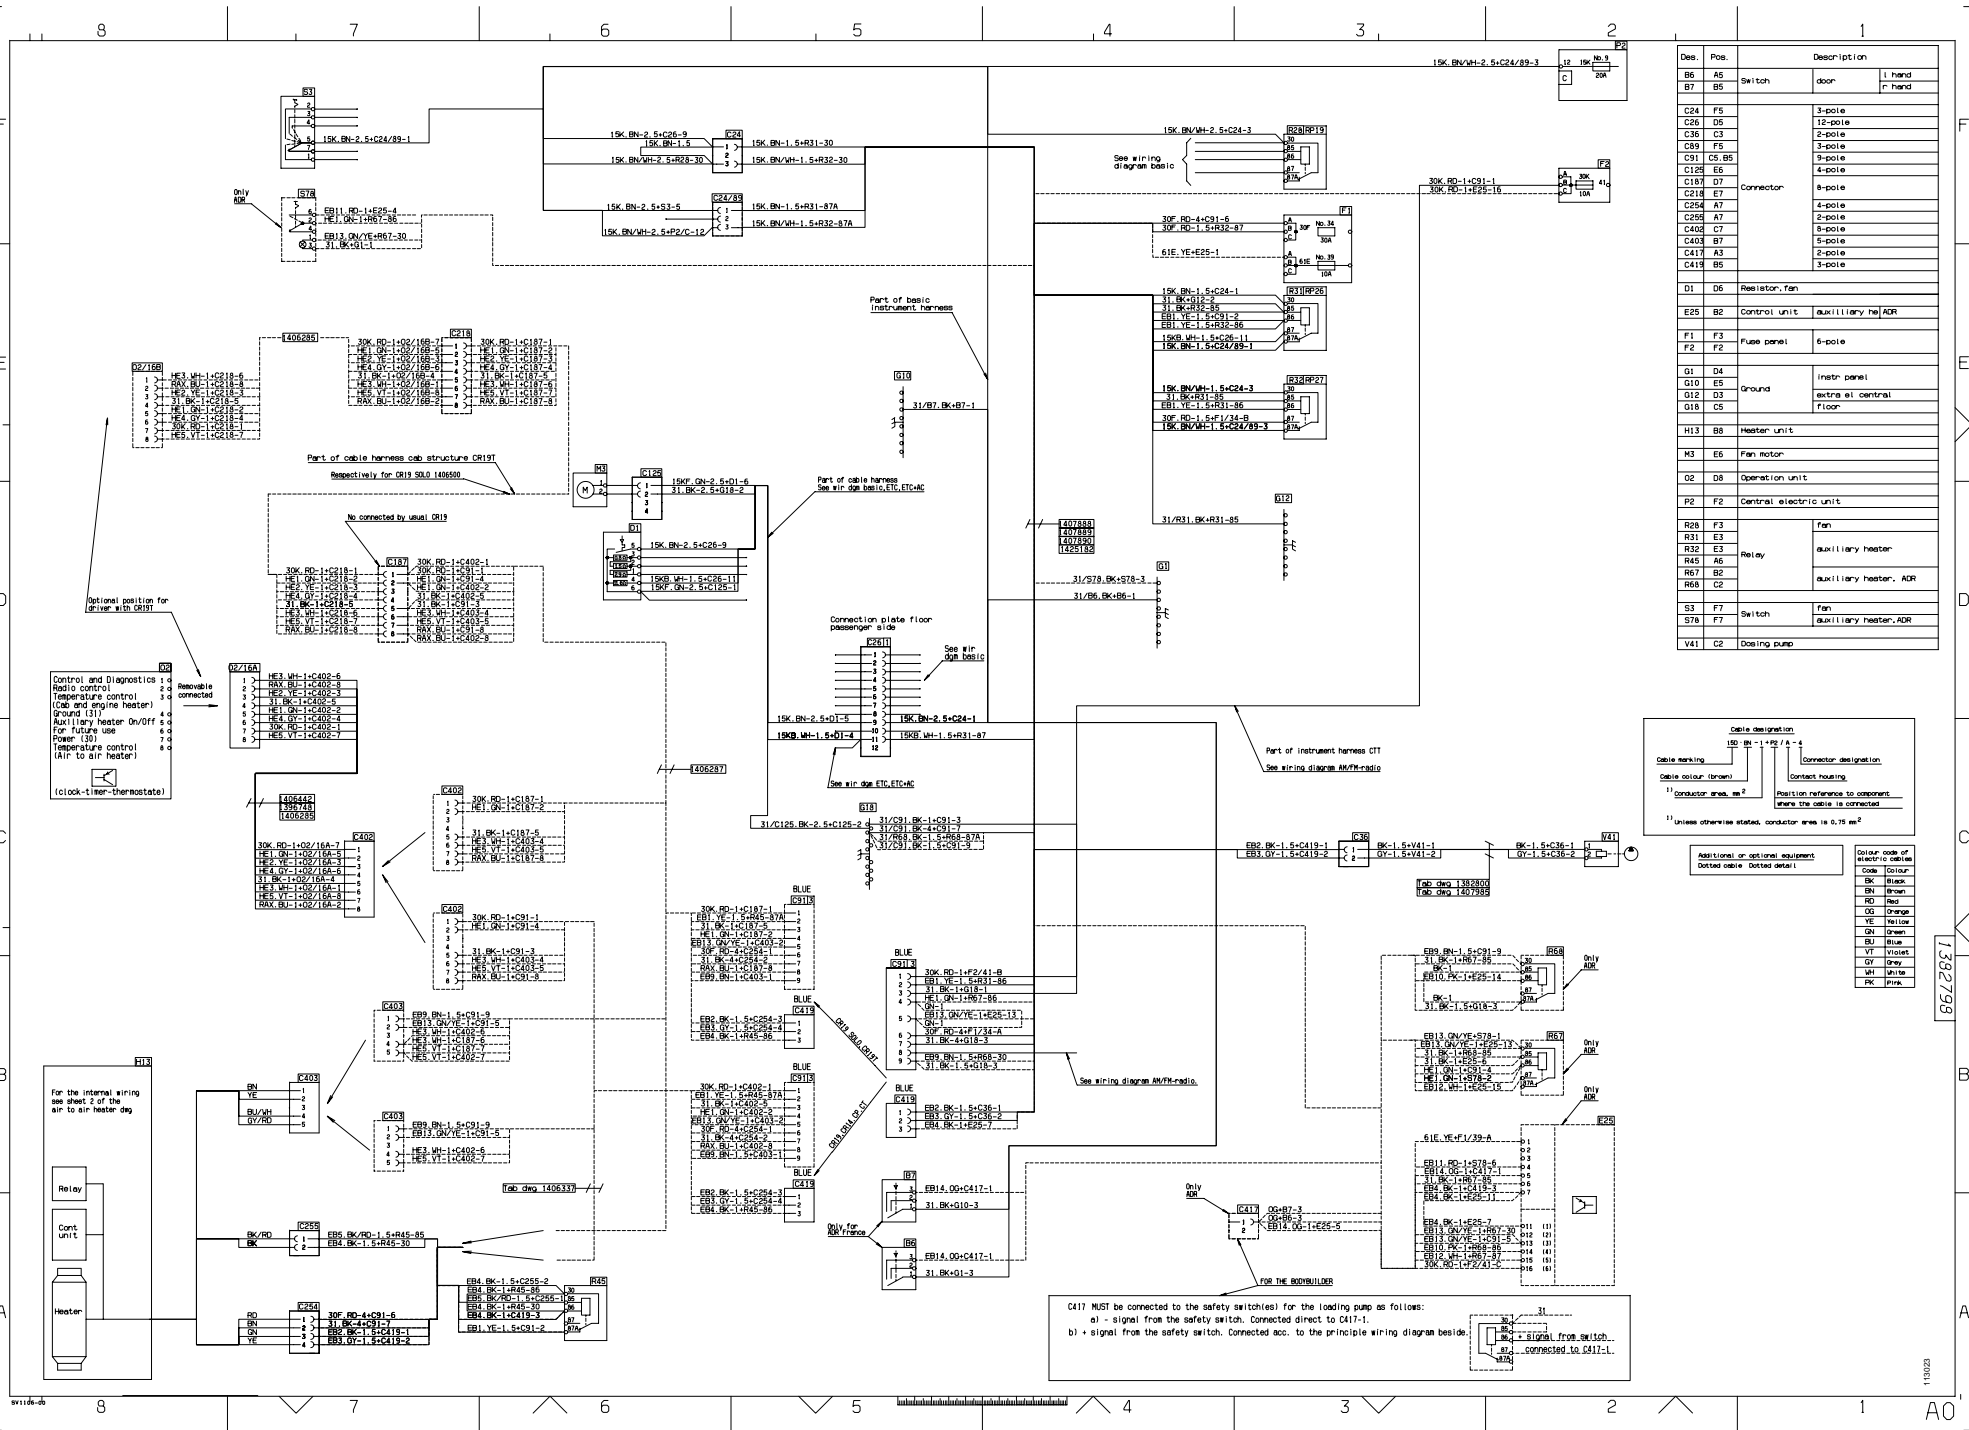

Des.	Pos.	Description
B6	A5	Switch
B7	B5	door
		1 hand
		r hand
C24	F5	3-pole
C26	D5	12-pole
C36	C3	2-pole
C39	F5	3-pole
C91	C5, B5	3-pole
C126	E6	4-pole
C187	D7	8-pole
C216	E7	4-pole
C254	A7	4-pole
C255	A7	2-pole
C406	C7	5-pole
C402	B7	3-pole
C417	A3	2-pole
C418	B5	3-pole
D1	D6	Resistor, fan
E25	B2	Control unit
		auxiliary heater
F1	F3	Fuse panel
F2	F2	6-pole
G1	D4	instr panel
G10	E5	Ground
G12	G3	extra at central
G18	C5	Floor
H13	B6	Heater unit
H3	E6	Fan motor
Q2	D8	Operation unit
P2	F2	Central electric unit
Q1	D4	Fan
R28	F3	Fan
R31	E3	Relay
		auxiliary heater
R45	A6	Relay
R67	B5	Relay
		auxiliary heater, ADR
R68	C2	Relay
S3	F7	Fan
S78	F7	Switch
		auxiliary heater, ADR
V41	C2	Obeying pump

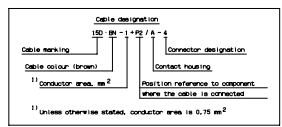

Code	Colour
BR	Brown
BL	Black
BN	Blue
RD	Red
GR	Green
VE	Violet
OR	Orange
GY	Grey
WT	White
PK	Pink

C417 MUST be connected to the safety switch(es) for the loading pump as follows:
 a) - signal from the safety switch. Connected direct to C417-1.
 b) - signal from the safety switch. Connected ax. to the principle wiring diagram beside C417-1.
 c) - signal from switch.
 d) - signal connected to C417-1.