



16:52-03

Utgåva/Issue/Ausgabe/Utgave/Edición/Édition/Edizione/Painos 1

Ram och Motor

Frame and engine

Rahmen und Motor

Chassiraam en motor

Bastidor y motor

Cadre et moteur

Telaio e motore

Runko ja moottori

Chassi e motor

CN/CL

Des. Sheet	Pos.	Description
B1	A3	Switch stop light
B32	C2	Clutch pedal upper
C7	C6	Connector 2-pole
C41	C3	Connector 3-pole
C56	E7	Junction block
C57	B2	Connector 4-pole
C196	C2	Connector 2-pole
C262	3 AB D1	Connector 17-pole
C503	A8	Connector 3-pole
C502	A7	Connector 3-pole
C501	A6	Connector 3-pole
C518	F1	Connector 1-pole
C514	E3 D3	Connector 9-pole
C513	E3 D3	Connector 9-pole
C516	C5	Inspection lamp socket 10-pole
C511	E5	Inspection lamp socket 10-pole
C512	F3	Inspection lamp socket 10-pole
C524	E1	Connector 9-pole
C523	D1	Connector 9-pole
C522	D1	Connector 9-pole
C524	D6	Joining sleeve 1-pole
C529	E4	Connection block 2-pole
C528	F3 F4	Connector 12-pole
C538	B4	Battery charging socket 4-pole
C538	A3	Connector 4-pole
C566	B6	Connection block 1-pole
C596	C1	Connector 2-pole
C594	E3 E4	Connector 2-pole
C591	D1	Connector 9-pole
C594	C1	Connector 9-pole
C600	E1	Connection block 1-pole
C614	B5	Connector 9-pole
C623	B5	Joining sleeve 1-pole
C644	C4	Connector 17-pole
C645	C2	Connector 17-pole
C644	C2	Connector 17-pole
C645	C2	Connector 17-pole
C644	C1	Connector 17-pole
C645	C1	Connector 17-pole
C713	A4	Connection block 1-pole
C714	B1	Connection block 3-pole
C734	C2	Connection block 9-pole
C735	1 AB F1	Connector 4-pole
C734	A7	Connector 4-pole
C734	C8	Connection block 9-pole
C734	D4	Connection block 9-pole
C748	E1	Connection block 1-pole
C773	A2	Connection block 9-pole
C831	C4	Connector 9-pole
C827A	C2	Connector 9-pole
D502	F8	Diode unit
D502	F3	Zener diode
E502	F6	Amplifier speed signal
F1	F8	Fuse panel 6-pole
F2	E8	Fuse panel 1-pole, main fuse
F502	B2	Fuse panel 1-pole, main fuse
F501	B2	Fuse panel 1-pole, main fuse
F502	B3	Fuse panel 1-pole, main fuse
F512	B4	Fuse panel 1-pole, main fuse
F512	B4	Fuse panel 1-pole, main fuse
G12	D8	extra el central
G29	A7	engine
G44	A7	frame
G502	B4	frame
G501	F2	electrical center
G503	A7	frame
G504	A7	frame
G512	C8	ground
G512	B1	ground
G514	D8	extra el central
G521	C3	rear panel
G621	B3	rear panel
G552	A2	frame
G551	A4	frame
G564	B4	frame
H4	C7	Air dryer
K1	F7	Diagnoses socket
L503	F6	Engine compartment light
L502	E6	Engine compartment light
M1	A7	Starter motor
M13	A7	Motor el roof front edge
M14	A7	Motor el roof rear edge
O3	F1	Speedometer
O4	F1	Tachograph
O501	F3	Combination instrument
P1	B4	Battery
P2	E8	Central electric unit
P3	B7	Alternator
P502	B7	extra alternator
R2	F4	Power relay starter motor
R8	E5	stop light
R19	E6	Relay supply alternator charging
R20	E8	Relay supply key position 2
R502	B3	Electromagnetic battery master switch
R501	B3	Electromagnetic battery master switch
R502	F7	Relay extra alternator
R514	F7	Relay coolant level
R513	E6	Battery master relay

Des. Sheet	Pos.	Description
R546	E5	Relay reverse sign. artic orient
R546	F8	Relay stop. stop. supply
S4	D1	Starter
S504	E5	engine comp lighting
S503	F5	Switch stop front-start
S513	F5	Stop engine
S513	F6	Stop engine
T1	B2	Sensor-Monitor low brake pressure front air
T2	B2	Sensor-Monitor applied parking brake rear air
T3	A2	Monitor low pressure [dark trail]
T4	B2	Monitor low pressure [dark trail]
T9	B7	Sensor-Monitor oil pressure engine
T16	E7	Sensor tachograph
T20	B4	Sensor outdoor temperature
T27	B3	Monitor applied parking brake
T502	A2	Monitor coolant level
T503	D7	Sensor coolant temperature engine
T522	E6	Sensor fuel level
V45	C7	Solenoid valve fuel shut off
Y500	C4	Spare cables
Y502	F3	Spare cables
Y503	C1 D1	Spare cables

Code	Type	Description
A	W	Wires
B	W	Wires
C	W	Wires
D	W	Wires
E	W	Wires
F	W	Wires
G	W	Wires
H	W	Wires
I	W	Wires
J	W	Wires
K	W	Wires
L	W	Wires
M	W	Wires
N	W	Wires
O	W	Wires
P	W	Wires
Q	W	Wires
R	W	Wires
S	W	Wires
T	W	Wires
U	W	Wires
V	W	Wires
W	W	Wires
X	W	Wires
Y	W	Wires
Z	W	Wires
AA	W	Wires
AB	W	Wires
AC	W	Wires
AD	W	Wires
AE	W	Wires
AF	W	Wires
AG	W	Wires
AH	W	Wires
AI	W	Wires
AJ	W	Wires
AK	W	Wires
AL	W	Wires
AM	W	Wires
AN	W	Wires
AO	W	Wires
AP	W	Wires
AQ	W	Wires
AR	W	Wires
AS	W	Wires
AT	W	Wires
AU	W	Wires
AV	W	Wires
AW	W	Wires
AX	W	Wires
AY	W	Wires
AZ	W	Wires
BA	W	Wires
BB	W	Wires
BC	W	Wires
BD	W	Wires
BE	W	Wires
BF	W	Wires
BG	W	Wires
BH	W	Wires
BI	W	Wires
BJ	W	Wires
BK	W	Wires
BL	W	Wires
BM	W	Wires
BN	W	Wires
BO	W	Wires
BP	W	Wires
BQ	W	Wires
BR	W	Wires
BS	W	Wires
BT	W	Wires
BU	W	Wires
BV	W	Wires
BW	W	Wires
BX	W	Wires
BY	W	Wires
BZ	W	Wires
CA	W	Wires
CB	W	Wires
CC	W	Wires
CD	W	Wires
CE	W	Wires
CF	W	Wires
CG	W	Wires
CH	W	Wires
CI	W	Wires
CJ	W	Wires
CK	W	Wires
CL	W	Wires
CM	W	Wires
CN	W	Wires
CO	W	Wires
CP	W	Wires
CQ	W	Wires
CR	W	Wires
CS	W	Wires
CT	W	Wires
CU	W	Wires
CV	W	Wires
CW	W	Wires
CX	W	Wires
CY	W	Wires
CZ	W	Wires
DA	W	Wires
DB	W	Wires
DC	W	Wires
DD	W	Wires
DE	W	Wires
DF	W	Wires
DG	W	Wires
DH	W	Wires
DI	W	Wires
DJ	W	Wires
DK	W	Wires
DL	W	Wires
DM	W	Wires
DN	W	Wires
DO	W	Wires
DP	W	Wires
DQ	W	Wires
DR	W	Wires
DS	W	Wires
DT	W	Wires
DU	W	Wires
DV	W	Wires
DW	W	Wires
DX	W	Wires
DY	W	Wires
DZ	W	Wires
EA	W	Wires
EB	W	Wires
EC	W	Wires
ED	W	Wires
EE	W	Wires
EF	W	Wires
EG	W	Wires
EH	W	Wires
EI	W	Wires
EJ	W	Wires
EK	W	Wires
EL	W	Wires
EM	W	Wires
EN	W	Wires
EO	W	Wires
EP	W	Wires
EQ	W	Wires
ER	W	Wires
ES	W	Wires
ET	W	Wires
EU	W	Wires
EV	W	Wires
EW	W	Wires
EX	W	Wires
EY	W	Wires
EZ	W	Wires
FA	W	Wires
FB	W	Wires
FC	W	Wires
FD	W	Wires
FE	W	Wires
FF	W	Wires
FG	W	Wires
FH	W	Wires
FI	W	Wires
FJ	W	Wires
FK	W	Wires
FL	W	Wires
FM	W	Wires
FN	W	Wires
FO	W	Wires
FP	W	Wires
FQ	W	Wires
FR	W	Wires
FS	W	Wires
FT	W	Wires
FU	W	Wires
FV	W	Wires
FW	W	Wires
FX	W	Wires
FY	W	Wires
FZ	W	Wires
GA	W	Wires
GB	W	Wires
GC	W	Wires
GD	W	Wires
GE	W	Wires
GF	W	Wires
GG	W	Wires
GH	W	Wires
GI	W	Wires
GJ	W	Wires
GK	W	Wires
GL	W	Wires
GM	W	Wires
GN	W	Wires
GO	W	Wires
GP	W	Wires
GQ	W	Wires
GR	W	Wires
GS	W	Wires
GT	W	Wires
GU	W	Wires
GV	W	Wires
GW	W	Wires
GX	W	Wires
GY	W	Wires
GA	W	Wires
GB	W	Wires
GC	W	Wires
GD	W	Wires
GE	W	Wires
GF	W	Wires
GG	W	Wires
GH	W	Wires
GI	W	Wires
GJ	W	Wires
GK	W	Wires
GL	W	Wires
GM	W	Wires
GN	W	Wires
GO	W	Wires
GP	W	Wires
GQ	W	Wires
GR	W	Wires
GS	W	Wires
GT	W	Wires
GU	W	Wires
GV	W	Wires
GW	W	Wires
GX	W	Wires
GY	W	Wires
GA	W	Wires
GB	W	Wires
GC	W	Wires
GD	W	Wires
GE	W	Wires
GF	W	Wires
GG	W	Wires
GH	W	Wires
GI	W	Wires
GJ	W	Wires
GK	W	Wires
GL	W	Wires
GM	W	Wires
GN	W	Wires
GO	W	Wires
GP	W	Wires
GQ	W	Wires
GR	W	Wires
GS	W	Wires
GT	W	Wires
GU	W	Wires
GV	W	Wires
GW	W	Wires
GX	W	Wires
GY	W	Wires
GA	W	Wires
GB	W	Wires
GC	W	Wires
GD	W	Wires
GE	W	Wires
GF	W	Wires
GG	W	Wires
GH	W	Wires
GI	W	Wires
GJ	W	Wires
GK	W	Wires
GL	W	Wires
GM	W	Wires
GN	W	Wires
GO	W	Wires
GP	W	Wires
GQ	W	Wires
GR	W	Wires
GS	W	Wires
GT	W	Wires
GU	W	Wires
GV	W	Wires
GW	W	Wires
GX	W	Wires
GY	W	Wires
GA	W	Wires
GB	W	Wires
GC	W	Wires
GD	W	Wires
GE	W	Wires
GF	W	Wires
GG	W	Wires
GH	W	Wires
GI	W	Wires
GJ	W	Wires
GK	W	Wires
GL	W	Wires
GM	W	Wires
GN	W	Wires
GO	W	Wires
GP	W	Wires
GQ	W	Wires
GR	W	Wires
GS	W	Wires
GT	W	Wires
GU	W	Wires
GV	W	Wires
GW	W	Wires
GX	W	Wires
GY	W	Wires
GA	W	Wires
GB	W	Wires
GC	W	Wires
GD	W	Wires
GE	W	Wires
GF	W	Wires
GG	W	Wires
GH	W	Wires
GI	W	Wires
GJ	W	Wires
GK	W	Wires
GL	W	Wires
GM	W	Wires
GN	W	Wires
GO	W	Wires
GP	W	Wires
GQ	W	Wires
GR	W	Wires
GS	W	Wires
GT	W	Wires
GU	W	Wires
GV	W	Wires
GW	W	Wires
GX	W	Wires
GY	W	Wires
GA	W	Wires
GB	W	Wires
GC	W	Wires
GD	W	Wires
GE	W	Wires
GF	W	Wires
GG	W	Wires
GH	W	Wires
GI	W	Wires
GJ	W	Wires
GK	W	Wires
GL	W	Wires
GM	W	Wires
GN	W	Wires
GO	W	Wires
GP	W	Wires
GQ	W	Wires
GR	W	Wires
GS	W	Wires
GT	W	Wires
GU	W	Wires
GV	W	Wires
GW	W	Wires
GX	W	Wires
GY	W	Wires
GA	W	Wires
GB	W	Wires
GC	W	Wires
GD	W	Wires
GE	W	Wires
GF	W	Wires
GG	W	Wires
GH	W	Wires
GI</		