


Des.	Sheet	Pos.	Description
B1	1	A5	
B11	3	E5	Switch
B16	3	D4	stop light diff lock 1st axle reverse light
C7	3	F1	
C22	1	C4	2-pole
C23	1	C5	9-pole
C48	1	A5	3-pole
C57	1	D2	4-pole
C114	3	E4	
C155	3	D5	Connector
C164	3	F3	2-pole
C500	2	B7	17-pole
C504	2	D2	
C520	2	E2	9-pole
C521	2	D2	
C524	1	E5	Connection block
C614	1	B5	9-pole
C722	3	C1.F4	
C723	3	C1.F4	
C724	3	C3.F5	
C725	3	C2.F5	
C726	3	C2.F3	1-pole
C727	3	C2.F3	
C728	3	C3.F4	
C729	3	C3.F4	Connector
C730	3	D2	3-pole
C731	3	D1	
C732	3	D1	1-pole
C733	3	D3	
C746	3	E6	4-pole
C747	3	E6	1-pole
C748	3	F6	4-pole
C749	3	F6	1-pole
F514	2	B4	Fuse
F521	2	B3	
G501	2	F2	electrical center
G544	1	C3	
G545	1	A4.C2	
G546	2	C1	
G547	3	E3	
G548	3	D3	Ground
G549	3	B5	
G550	3	A5	
G551	2	B5	
G552	3	A5	
G553	3	A4	
G554	3	F6	
G555	3	D5	
H4	3	F1	Air dryer
L18	1	D6	Symbol lighting
L22	1	D6	rheostat switch lighting
M1	3	B6	Starter motor
N2	3	F2	Signal horn
O4	1	F2	Tachograph
O500	1	F5	Combination instrument
P1	2	B5	Battery
P2	2	F8	Central electric unit
P3	3	B6	Alternator
P500	3	B6	Extra alternator
R1	1	D8	Flasher relay
R4	2	F7	Relay
R5/RR	1	E8	full-and dipped beam
R8	2	F5	stop light
R19	2	F6	supply alternator charging
R20	2	F8	supply key position 2
R21	2	F6	Relay
R22	2	F6	supply parking light
R24	2	F5	intermittent wiper
R24	2	F5	reverse light
R502	2	F4	horn
R5127	1	E8	
S1	1	E6	lighting
S2	1	C2	hazard warning light
S4	1	C2	Switch
S12	1	D6	starter
S17	1	C5	differential rear axle M
S17	1	C5	aut. exhaust brake on/off
S19	1	F5	instrument lighting
S24	1	C3	windscreen wiper, washer
S25	1	C5	Switch
S26	1	B5	dir. ind. l, full/dip beam signal horn
T1	1	A4	Sensor/Monitor
T2	1	A4	low brake pres. front air rear air
T3	1	B4	Monitor
T4	1	B4	applied parking brake low pressure park trail
T9	3	C6	Sensor/Monitor
T10	3	C5	oil pressure engine
T20	3	D4	Sensor
T503	3	C5	coolant temperature engine tachograph
T503	3	C5	Monitor
T503	3	C5	coolant level
V10	3	F2	Solenoid valve
V17	3	F3	diff. lock con. axle exhaust brake
V45	3	D6	Fuel shut off

115104

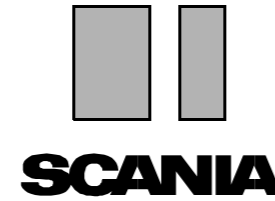

16:52-20

Utgåva/Issue/Ausgabe/Uitgave/Edición/Edizione/Edizione/Painos 1

Front och Förarplats

Instrument panel and electrics in front assembly

Armaturenbrett und E-System vorn

Instrumentenpaneel en electriciteit vóór


Panel de instrumentos y electricidad en parte delantera

Tableau de bord et électricité de la section avant











Panelli strumenti e elettricità sulla zona anteriore

Kojetaulu ja etuosan sähkö














F94

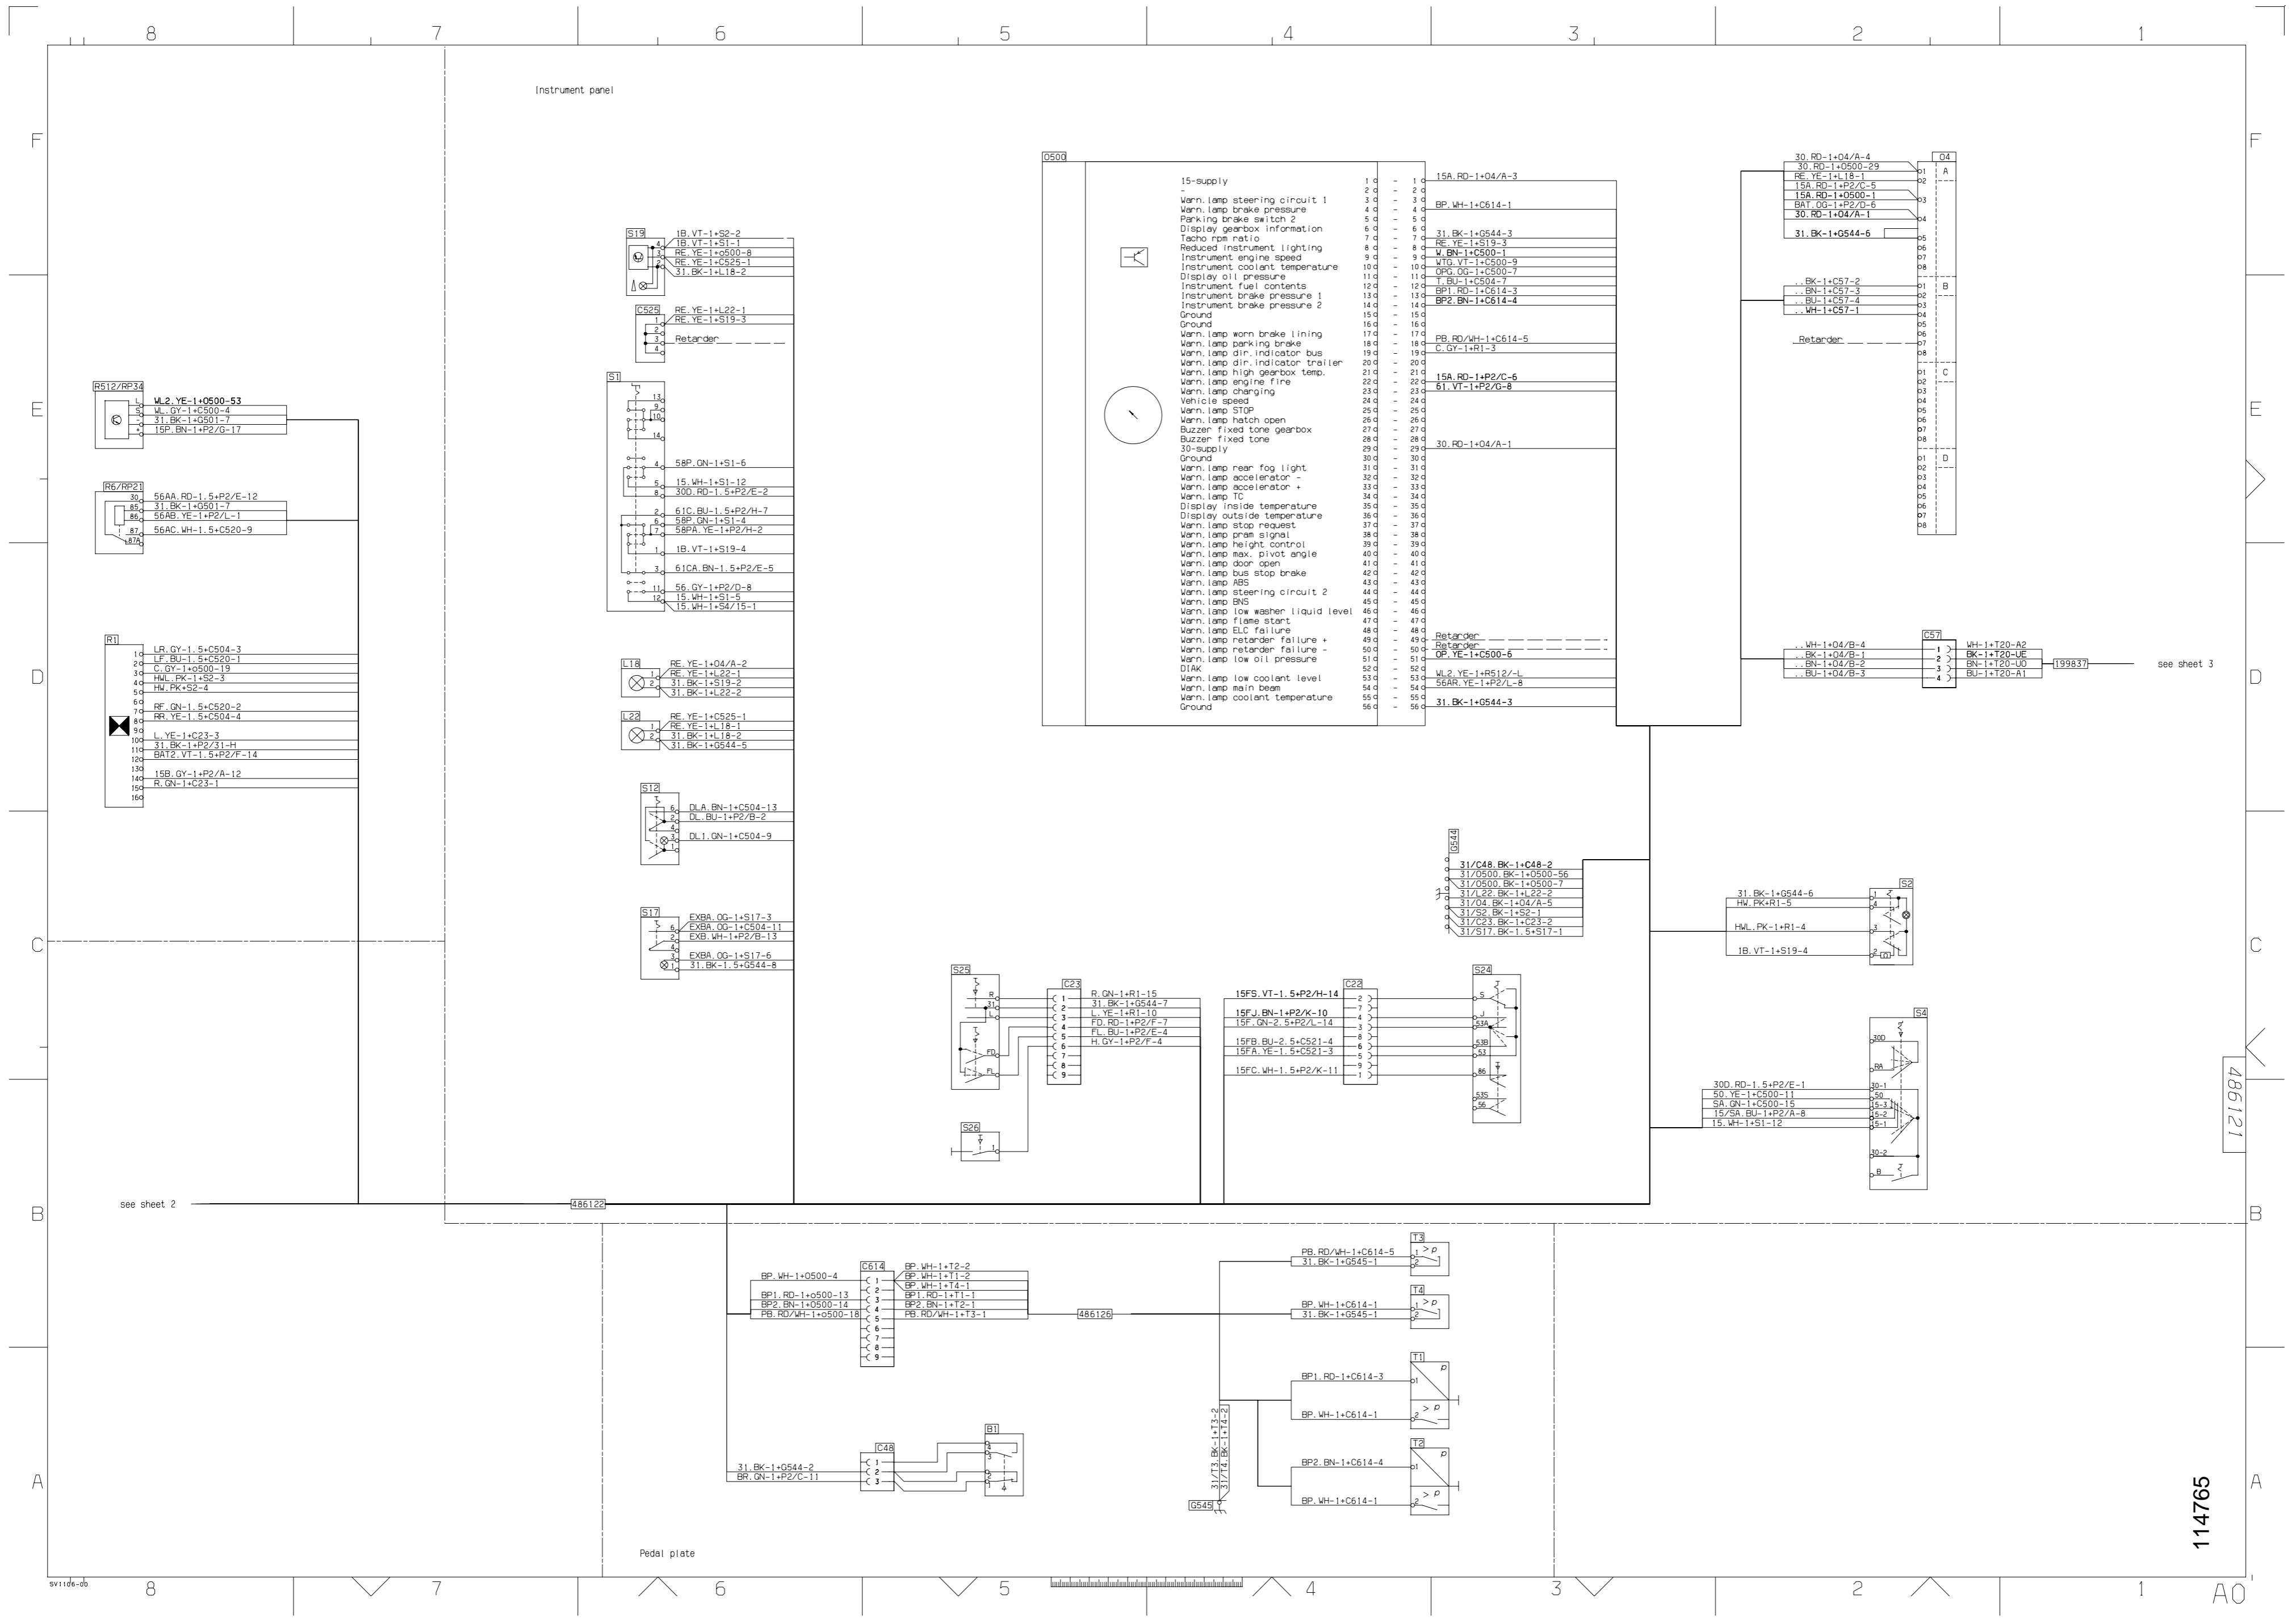

Instrument panel

          







15-supply	1d	-	1	15A.RD-1+O4/A-3
Warn. lamp steering circuit 1	2d	-	2	
Warn. lamp brake pressure	3d	-	3	BP.WH-1+C614-1
Parking brake switch 2	4d	-	4	
Display gearbox information	5d	-	5	
Tacho rpm ratio	6d	-	6	31.BK-1+G544-3
Reduced instrument lighting	7d	-	7	
Instrument engine speed	8d	-	8	RE.YE-1+S19-3
Instrument coolant temperature	9d	-	9	W.BN-1+C500-1
Display oil pressure	10d	-	10	WTC.VT-1+C500-9
Instrument fuel contents	11d	-	11	OPG.OG-1+C500-7
Instrument brake pressure 1	12d	-	12	1.BU-1+C504-7
Instrument brake pressure 2	13d	-	13	BP2.BN-1+C614-4
Ground	14d	-	14	
Ground	15d	-	15	
Warn. lamp warn brake lining	16d	-	16	
Warn. lamp parking brake	17d	-	17	PB.RD/WH-1+C614-5
Warn. lamp dir. indicator bus	18d	-	18	
Warn. lamp dir. indicator trailer	19d	-	19	C.GY-1+R1-3
Warn. lamp high gearbox temp.	20d	-	20	
Warn. lamp engine fine	21d	-	21	
Warn. lamp changing	22d	-	22	15A.RD-1+P2/E-5
Vehicle speed	23d	-	23	BT.VT-1+P2/D-9
Warn. lamp STOP	24d	-	24	
Warn. lamp hatch open	25d	-	25	
Buzzer fixed tone gearbox	26d	-	26	
Buzzer fixed tone	27d	-	27	
30-supply	28d	-	28	30.RD-1+O4/A-1
Ground	29d	-	29	
Warn. lamp rear fog light	30d	-	30	
Warn. lamp accelerator -	31d	-	31	
Warn. lamp accelerator +	32d	-	32	
Warn. lamp TC	33d	-	33	
Display inside temperature	34d	-	34	
Display outside temperature	35d	-	35	
Warn. lamp stop request	36d	-	36	
Warn. lamp prism signal	37d	-	37	
Warn. lamp height control	38d	-	38	
Warn. lamp max. pivot angle	39d	-	39	
Warn. lamp door open	40d	-	40	
Warn. lamp bus stop brake	41d	-	41	
Warn. lamp ABS	42d	-	42	
Warn. lamp steering circuit 2	43d	-	43	
Warn. lamp BNS	44d	-	44	
Warn. lamp low washer liquid level	45d	-	45	
Warn. lamp flame start	46d	-	46	
Warn. lamp ELC failure	47d	-	47	
Warn. lamp retarder failure +	48d	-	48	Retarder
Warn. lamp retarder failure -	49d	-	49	Retarder
Warn. lamp low oil pressure	50d	-	50	OP.YE-1+C500-6
DIAK	51d	-	51	
Warn. lamp low coolant level	52d	-	52	WL2.YE-1+R512/L
Warn. lamp main beam	53d	-	53	56AR.YE-1+P2/L-8
Warn. lamp coolant temperature	54d	-	54	
Ground	55d	-	55	
	56d	-	56	31.BK-1+G544-3

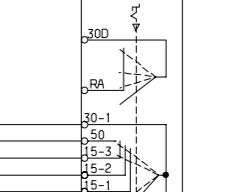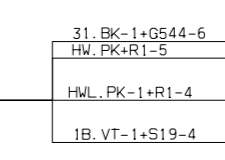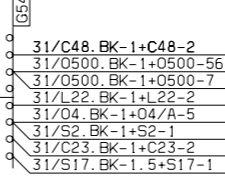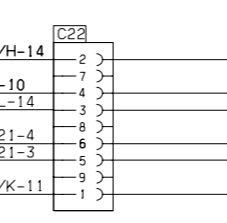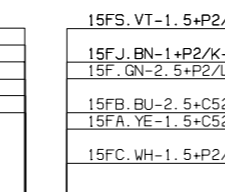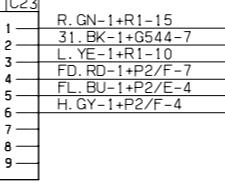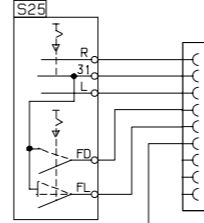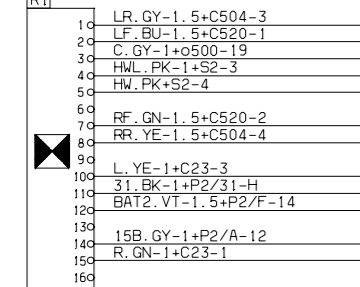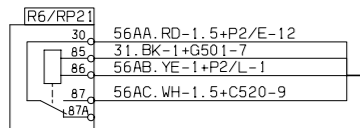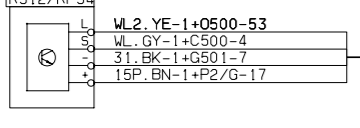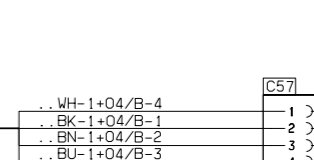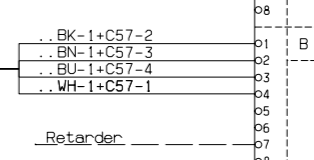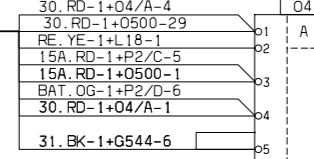

see sheet 2

486122

486120

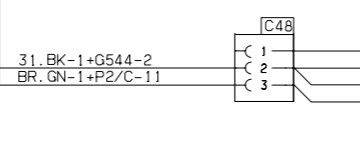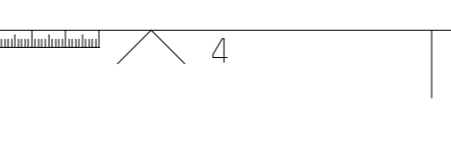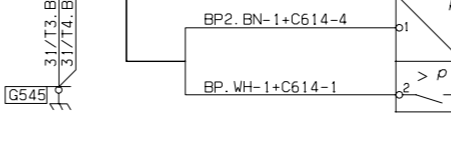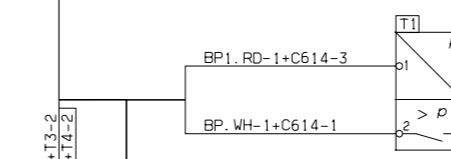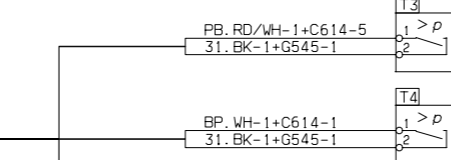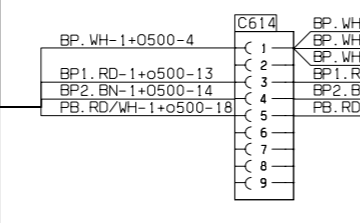

Pedal plate

see sheet 3

486121

114765