

A19	Speedometer
A21	Speed pilot
A23	ABS-ECU
A42	Engine temperature indicator
A95	ECU
B156	Inductive position sensor 1
B18	Inductive camshaft position sensor
B22	Coolant temperature sensor
B23	Air temperature sensor
B39	Accelerator pedal sensor
B79	MAP-sensor
F-	Fuse
H11	ECU lamp
K95	Relay
S15	Clutch switch
S16	Stop light switch
X11	Diagnostic connector
Y66	Unit Injector 1
Y67	Unit Injector 2
Y68	Unit Injector 3
Y69	Unit Injector 4
Y95	Unit Injector 5
Y96	Unit Injector 6