

A81	ECU
B114	Wheelspeed sensor 1 L
B115	Wheelspeed sensor 1 R
B116	Wheelspeed sensor 2 L
B117	Wheelspeed sensor 2 R
G12	Battery (earth)
H20	ABS indicator lamp
H27	Trailer ABS fault lamp
H28	Trailer ABS indicator lamp
K96	Relay
K97	Relay
K98	Indicator lamp Relay
X11	Diagnostic connector
X14	Ground connection
X24	Cable joint
X32	Collector plug
X33	Trailer brake connection
Y100	Control valve 2 L
Y101	Control valve 2 R
Y98	Control valve 1 L
Y99	Control valve 1R