

General





WARNING!

- Beware of hot oil after driving. Wear protective gloves and goggles.
- The fuel system may be pressurised. Release the pressure before dismantling.

Work description


1. Drain the engine oil. Make sure that any oil pockets in the cylinder block are also emptied.
2. Remove the oil filter. Also drain the oil from the centrifugal oil cleaner reservoir.

3. Remove the fuel filter unit. Use suction on the filter housing if necessary.

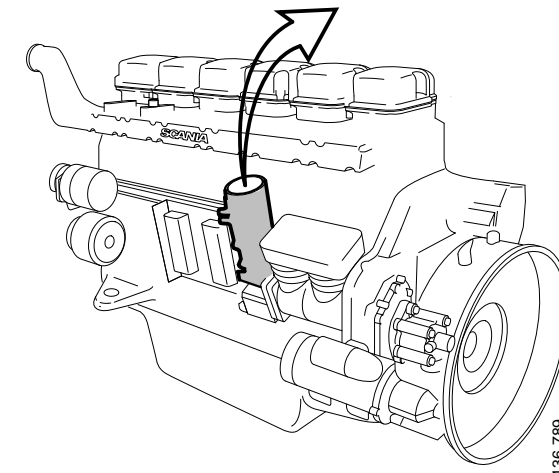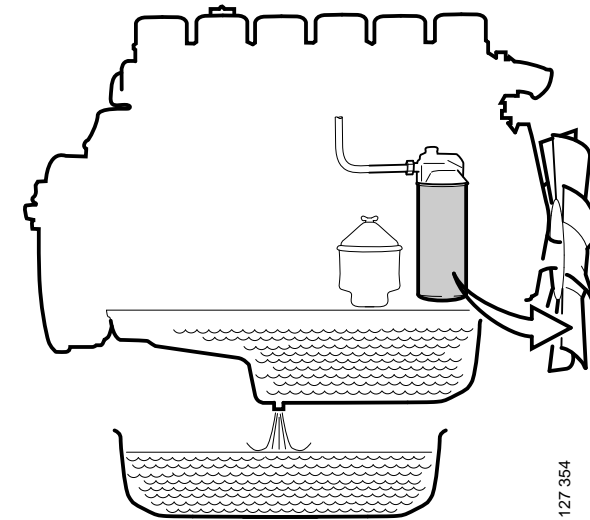

Fuel filter unit

4. Drain the oil from the compressor by unscrewing the blanking pieces.

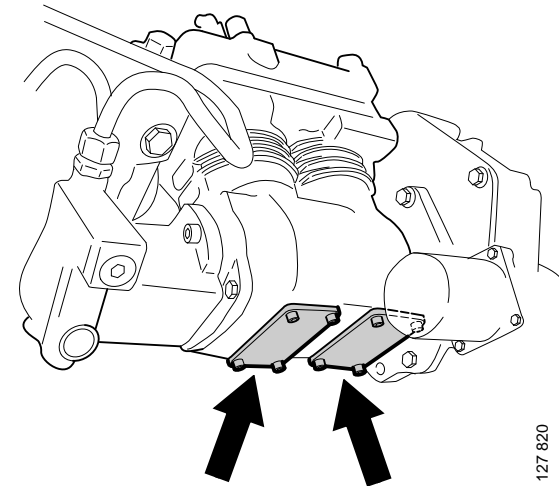

5. Drain the oil from the turbocompound unit by undoing the oil pipe connection.

