


## Work description

### Note:

Place a container under the gearbox because oil will run out.

Remove the parts in the following order:

1. Hydraulic pump (A) or flange connection and control housing.
2. Cover.
3. Shaft.
4. Power take-off housing.

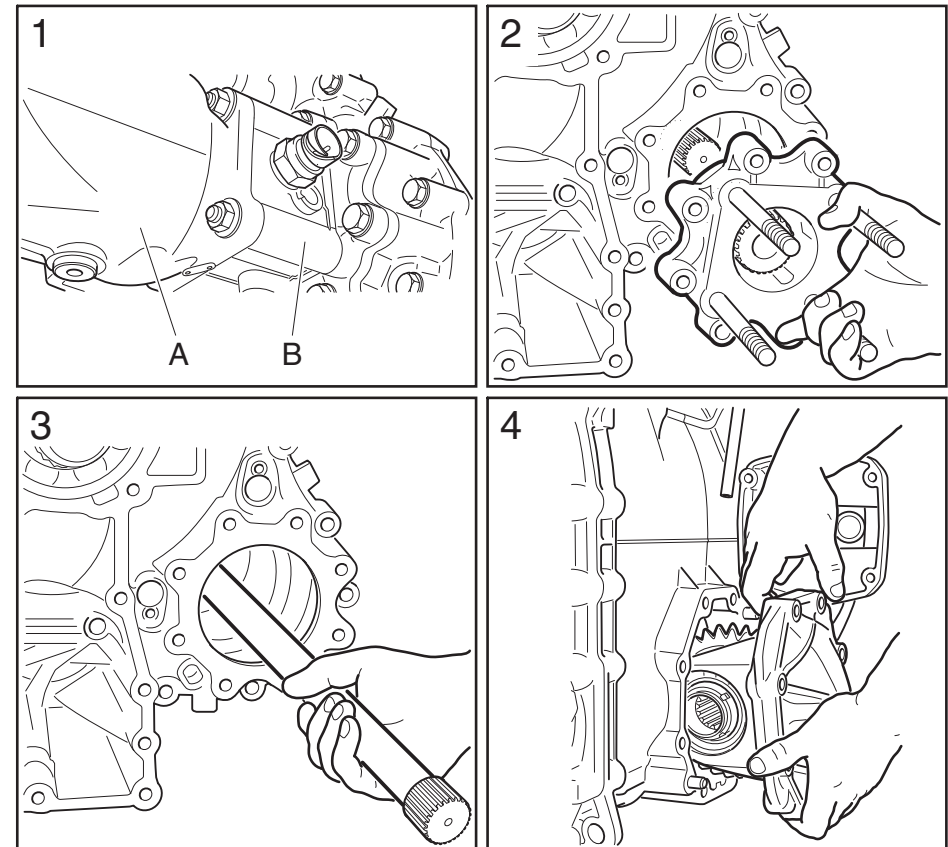

333 308