

General



WARNING!

If work is to be carried out underneath the cab later, make sure the cab is in the lowered position before emptying the pump.

Work description

1. Remove the pump from the vehicle.
2. Drain the oil from the pump.
3. Remove the cab tilt cylinder and cut the oil pipes.

