

Removing the camshaft



General


General

Applies to 9, 11, 12 and 13 litre engines with PDE, HPI, XPI or GAS.


Work description

Remove the parts in the order below:

- 1. Flywheel
- 2. Flywheel housing
- 3. Rocker arms, pushrods and valve bridges
- 4. Camshaft gear
- 5. Intermediate gear
- 6. Timing gear plate
- 7. Camshaft covers
- 8. Roller tappets
- 9. Camshaft

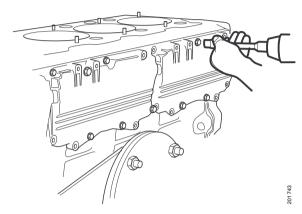

Camshaft covers

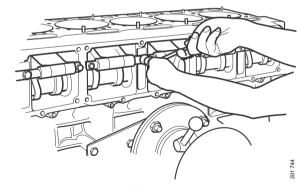

Roller tappets