

## Removing the door window



Work description


## Work description

- 1. Remove the blanking pieces (5) and the armrest (4).
- 2. Undo the door moulding (1).



The door moulding must be lifted upwards as the hooks on the lower edge will otherwise come off.

- 3. Remove the scraper strip (2).
- 4. Prise off the switch panel (9) and the boarding step lighting (10) and disconnect the connectors.

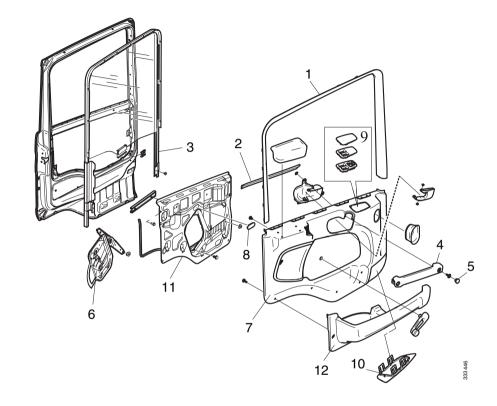




## Removing the door window



Work description

- 5. Unhook the opening cable on the back of the door trim panel (7).
- 6. Lift the door trim panel upwards and outwards.
- 7. Remove the blanking piece (8).

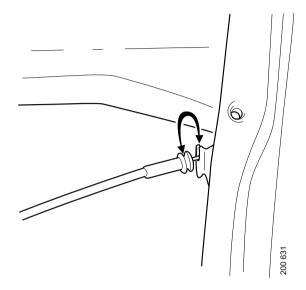




## Removing the door window



Work description

8. Wind down the door window, so that the window winder arm (6) is visible in the hole where the blanking piece was fitted.

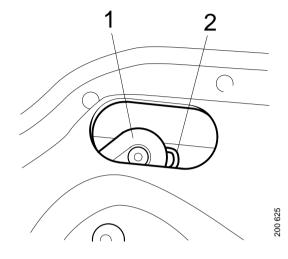

- 9. Suspend the door window with suction cups to prevent it from sliding down.
- 10. Remove the locking clamp.
- 11. Detach the window winder arm.
- 12. Remove the door panel retaining screws (11).
- 13. Lift the door panel upwards and outwards, and push at the same time the door lock opening cable through the panel.
- 14. Drill out the pop rivets in the door window guide rail (3), and remove the screws.
- 15. Lift out the guide rail and door window from the door.

