


General

Applies to 16 litre engines with PDE and cylinder block generation 1.

Work description

Detach the negative battery cable. Then remove the parts in the order below:

1. Oil pipe to the turbocharger.
2. Engine speed sensors.
3. Flywheel.
4. Electrical cables to the starter motor
5. Starter motor.
6. Compressor.
7. Exhaust manifold, inlet pipe and exhaust pipe from turbocharger.
8. Turbocharger and turbo manifold.
9. Power take-off or hatch for power take-off.
10. Oil sump.
11. Flywheel housing.

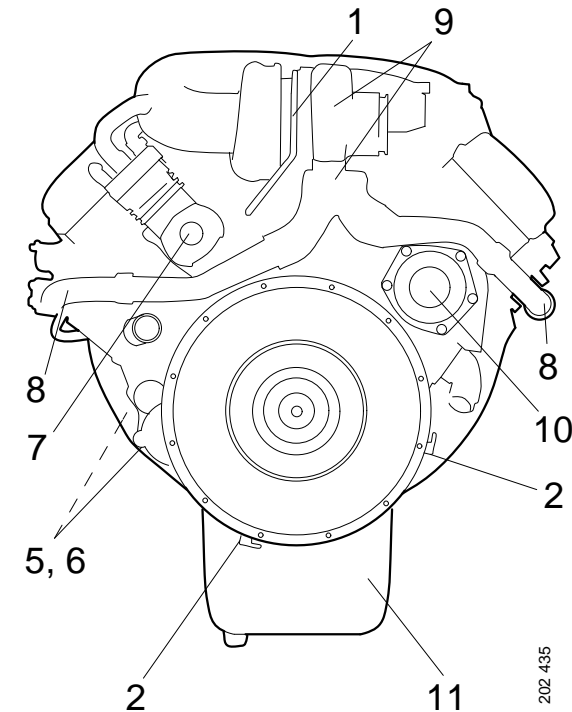

202 435