

Removing the flywheel housing



General

General

Applies to 9, 11 and 12 litre engines with cylinder block generation 1.

Tools

Examples of suitable tools from Scania:

Part number	Designation
99 318	Engine support

Work description

- 1. Detach the oil sump. Only remove the screws which are fastened in the flywheel housing. Lower the oil sump approximately 3 mm. Take 2 approximately 2 mm thick metal plates and place them between the oil sump and cylinder block where engine support 99 318 should be positioned.
- 2. Support the engine with engine support 99 318 or using tools with a corresponding function, see work description for removing the gearbox.

Then remove the parts in the order below:

- 3. Gearbox.
- 4. Clutch.
- 5. Starter motor.
- 6. Flywheel.
- 7. Hydraulic pump
- 8. Power take-off.
- 9. Flywheel housing.

