

## General

Applies to 9, 11 and 12 litre engines with PDE or HPI and cylinder block generation 1.

## Work description

1. Detach the crankcase gas inlet hose at the union (3).
2. Remove the heat shield against the exhaust pipe.
3. Cut off the cable ties and lift off the heat shield fitted on the oil mist separator.
4. Detach the outlet hose for the cleaned crankcase gases at the union (3).
5. Undo the screws securing the oil mist separator on the turbine housing.
6. Lift the oil mist separator housing and rotor assembly straight up.

