

## General



### WARNING!

- Lethal voltage. Power to the bulb must be turned off when removing. Disconnect the electrical connection from the lamp unit. Do not touch the bulb with your fingers.
- Wait for at least 3 minutes after switching off the xenon lamp before you start working. The pressure inside the bulb remains high for a while after the lamp has been switched off, and the bulb may explode if not handled with care.




### IMPORTANT!


Xenon bulbs contain small amounts of mercury. Used xenon lamps must be disposed of in compliance with local regulations.

## Work description

1. Undo the 4 screws in the headlamp insert.
2. Fold down the wiper arm and take out the headlamp.
3. Unscrew the 2 screws holding the cover inside the lamp insert.
4. Turn the insulator counterclockwise and remove it from the bulb.
5. Remove the spring holding the bulb, and remove the bulb.

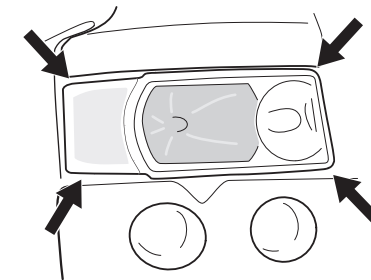

136 910

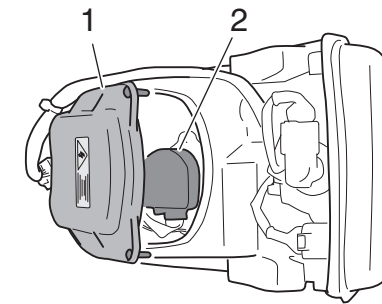

136 909

1. Cover
2. Lamp