


Fitting the ACC ON (pink) wire on 632000 and 632001

On new technology beep and park kits 1 (632000) and 2 (632001) the wiring has changed where an additional wire has been added.

This is to reduce false alarming from the parking sensor on modern vehicles fitted with canbus and where vehicles have a bulb warning feature. The original technology kits had an earth wire (black) and a power/switching wire (red) which connected to the reversing light

New technology kits have a separate wire for the power which is coloured pink and labelled 'ACC ON'.

The pink wire needs to be connected to a switch able 12V supply that is powered once the ignition key is rotated to its first position.

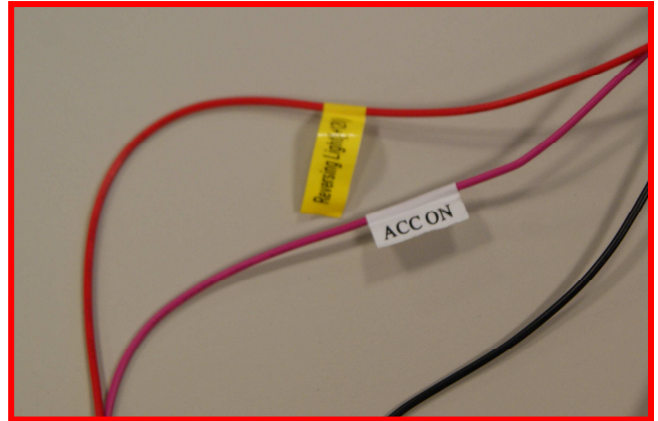

IF THE ACC ON (PINK) WIRE IS NOT CONNECTED THE REVERSING KIT WILL NOT POWER ON!