



16:04-31

Edition 1

ABS 4-kanal, Bosch

ABS, 4 circuit, Bosch

ABS, 4-Kanal, Bosch

ABS 4-kanaals, Bosch

ABS 4 canaux, Bosch


ABS de 4 canales, Bosch

ABS, 4 canais, Bosch

ABS a 4 canali, Bosch

ABS 4-kanavainen, Bosch

Czterokanałowy system ABS, Bosch

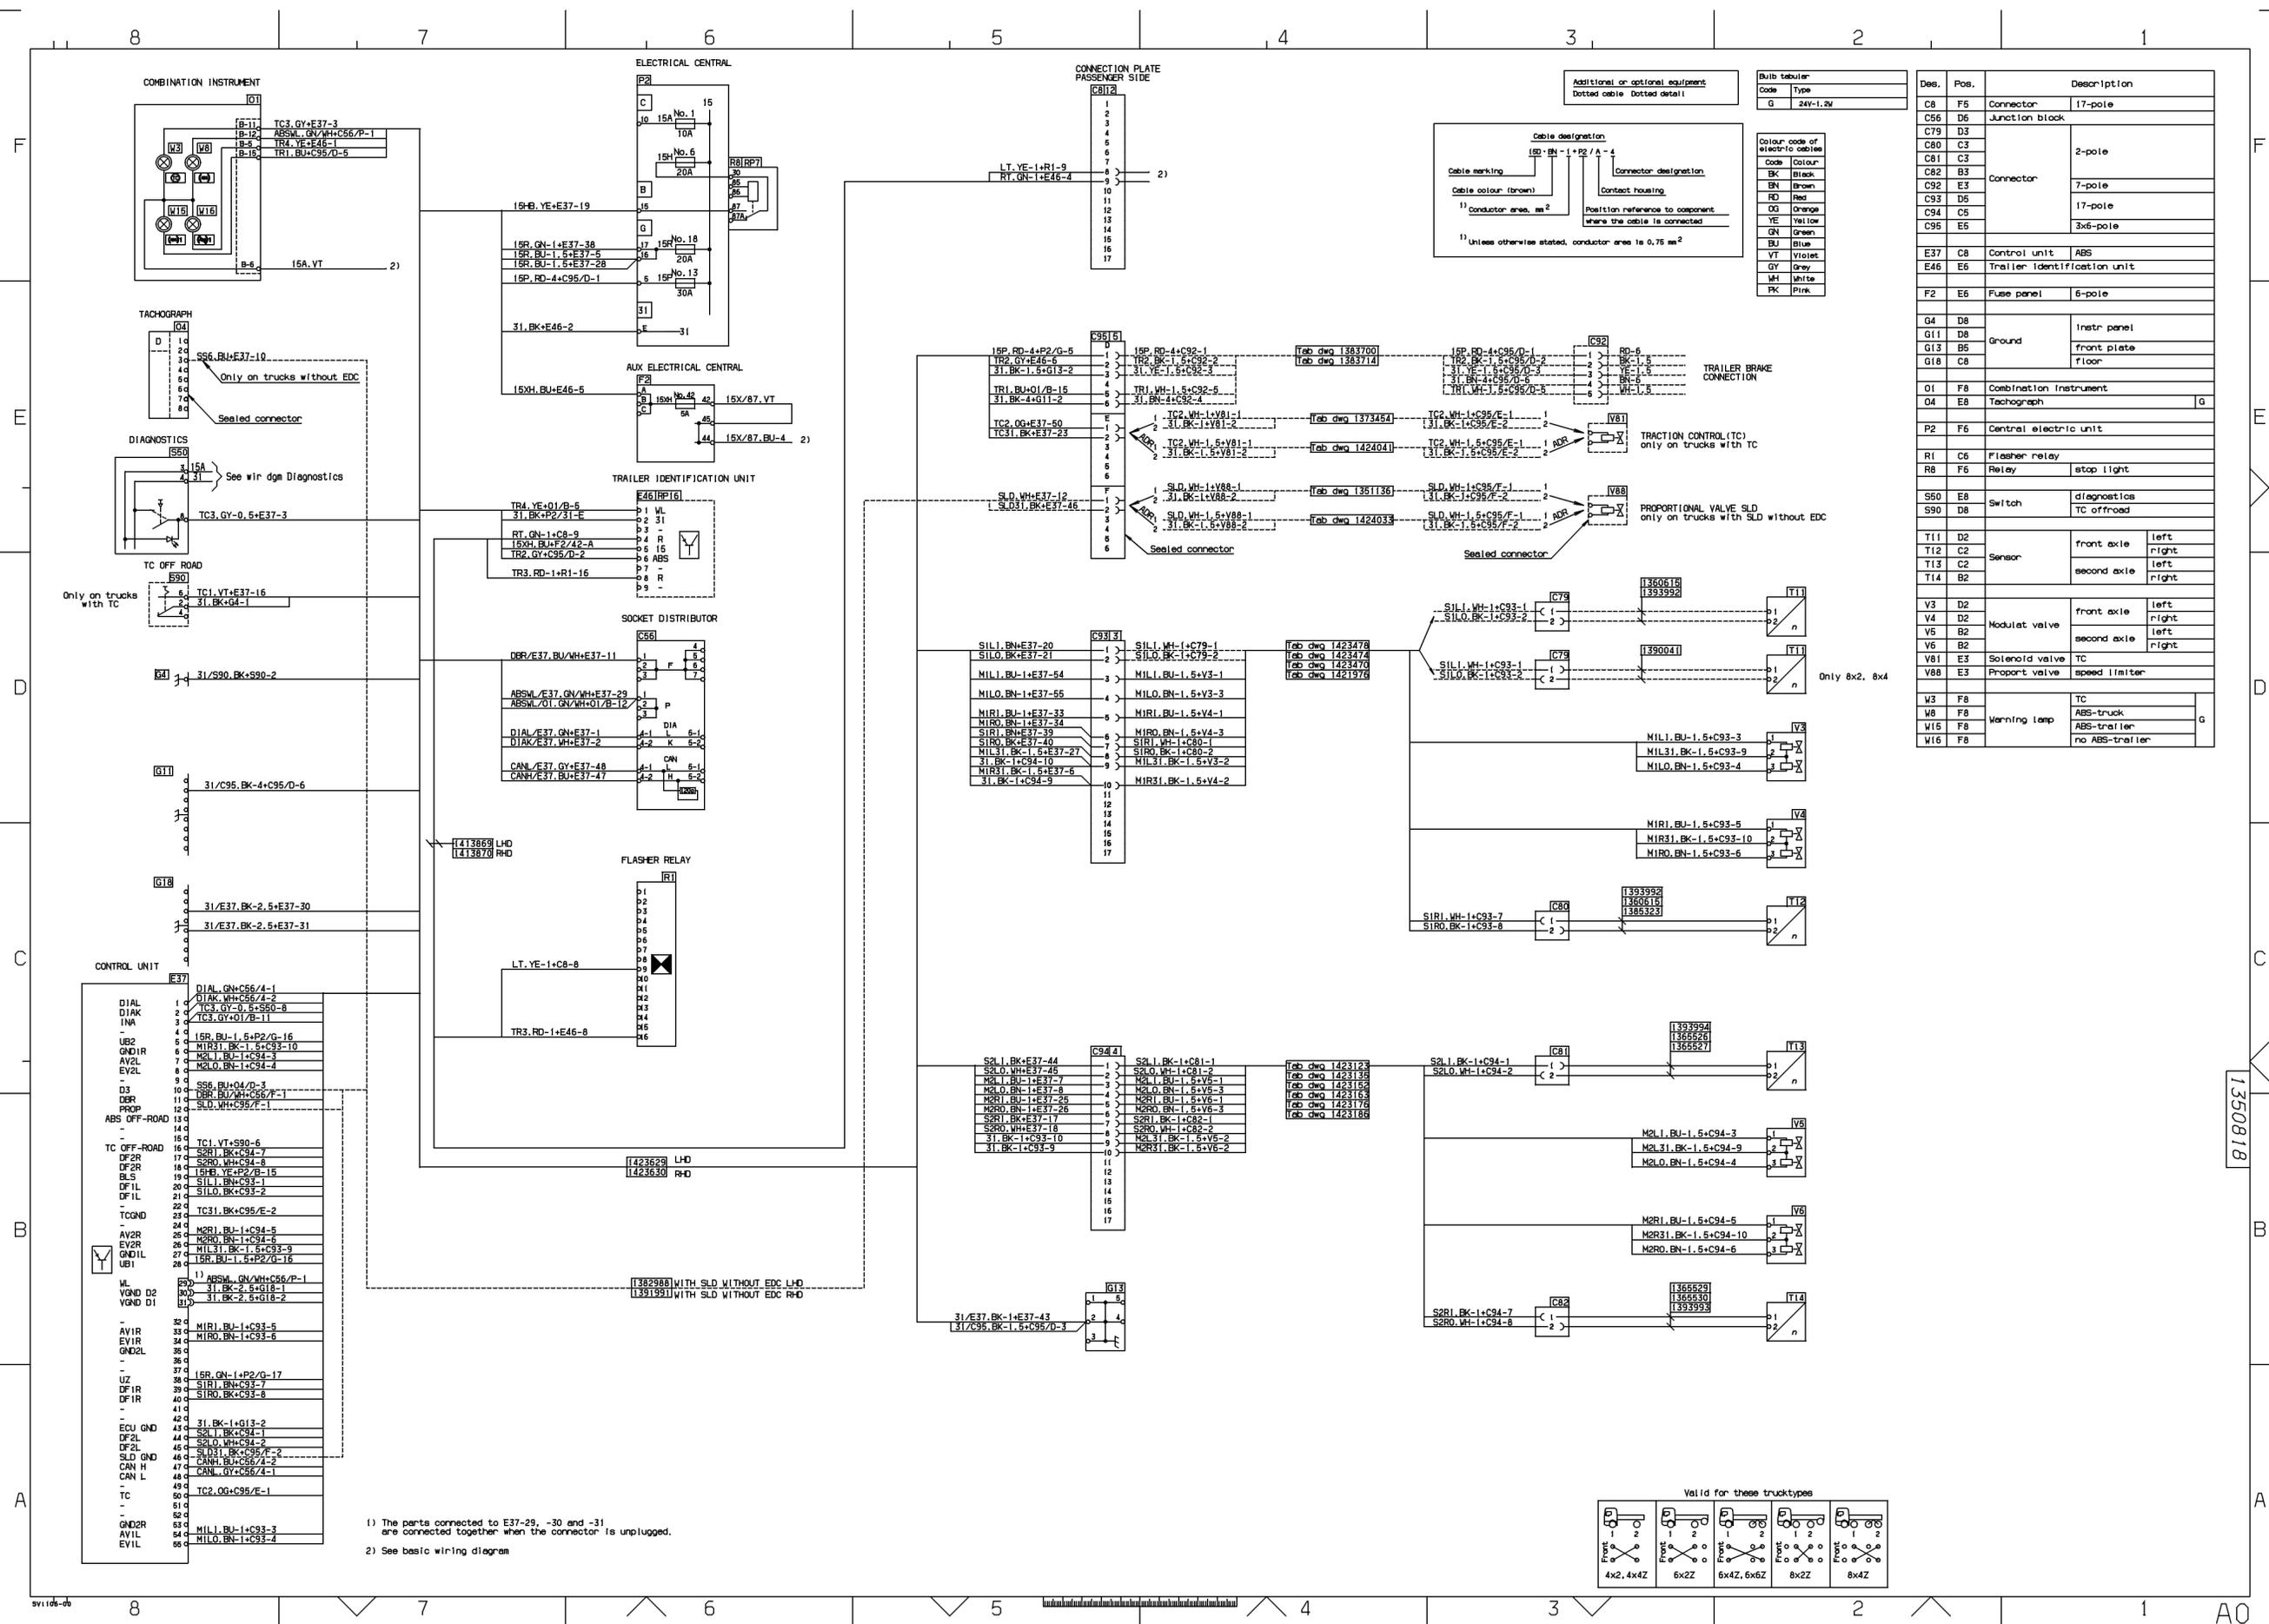

Additional or optional equipment
Dotted cable Dotted detail

Cable designation
Cable marking
Cable colour (brown)
1) Conductor area, mm²
2) Unless otherwise stated, conductor area is 0,75 mm²


Connector designation
Contact housing
Position reference to component where the cable is connected

Bulb tabular	
Code	Type
G	24V-1,2V

Colour code of electric cables	
Code	Colour
BK	Black
BN	Brown
RD	Red
OG	Orange
YE	Yellow
GN	Green
BL	Blue
VT	Violet
GY	Grey
WH	White
PK	Pink

Des.	Pos.	Description
C8	F5	Connector 17-pole
C56	D6	Junction block
C79	D3	
C80	C3	
C81	C3	2-pole
C82	B3	Connector
C92	E3	7-pole
C93	D5	
C94	C5	17-pole
C95	E5	3x6-pole
E37	C8	Control unit ABS
E46	E6	Trailer identification unit
F2	E6	Fuse panel 6-pole
G4	D8	
G11	D8	Instr panel
G13	B5	Ground
G18	C8	front plate
		Floor
O1	F8	Combination Instrument
O4	E8	Tachograph
P2	F6	Central electric unit
R1	C6	Flasher relay
R8	F6	Relay stop light
S50	E8	Switch diagnostics
S90	D8	Switch TC offroad
T11	D2	Sensor front axle left
T12	C2	Sensor front axle right
T13	C2	Sensor second axle left
T14	B2	Sensor second axle right
V3	D2	Modulat valve front axle left
V4	D2	Modulat valve front axle right
V5	B2	Modulat valve second axle left
V6	B2	Modulat valve second axle right
V81	E3	Solenoid valve TC
V83	E3	Proport valve speed limiter
W3	F8	TC
W8	F8	Warning lamp ABS-truck
W15	F8	Warning lamp ABS-trailer
W16	F8	Warning lamp no ABS-trailer

1) The parts connected to E37-29, -30 and -31 are connected together when the connector is unplugged.
2) See basic wiring diagram

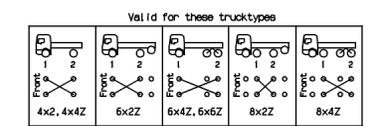

1350818