




16:52-14

Edition 1

Elcentral, front
Electrical center, front
Elektrozentrale vorn
Elektisch centrum, vóór
Centrale électrique vers l'avant
Centralilla eléctrica adelante
Central elétrica dianteira
Centralina alettrica in avanti
Sähkökeskus, etuosa
Centralka elektryczna przednia

K/L/N

From chassis No 1 839 512

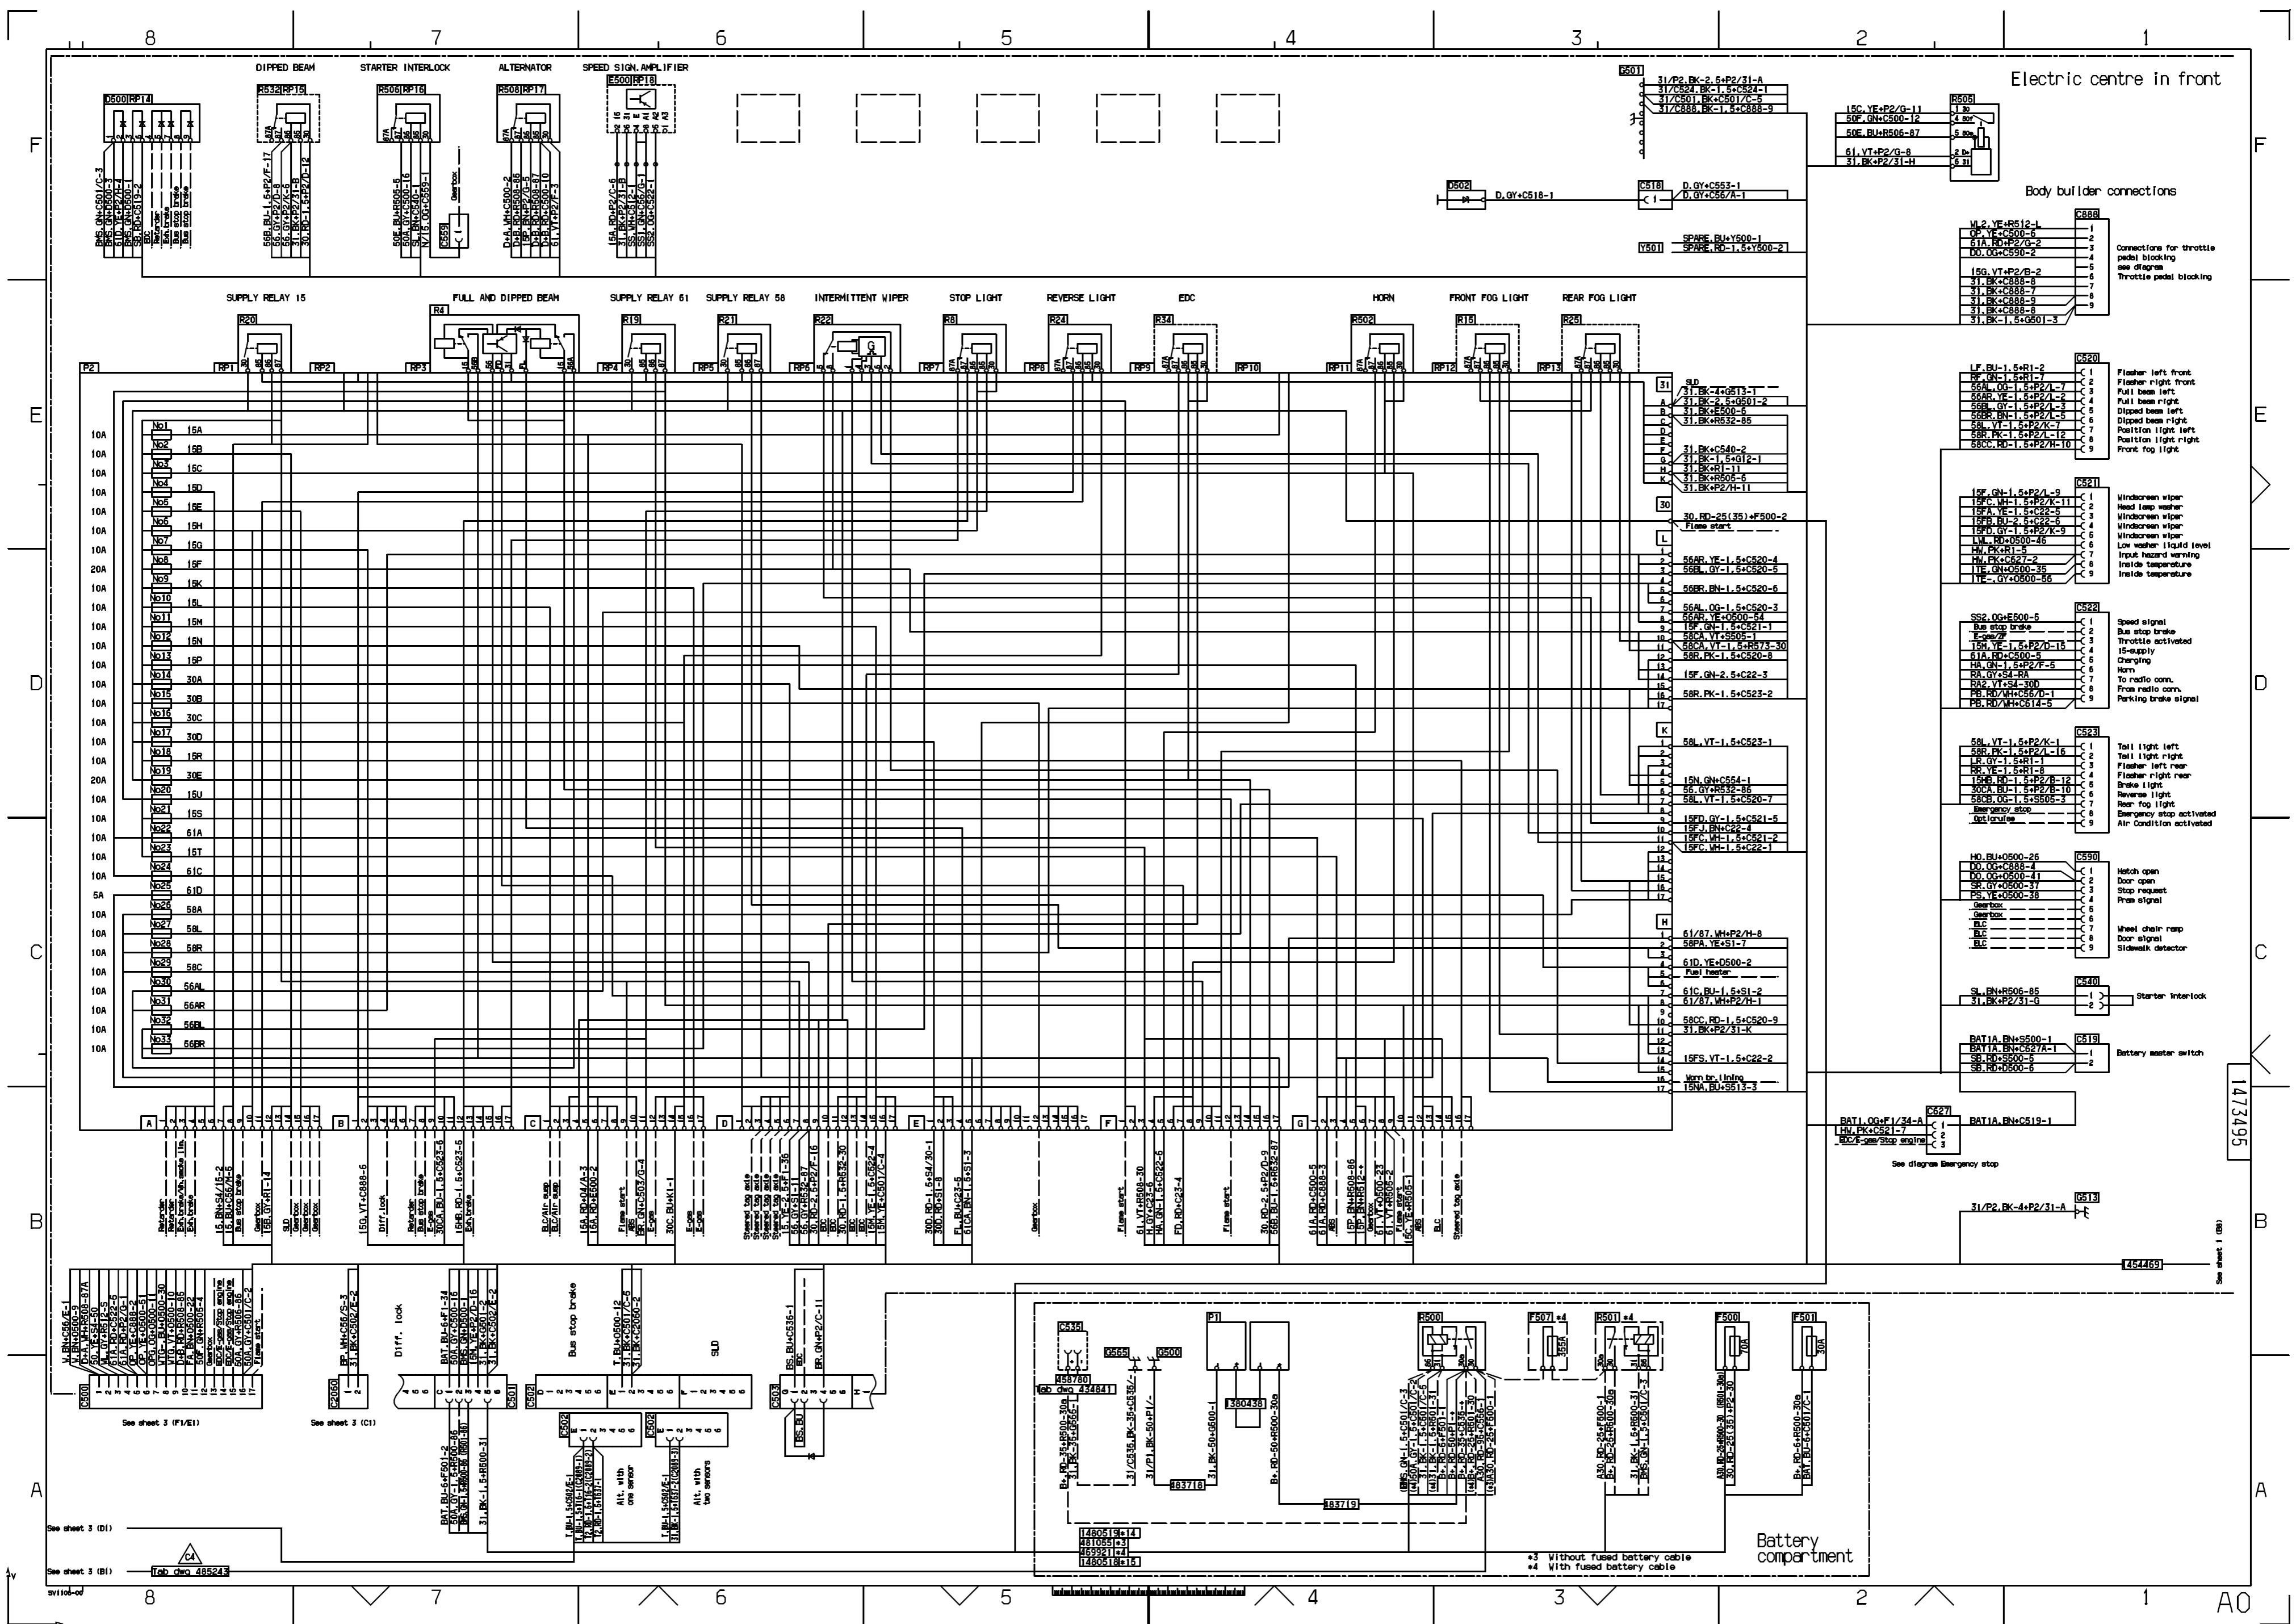

Electric centre in front

Body builder connections

- C888
 - M.2. YE+R512-1
 - OP. VE+C500-6
 - 61A. RD+P2/G-2
 - DO. OG+C590-2
 - 15G. VT+P2/B-2
 - 31. BK+C888-8
 - 31. BK+C888-7
 - 31. BK+C888-9
 - 31. BK+C888-8
 - 31. BK-1.5+G501-3
- Connections for throttle pedal blocking see diagram
Throttle pedal blocking

- C520
 - LF. BU-1.5+R1-2
 - RF. GN-C541-1
 - 55A. GN-1.5+P2/L-7
 - 55AR. YE-1.5+P2/L-2
 - 55B. GN-1.5+P2/L-3
 - 55C. GN-1.5+P2/L-5
 - 55D. VT-1.5+P2/K-7
 - 55E. PK-1.5+P2/L-12
 - 55C. RD-1.5+P2/H-10
- Flasher left front
Flasher right front
Pull beam left
Pull beam right
Dipped beam left
Dipped beam right
Position light left
Position light right
Front fog light

- C521
 - 15F. GN-1.5+P2/L-9
 - 15F. GN-1.5+P2/K-11
 - 15F. GN-1.5+P2/S-5
 - 15F. RD-2.5+C522-6
 - 15F. RD-1.5+P2/K-9
 - 15F. RD-1.5+P2/L-12
 - 15F. GN-1.5+P2/F-5
 - 15F. GN-1.5+P2/H-10
 - 15F. GN-1.5+P2/S-5
 - 15F. GN-1.5+P2/S-5
- Windscreen wiper
Head lamp washer
Windscreen wiper
Windscreen wiper
Windscreen wiper
Low washer liquid level
Input hazard warning
Innate temperature
Innate temperature

- C522
- SS2. OG+E500-5
- Bus stop brake
- Throttle activated
- 15-apply
- Changing
- Horn
- To radio conn.
- From radio conn.
- Parking brake signal

- C523
 - 58L. VT-1.5+P2/K-1
 - 58B. PK-1.5+P2/L-16
 - LR. GN-1.5+R1-1
 - RR. YE-1.5+R1-8
 - 15BR. RD-1.5+P2/B-12
 - 30A. BU-1.5+P2/B-10
 - 58C. GN-1.5+P2/S-3
 - Emergency stop
 - Opticurve
- Tail light left
Tail light right
Flasher left rear
Flasher right rear
Brake light
Reverse light
Rear fog light
Emergency stop activated
Air Condition activated

- C590
 - HO. BU+R500-26
 - DO. OG+C888-4
 - DO. OG+C500-41
 - SR. GN+C500-37
 - PS. BK+C500-38
 - Overbox
 - Overbox
 - W.C.
 - W.C.
 - W.C.
- Hatch open
Door open
Stop request
Press signal
Overbox
Overbox
Wheel chair ramp
Door signal
Sidekick detector

- C540
 - SL. BN+R500-85
 - 31. BK+P2/31-G
- Starter interlock


- C519
 - BAT1A. BN+S500-1
 - BAT1A. BN+C527A-1
 - 30. RD+S500-5
 - 30. RD+S500-6
- Battery master switch

- C527
 - BAT1. OG+P/34-A
 - 15V. PK+C521-7
 - 15V. PK+C521-7
- See diagram Emergency stop

- C513
- 31/P2. BK-4+P2/31-A

454469

1473495
See sheet 1 (B)

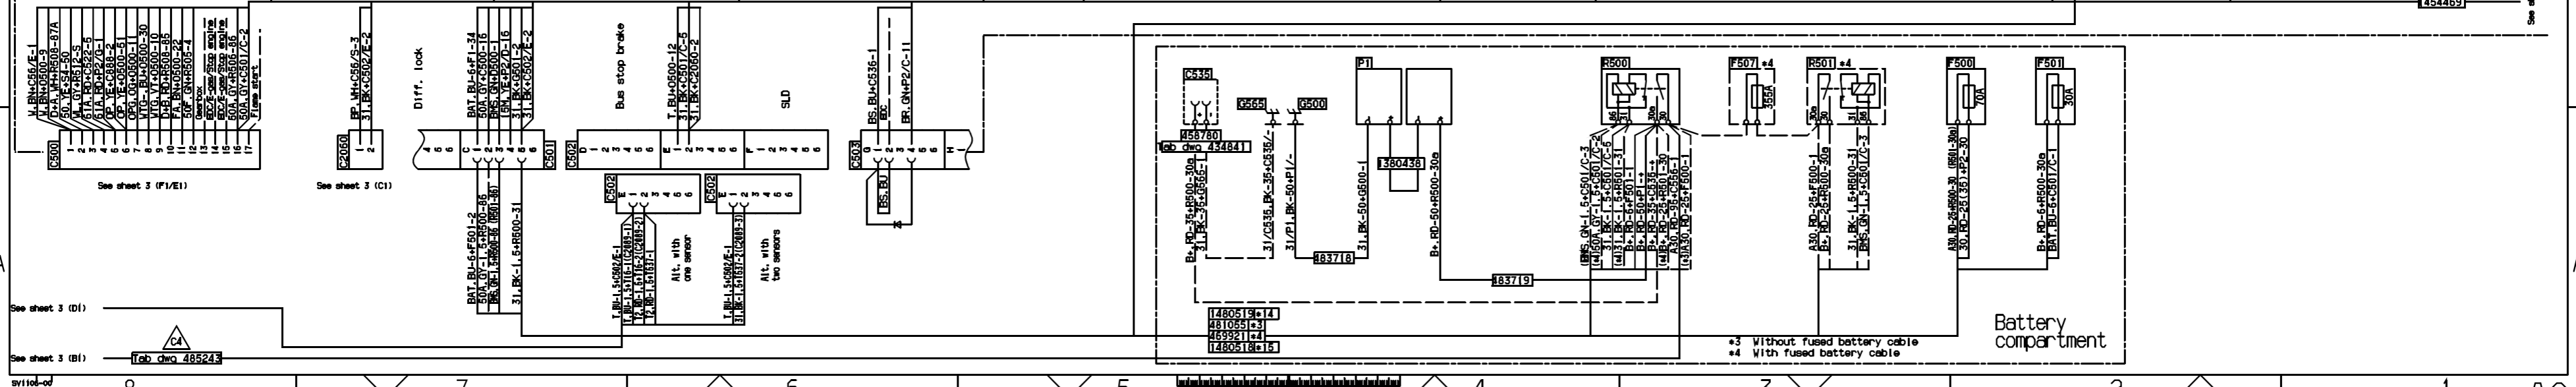

Battery compartment