

TSI

Number
030-500

Vehicle Management System Vectro II From 1998



PV776-TSP144528

VOLVO

Foreword

The descriptions and service procedures contained in this manual are based on designs and methods studies carried out up to June 2001.

The products are under continuous development. Vehicles and components produced after the above date may therefore have different specifications and repair methods. When this is believed to have a significant bearing on this manual, supplementary service bulletins will be issued to cover the changes.

The new edition of this manual will update the changes.

In service procedures where the title incorporates an operation number, this is a reference to an S.R.T. (Standard Repair Time).

Service procedures which do not include an operation number in the title are for general information and no reference is made to an S.R.T.

The following levels of observations, cautions and warnings are used in this Service Documentation:

Note: Indicates a procedure, practice, or condition that must be followed in order to have the vehicle or component function in the manner intended.

Caution: Indicates an unsafe practice where damage to the product could occur.

Warning: Indicates an unsafe practice where personal injury or severe damage to the product could occur.

Danger: Indicates an unsafe practice where serious personal injury or death could occur.

Volvo Trucks North America, Inc.
Greensboro, NC USA

Order number: PV776-144528

© 2001 Volvo Trucks North America, Inc., Greensboro, NC USA

All rights reserved. No part of this publication may be reproduced, stored in retrieval system, or transmitted in any forms by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written permission of Volvo Trucks North America, Inc.

Contents

General	7
Vehicle Management System	7
Engine Control System Glossary	8
Specifications	10
Description of Signals	10
EECU (D7C) and Breakout Box Connected in Series Between EECU and Wiring Harness	10
EECU, D7C, with Breakout Box Connected to Wiring Harness Only	13
EECU (D12B and D12C), Breakout Box Connected in Series Be- tween EECU and Wiring Harness	16
EECU (D12B and D12C), Breakout Box Connected to Wiring Harness Only	19
Pinouts	22
Engine Electronic Control Unit (EECU)	22
Pinouts	26
Vehicle Electronic Control Unit(VECU)	26
Schematic	28
D12B	28
Schematic	29
D12C	29
Schematic	30
D7C	30
Schematic	31
VECU	31
Tools	33
Special Tools	33
Other Special Equipment	35
Design and Function	37
Vehicle Management System	37
Strategy	37
Conventional Control Systems	37
Data Link System	38
Data Links, Design and Function	39
Diagnostic Connector	47
Communication Equipment	48
Instrument Cluster	49
Vehicle Electronic Control Unit (VECU)	50
Engine Electronic Control Unit	51
ABS Brake System ECU	63
SRS Airbag ECU	64
Transmission ECU	65
Breakout Boxes and Harnesses	66
VECU Overview	67
VECU Functions	68
Sensor Locations	73
Control Unit Locations	77
Fuses and Relays	81
Troubleshooting	85
Fault Code Troubleshooting	85
Message and Parameter Descriptions	85
FMI Table	87
Reading/Clearing Fault Codes	88

Fault Tracing Strategy	88
MID 128 EECU	92
MID 128 Fault Code Table	92
MID 128 PID 45 Preheater Status	96
Fault Codes	96
MID 128 PID 45 Preheater Status, Check	97
MID 128 PID 49 ABS Control Status	98
Fault Codes	98
MID 128 PID 49 ABS Control Status, Check	99
MID 128 PID 84 Road Speed	100
Fault Codes	100
MID 128 PID 84 Road Speed, Check	101
MID 128 PID 85 Cruise Control Status	102
Fault Codes	102
MID 128 PID 85 Cruise Control Status, Check	103
MID 128 PID 91 Accelerator Pedal Position	104
Fault Codes	104
MID 128 PID 91 Accelerator Pedal Position, Check	105
MID 128 PID 94 Fuel Delivery Pressure	106
D7C and D12C	106
Fault Codes	106
MID 128 PID 94 Fuel Delivery Pressure, Check	107
D7C and D12C	107
MID 128 PID 100 Engine Oil Pressure	110
Fault Codes	110
MID 128 PID 100 Engine Oil Pressure, Check	111
MID 128 PID 102 Boost Pressure	114
Fault Codes	114
MID 128 PID 102 Boost Pressure, Check	115
MID 128 PID 105 Boost Air Temperature	118
Fault Codes	118
MID 128 PID 105 Boost Air Temperature, Check	119
MID 128 PID 107 Air Filter Differential Pressure	122
Fault Codes	122
MID 128 PID 107 Air Filter Differential Pressure, Check	124
MID 128 PID 108 Atmospheric Pressure	125
Fault Codes	125
MID 128 PID 110 Engine Coolant Temperature	126
Fault Codes	126
MID 128 PID 110 Engine Coolant Temperature, Check	127
MID 128 PID 111 Coolant Level	129
Fault Codes	129
MID 128 PID 111 Coolant Level, Check	130
MID 128 PID 158 Battery Voltage	131
Fault Codes	131
MID 128 PID 158 Battery Voltage, Check	132
MID 128 PID 172 Air Inlet Temperature	133
Fault Codes	133
MID 128 PID 172 Air Inlet Temperature, Check	134
MID 128 PID 174 Fuel Temperature	136
D7C and D12C	136
Fault Codes	136
MID 128 PID 174 Fuel Temperature, Check	137
D7C and D12C	137
MID 128 PID 175 Engine Oil Temperature	140

Fault Codes	140
MID 128 PID 175 Engine Oil Temperature, Check	141
MID 128 PID 228 Road Speed Sensor Calibration	144
Fault Codes	144
MID 128 PID 228 Road Speed Sensor Calibration, Check	145
MID 128 PPID 86 Engine Brake Torque Percent	146
Fault Codes	146
MID 128 PPID 86 Engine Brake Torque Percent, Check	147
MID 128 PPID 119 High Coolant Temperature	148
Fault Codes	148
MID 128 PPID 119 High Coolant Temperature, Check	149
MID 128 PPID 122 VCB Engine Compression Brake	151
D12B and D12C	151
Fault Codes	151
MID 128 PPID 122 VCB Engine Compression Brake, Check	152
D12B and D12C	152
MID 128 PPID 123 EPG 2	153
D12B and D12C	153
Fault Codes	153
MID 128 PPID 123 EPG 2, Check	154
D12B and D12C	154
MID 128 PPID 124 EPG 1	155
Fault Codes	155
MID 128 PPID 124 EPG 1, Check	156
MID 128 SID 1/2/3/4/5/6 Injector	157
D12B and D12C	157
Fault Codes	157
MID 128 SID 1/2/3/4/5/6 Injector, Check	159
D12B and D12C	159
MID 128 SID 17 Fuel Shutoff Valve	161
Fault Codes	161
MID 128 SID 17 Fuel Shutoff Valve, Check	162
D7C only	162
MID 128 SID 20 Timing Sleeve	163
D7C only	163
Fault Codes	163
MID 128 SID 20 Timing Sleeve, Check	165
D7C only	165
MID 128 SID 21 Engine Position Timing Sensor	166
D12B and D12C	166
Fault Codes	166
MID 128 SID 21 Engine Position Timing Sensor, Check	167
D12B and D12C	167
MID 128 SID 21 Needle Lift Sensor	168
Fault Codes	168
MID 128 SID 21 Needle Lift Sensor, Check	169
D7C only	169
MID 128 SID 22 Engine Speed Sensor	170
Fault Codes	170
MID 128 SID 22 Engine Speed Sensor, Check	171
MID 128 SID 23 Rack Actuator	172
D7C only	172
Fault Codes	172
MID 128 SID 23 Rack Actuator, Check	174
D7C only	174

MID 128 SID 24 Rack Position Sensor	175
D7C only	175
Fault Codes	175
MID 128 SID 24 Rack Position Sensor, Check	176
D7C only	176
MID 128 SID 33 Fan Control	177
Fault Codes	177
MID 128 SID 33 Fan Control, Check	178
MID 128 SID 64 Redundant Engine Speed Sensor	179
D7C only	179
Fault Codes	179
MID 128 SID 64 Redundant Engine Speed Sensor, Check	180
D7C only	180
MID 128 SID 70 Preheater Element 1	181
Fault Codes	181
MID 128 SID 70 Preheater Element 1, Check	182
MID 128 SID 71 Preheater Element 2	183
D12B only	183
Fault Codes	183
MID 128 SID 71 Preheater Element 2, Check	184
D12B	184
MID 128 SID 230 Idle Validation Switch 1	185
Fault Codes	185
MID 128 SID 230 Idle Validation Switch 1, Check	186
MID 128 SID 231 SAE J1939 Control Link	187
Fault Codes	187
MID 128 SID 232 5 Volt DC Supply	189
Fault Codes	189
MID 128 SID 232 5 Volt DC Supply, Check	190
MID 128 SID 240 Program Memory	191
Fault Codes	191
MID 128 SID 250 SAE J1587/1708 Information Link	192
Fault Codes	192
MID 128 SID 253 Data Set Memory EEPROM	193
Fault Codes	193
MID 128 SID 254 Engine Electronic Control Unit (EECU)	194
Fault Codes	194
MID 144 VECU	196
MID 144 Fault Code Table	196
MID 144 PID 29 Second Accelerator Pedal Position Sensor	198
Fault Codes	198
MID 144 PID 29 Second Accelerator Pedal Position Sensor, Check	199
MID 144 PID 84 Road Speed	201
Fault Codes	201
MID 144 PID 84 Road Speed, Check	202
MID 144 PID 91 Accelerator Pedal Position	204
Fault Codes	204
MID 144 PID 91 Accelerator Pedal Position, Check	205
MID 144 PID 152 VECU, Number of Resets	207
Fault Codes	207
MID 144 PPID 69 Idle Validation Switch	208
Fault Codes	208
MID 144 PPID 69 Idle Validation Switch, Check	209
MID 144 PPID 70 Pedal Switches, Supply	211
Fault Codes	211


MID 144 PPID 70 Pedal Switches, Supply, Check	212
MID 144 PPID 71 Cruise Control and Engine Brake, Supply Switch	215
Fault Codes	215
MID 144 PPID 71 Cruise Control and Engine Brake, Supply Switch, Check	216
MID 144 PPID 72 Accelerator Pedal, Supply Sensors	220
Fault Codess	220
MID 144 PPID 72 Accelerator Pedal, Supply Sensors, Check	221
MID 144 PPID 73 Second Accelerator Pedal, Supply Sensors	223
Fault Codes	223
MID 144 PPID 73 Second Accelerator Pedal, Supply Sensors, Check	224
MID 144 PPID 75 Range Inhibitor, Solenoid Valve Status	226
Fault Codes	226
MID 144 PPID 75 Range Inhibitor, Solenoid Valve Status, Check ...	227
MID 144 SID 230 Idle Validation Switch 1	229
Fault Codes	229
MID 144 SID 230 Idle Validation Switch 1, Check	230
MID 144 SID 231 SAE J1939 Control Link	232
Fault Codes	232
MID 144 SID 231 SAE J1939 Control Link, Check	233
MID 144 SID 240 Program Memory	234
Fault Codes	234
MID 144 SID 243 Cruise Control Set Switch	235
Fault Codes	235
MID 144 SID 243 Cruise Control Set Switch, Check	236
MID 144 SID 250 SAE J1587/1708 Information Link	238
Fault Codes	238
MID 144 SID 250 SAE J1587/1708 Information Link, Check	239
MID 144 SID 253 Data Set Memory EEPROM	240
Fault Codes	240
MID 144 PSID 3 Idle Validation Switch 3	241
Fault Codes	241
MID 144 PSID 3 Idle Validation Switch 3, Check	242
Service Procedures	245
Engine ECU, Replacement	245

Feedback

Operation Numbers

General

Vehicle Management System

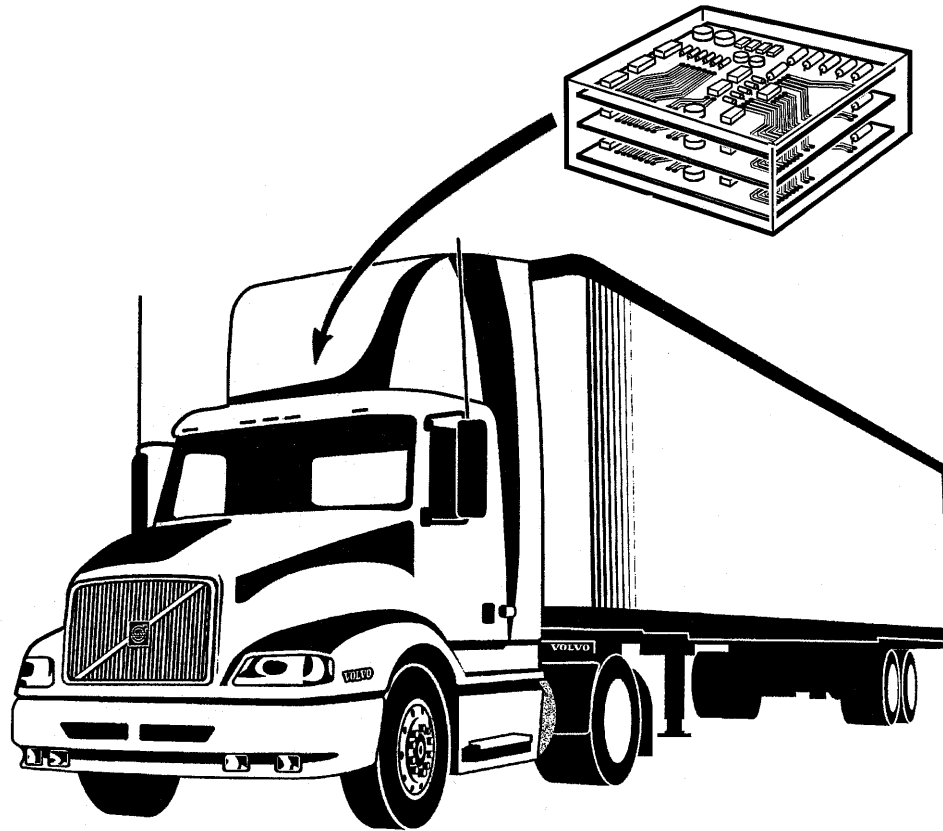

W2002520

This information covers the Vehicle Management System, which includes VECTRO II electronics, the vehicle ECU, and other control systems used in the vehicle.

Engine Control System Glossary

ATA

American Trucking Association

ATDC (After Top Dead Center)

The 180° of crankshaft rotation after the piston reaches top center (normal direction of rotation).

AC (Alternating Current)

An electrical current that alternates level and direction.

BTDC (Before Top Dead Center)

The 180° of crankshaft rotation before the piston reaches top center (normal direction of rotation).

INFO lamp

Light that warns the operator of an active diagnostic fault code; also referred to as the diagnostic lamp.

Data link

An electrical connection for communication with other microprocessor-based devices (such as powertrain control, trip recorders and maintenance systems) that are compatible with the ATA and SAE standard.

Diagnostic fault code

These codes indicate an electronic system malfunction, indicating a problem with the D12 electrical systems.

Diagnostic flash code

Codes flashed out in a series via the INFO lamp to indicate an active fault code.

DC (Direct Current)

An electrical current that flows in one direction only.

EEPROM (Electrical Erasable Programmable Read Only Memory)

The contents of this type of memory may be electronically erased and new information programmed into the device.

EECU (Engine Electronic Control Unit)

The computer that controls the power supplied to the engine electronics, monitors and governs engine functions.

EUI (Electronic Unit Injector)

An injector pump which is mechanically activated and electronically controlled. It combines metering and injecting in a single unit.

Engine brake disable system

During the time ABS (anti-lock braking system) is active, the engine brake is disabled.

FMI (Failure Mode Identifier)

Numbers and names used to identify how a system or part failed.

FMI	Description
0	Data valid but above normal operating range
1	Data valid but below normal operating range
2	Data erratic, intermittent, or incorrect
3	Voltage above normal
4	Voltage below normal
5	Current below normal or open circuit
6	Current above normal or short circuit
7	Mechanical system not responding properly
8	Abnormal frequency, pulse rate or period
9	Abnormal update
10	Abnormal rate of change
11	Failure mode not identifiable
12	Defective device or component
13	Uncalibrated device or component
14/15	Reserved for future assignment

Hz (Hertz)

Measure of frequency in cycles per second.

MID

Message Identification Description

Open circuit

Condition where an electrical wire or connector is broken, preventing signal or supply voltage from reaching its intended destination.

Parameter

A programmable value that affects the characteristics or behavior of the engine and/or vehicle.

PID

Parameter Identification code.

PTO (Power Takeoff)

Operated with the cruise control switches, this mode permits setting a constant engine rpm when the vehicle is not moving.

PWM (Pulse Width Modulation)

A signal consisting of variable-width pulses at fixed intervals to vary; "TIME ON" versus "TIME OFF."

RAM (Random Access Memory)

A memory that has stored information immediately available when addressed.

Reference voltage

A regulated voltage supplied by the EECU to a sensor, which uses it to generate a signal voltage.

Password

A group of seven alphanumeric characters designed to restrict access to level-2 parameters. The password is automatically defaulted to seven empty spaces if customer has not specified password.

SAE

Society of Automotive Engineers.

Short circuit

A connection of comparatively low resistance, accidentally or intentionally made between two points on a circuit.

SID

Subsystem Identification code.

Signal

A voltage value used to transmit information typically from a sensor to the EECU.

Supply voltage

A constant voltage that supplies electrical power to a component. It may be generated by the EECU or supplied by the vehicle battery.

Throttle Position Sensor (TPS)

An electronic sensor that is connected to the accelerator pedal and sends a Pulse Width Modulated signal to the EECU.

Vehicle Specification Programming (VSP)

VSP consists of two levels of programming: engine configuration (level 1) and customer parameters (level 2).

Vehicle Speed Sensor (VSS)

An electromagnetic device that measures vehicle speed from the rotation of gear teeth in the drivetrain of the vehicle.

VEB (Volvo Engine Brake)

Consists of a compression brake (VCB) and an exhaust pressure governor (EPG).

Specifications

Description of Signals

EECU (D7C) and Breakout Box Connected in Series Between EECU and Wiring Harness

For the measurements below, the following applies:

- Breakout box J-41132 connected between connector EA or EB and the EECU.
- Jumper harness J-43233 connected between connector EA or EB and the EECU.
- The EECU connected.
- Ignition key in ON position.
- Engine not running.
- Measuring voltage.

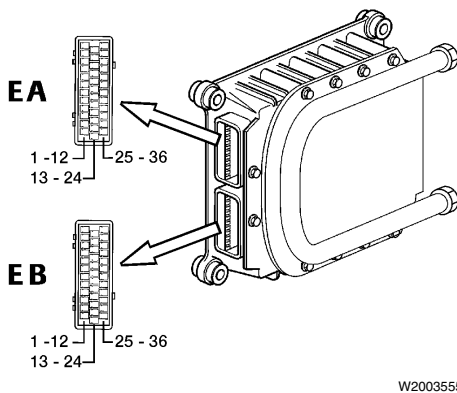


Fig. 1: EECU with pinouts

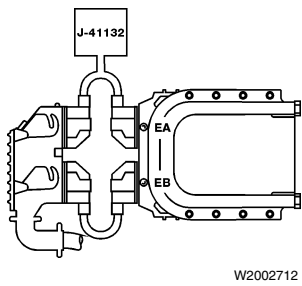


Fig. 2: EECU voltage check, EA

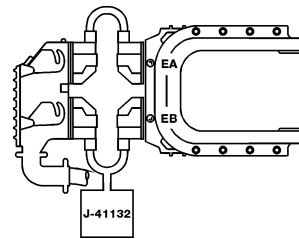


Fig. 3: EECU voltage check, EB

B+ = battery voltage

Con- nection	Signal type	Measuring points	Ignition key in the ON position	Other
EA1	Oil temperature sensor, signal	EA1 - EA5	3.0 V (+20 °C/68 °F) 0.4 V (+100 °C/212 °F)	
EA2	Intake manifold temperature sensor, signal	EA2 - EA5	2.6 V (+20 °C/68 °F) 1.6 V (+40 °C/104 °F)	
EA3	Intake manifold pressure sensor, signal	EA3 - EA5	1.1 V (sea level)	
EA4	Supply to sensors (5 V), +	EA4 - EA5	4.8 - 5.15 V	
EA5	Signal ground to sensors, -			
EA6	Not currently used			
EA7	Redundant engine speed sensor, +			
EA8	Rack drive PWM, +			
EA9	Timing sleeve PWM, +			

Con- nection	Signal type	Measuring points	Ignition key in the ON position	Other
EA10	Rack drive PWM, -			
EA11	Not currently used			
EA12	Not currently used			
EA13	Fuel temperature sensor, signal	EA13 - EA5	3.0 V (+20 °C/68 °F) 2.0 V (+40 °C/104 °F)	
EA14	Oil pressure sensor, signal	EA14 - EA5	0.5 V (for cold engines)	
EA15	Needle lift sensor, +			
EA16	Rack position sensor, search coil			
EA17	Rack position sensor, common			
EA18	Redundant engine speed sensor, -			
EA19	Not currently used			
EA20	Not currently used			
EA21	Timing sleeve PWM, -			
EA22	Not currently used			
EA23	Not currently used			
EA24	Not currently used			
EA25	Coolant temperature sensor, signal	EA25 - EA5	3.0 V (+20 °C/68 °F) 0.6 V (+85 °C/185 °F)	
EA26	Not currently used			
EA27	Fuel pressure sensor, signal	EA27-EA5	≈ 0.5V (for cold engines)	D12 C
EA28	Needle lift sensor, -			
EA29	Rack position sensor, reference coil			
EA30	Engine speed sensor (crank), +			
EA31	Engine speed sensor (crank), -			
EA32	Not currently used			
EA33	Not currently used			
EA34	Not currently used			
EA35	Not currently used			
EA36	Not currently used			
EB1	SAE J1939 A Communications link	EB1/EB9	≈2-5V	
EB2	SAE J1939 B Communications link	EB2/EB9	≈0-3V	
EB3	Ambient air temperature sensor, signal	EB3 - EB13	2.6 V (+20 °C/68 °F) 1.2 V (+50 °C/122 °F)	
EB4	Buffered idle validation switch	EB4 - EB9	< 4 V (idle) > 8 V (off idle)	
EB5	Pre-heat sense 1	EB5 - EB9	55 % of B+ (open) 0 V (closed)	Normally closed with the ignition key in the ON position.
EB6	Not currently used			

Conne- ction	Signal type	Measuring points	Ignition key in the ON position	Other
EB7	Coolant level sensor, signal	EB7 - EB8	80% B+ (open) 0 V (closed)	Applies to WX and VN. Normally open with the ignition key in the ON position.
EB8	Signal ground to sensors, -			
EB9	EECU ground, -			
EB10	EECU ground, -			
EB11	EECU B+	EB11 - EB9	B+	
EB12	EECU B+	EB12 - EB10	B+	
EB13	Ambient air temperature sensor			
EB14	Not currently used			
EB15	Not currently used			
EB16	Not currently used			
EB17	Air filter indicator sensor signal			
EB18	Not currently used			
EB19	Not currently used			
EB20	Not currently used			
EB21	Fan control (if equipped with on/off fan)	EB21 - EB9	B+ (fan on) 0 V (fan off)	Normally ON with the ignition key in the ON position.
EB22	Not currently used			
EB23	Not currently used			
EB24	EOL Enable	EB24 - EB9	< 6 V or O/C (EOL Disable) > 9.6 V (EOL Enable)	
EB25	SAE J1587A/J1708A Information link	EB25-EB9	≈ 0-5V	
EB26	SAE J1587B/J1708B Information link	EB26-EB9	≈ 0-5V	
EB27	Not currently used			
EB28	Not currently used			
EB29	Not currently used			
EB30	Not currently used			
EB31	Pre-heating relay, Coil ground	EB31 - EB9	B+ (pre-heat off) 0 V (pre-heat on)	Normally ON with the ignition key in the ON position.
EB32	Not currently used			
EB33	Not currently used			
EB34	Fuel shut-off valve	EB34 - EB9	0 V (valve on) > 1.0V (valve off)	Normally ON with the ignition key in the ON position.
EB35	EPG 1	EB35 - EB9	B+ (EPG off) 0 V (EPG on)	Normally OFF with the ignition key in the ON position.
EB36	Not currently used			

EECU, D7C, with Breakout Box Connected to Wiring Harness Only

For the measurements below, the following applies:

- Breakout box J-41132 connected to connector EA or EB.
- The EECU is **not** connected.
- Ignition key must be in the OFF position.
- Measuring resistance.

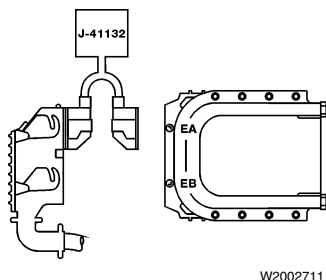


Fig. 4: EECU harness checks, EA

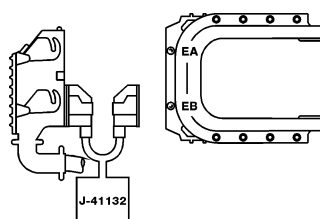


Fig. 5: EECU harness checks, EB

Conne- ction	Signal type	Measuring points	Ignition key in the OFF position	Other
EA1	Oil temperature sensor, signal	EA1 / EA5	1.9 k Ω (+20 °C/68 °F) 100 Ω (+100 °C/212 °F)	
EA2	Intake manifold temperature sensor, signal	EA2 / EA5	6.2 k Ω (+20 °C/68 °F) 2.5 k Ω (+40 °C/104 °F)	
EA3	Intake manifold pressure sensor, signal			
EA4	Sensor supply to (5 V), +			
EA5	Sensors ground, -			
EA6	Not currently used			
EA7	Redundant engine speed sensor, +	EA7 / EA18	775 - 945 Ω	
EA8	Rack drive PWM, +	EA8 / EA10 EA8 / alternate ground	1.5 Ω open circuit	
EA9	Timing sleeve PWM, +	EA9 / EA21 EA9 / alternate ground	1.5 Ω open circuit	
EA10	Rack drive PWM, -	EA10 / alternate ground	open circuit (see also EA8)	
EA11	Not currently used			
EA12	Not currently used			
EA13	Fuel temperature sensor, signal	EA13 / EA5	1.9 k Ω (+20 °C/68 °F) 800 Ω (+40 °C/104 °F)	
EA14	Oil pressure sensor, signal			
EA15	Needle lift sensor, +	EA15 / EA28	65 - 165 Ω	
EA16	Rack position sensor, search coil	EA16 / EA17	20.0 Ω	
EA17	Rack position sensor, common			
EA18	Redundant engine speed sensor, -	EA18 / EA7	775 - 945 Ω	
EA19	Not currently used			


Conne- ction	Signal type	Measuring points	Ignition key in the OFF position	Other
EA20	Not currently used			
EA21	Timing sleeve PWM, -	EA21 / alternate ground	open circuit (see also EA9)	
EA22	Not currently used			
EA23	Not currently used			
EA24	Not currently used			
EA25	Coolant temperature sensor, signal	EA25 / EA5	1.9 k Ω (+20 °C/68 °F) 160 Ω (+85 °C/185 °F)	
EA26	Not currently used			
EA27	Fuel pressure sensor			D12 C
EA28	Needle lift sensor, -			
EA29	Rack position sensor, reference coil	EA29 / EA17	20.0 Ω	
EA30	Engine speed sensor (crank), +	EA30 / EA31	775 - 945 Ω	
EA31	Engine speed sensor (crank), -	EA31 / EA30	775 - 945 Ω	
EA32	Not currently used			
EA33	Not currently used			
EA34	Not currently used			
EA35	Not currently used			
EA36	Not currently used			
EB1	SAE J1939A Communications link			
EB2	SAE J1939B Communications link			
EB3	Ambient air temperature sensor, signal	EB3 / EB13	6.2 k Ω (+20 °C/68 °F) 1.7 k Ω (+50 °C/122 °F)	
EB4	Buffered idle validation switch			
EB5	Pre-heat sense 1	EB5 / EB9	open circuit (open) < 5 Ω (closed)	
EB6	Not currently used			
EB7	Coolant level sensor, signal	EB7 / EB8	open circuit (coolant level normal) <1 Ω (coolant level low)	Applies to WX and VN
EB8	Sensor ground			
EB9	EECU ground, -			
EB10	EECU ground, -			
EB11	EECU, B+			
EB12	EECU, B+			
EB13	Ambient air temperature ground			
EB14	Not currently used			
EB15	Not currently used			
EB16	Not currently used			
EB17	Air filter indicator sensor signal			
EB18	Not currently used			
EB19	Not currently used			
EB20	Not currently used			
EB21	Not currently used			
EB22	Not currently used			
EB23	Not currently used			
EB24	EOL Enable	EB24/EB9	open circuit (open)	

Conne- ction	Signal type	Measuring points	Ignition key in the OFF position	Other
EB25	SAE J1587/J1708 A Information link	EB25 / (connection A in 6 pin diagnostics connector)	<1 Ω	
		EB25 / (connection F in 9 pin diagnostics connector)	<1 Ω	
EB26	SAE J1587/J1708 B Information link	EB26 / (connection B in the 6 pin diagnostics connector)	<1 Ω	
		EB26 / (connection G in the 9 pin diagnostics connector)	<1 Ω	
EB27	Not currently used			
EB28	Not currently used			
EB29	Not currently used			
EB30	Not currently used			
EB31	Pre-heating relay, coil ground			
EB32	Not currently used			
EB33	Not currently used			
EB34	Fuel shut-off valve, include			
EB35	EPG 1, -			
EB36	Not currently used			

EECU (D12B and D12C), Breakout Box Connected in Series Between EECU and Wiring Harness


For the measurements below, the following applies:

- Breakout box J-41132 connected between connector EA or EB and the EECU.
- Jumper harness J43233 connected between connector EA or EB and the EECU.
- The EECU connected.
- Ignition key in ON position.
- Engine not running.
- Measuring voltage.

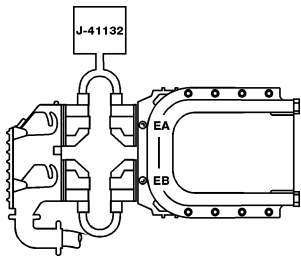

W2002712

Fig. 6: EECU voltage check, EA

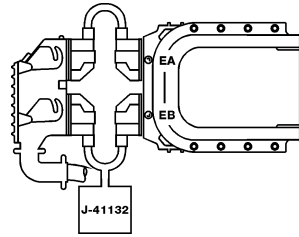

W2002710

Fig. 7: EECU voltage check, EB

B+ = battery voltage

Connection	Signal type	Measuring points	Ignition key in the ON position	Other
EA1	Oil temperature sensor, signal	EA1 / EA5	3.0 V (+20 °C/68 °F) 0.4 V (+100 °C/212 °F)	
EA2	Intake manifold temperature sensor, signal	EA2 / EA5	2.6 V (+20 °C/68 °F) 1.6 V (+40 °C/104 °F)	
EA3	Intake manifold pressure sensor, signal	EA3 / EA5	1.1 V (sea level)	
EA4	Sensor supply (5 V), +	EA4 / EA5	4.8 - 5.15 V	
EA5	Sensor ground			
EA6	Not currently used			
EA7	Engine position sensor (cam), +			
EA8	Not currently used			
EA9	Not currently used			
EA10	Not currently used			
EA11	Unit injector cylinder 1, -			
EA12	Unit injector cylinder 1, 2, 3 (90 Volt), +			
EA13	Fuel temperature sensor, signal			D12 C
EA14	Oil pressure sensor, signal	EA14 / EA5	0.5 V (for cold engines)	
EA15	Not currently used			


Conne- ction	Signal type	Measuring points	Ignition key in the ON position	Other
EA16	Not currently used			
EA17	Not currently used			
EA18	Engine position sensor (cam), -			
EA19	Not currently used			
EA20	Not currently used			
EA21	Not currently used			
EA22	Unit injector cylinder 2, -			
EA23	Unit injector cylinder 3, -			
EA24	Unit injector cylinder 4, 5, 6 (90 Volt), +			
EA25	Coolant temperature sensor, signal	EA25 / EA5	3.0 V (+20 °C/68 °F) 0.6 V (+85 °C/185 °F)	
EA26	Not currently used			
EA27	Fuel pressure sensor			D12 C
EA28	Not currently used			
EA29	Not currently used			
EA30	Engine speed sensor (crank), +			
EA31	Engine speed sensor (crank), -			
EA32	Not currently used			
EA33	VCB, -	EA33 / alternate ground	B+ (VCB off) 0 V (VCB on)	Normally OFF with the ignition key in the ON position.
EA34	Unit injector cylinder 4, -			
EA35	Unit injector cylinder 5, -			
EA36	Unit injector cylinder 6, -			
EB1	SAE J1939 Communications link, can HI	EB1/EB9	≈ 2-5V	
EB2	SAE J1939 Communications link, can LOW	EB2/EB9	≈ 0-3V	
EB3	Ambient air temperature sensor, signal	EB3 / EB13	2.6 V (+20 °C/68 °F) 1.2 V (+50 °C/122 °F)	
EB4	Buffered idle validation switch	EB4 / EB9	< 4 V (inactive) > 8 V (active)	
EB5	Pre-heat sense 1 (if equipped)	EB5 / EB9	55% of B+ (open) 0 V (closed)	Normally closed with the ignition key in the ON position.
EB6	Not currently used			
EB7	Coolant level sensor, signal	EB7 / EB8	80% B+ (open) 0 V (closed)	VN and VHD. Normally open with the ignition key in the ON position.
EB8	Sensor ground			
EB9	EECU ground, -			
EB10	EECU ground, -			

Conne- ction	Signal type	Measuring points	Ignition key in the ON position	Other
EB11	EECU B+	EB11 / EB9	B+	
EB12	EECU B+	EB12 / EB10	B+	
EB13	Ambient air temperature sensor			
EB14	Not currently used			
EB15	Not currently used			
EB16	Pre-heat sensor 2 (if equipped)	EB16 / EB9	55 % of B+ (open) 0 V (closed)	Normally closed with the ignition key in the ON position.
EB17	Air filter indicator sensor signal			
EB18	Not currently used			
EB19	Not currently used			
EB20	Not currently used			
EB21	Engine fan control (if equipped with on/off fan), -	EB21 / EB9	B+ (fan on/solenoid inactive) 0 V (fan off/solenoid active)	Normally ON with the ignition key in the ON position.
EB22	Not currently used			
EB23	Not currently used			
EB24	EOL Enable	EB24 / EB9	< 6 V or O/C (EOL disable) > 9.6 V (EOL Enable)	
EB25	SAE J1587/J1708 + Information link			
EB26	SAE J1587/J1708 - Information link	EB25/EB9	≈ 0-5V	
EB27	Not currently used	EB26/EB9	≈ 0-5V	
EB28	Not currently used			
EB29	Not currently used			
EB30	Not currently used			
EB31	Pre-heating relay coil ground (if equipped)	EB31 / EB9	B+ (pre-heat off) 0 V (pre-heat on)	Normally OFF with the ignition key in the ON position.
EB32	Not currently used			
EB33	Not currently used			
EB34	Not currently used			
EB35	EPG 1	EB35 / EB9	B+ (EPG off) 0 V (EPG on)	Normally OFF with the ignition key in the ON position.
EB36	EPG 2	EB36 / EB9	B+ (EPG off) 0 V (EPG on)	Normally OFF with the ignition key in the ON position.

EECU (D12B and D12C), Breakout Box Connected to Wiring Harness Only


For the measurements below, the following applies:

- Breakout box J-41132 connected to connector EA or EB.
- The EECU **not** connected.
- Ignition key must be in the OFF position.
- Measuring resistance.

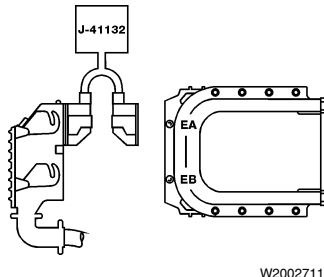

W2002711

Fig. 8: EECU harness checks, EA

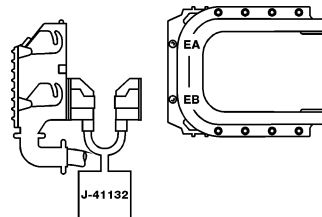

W2002713

Fig. 9: EECU harness checks, EB

Connection	Signal type	Measuring points	Ignition key in the OFF position	Other
EA1	Oil temperature sensor, signal	EA1 / EA5	1.9 k Ω (+20 °C/68 °F) 100 Ω (+100 °C/212 °F)	
EA2	Intake manifold temperature sensor, signal	EA2 / EA5	6.2 k Ω (+20 °C/68 °F) 2.5 k Ω (+40 °C/104 °F)	
EA3	Intake manifold pressure sensor, signal			
EA4	Sensor supply (5 V), +			
EA5	Sensor ground			
EA6	Not currently used			
EA7	Engine position sensor (cam), +	EA7 / EA18	775 - 945 Ω	
EA8	Not currently used			
EA9	Not currently used			
EA10	Not currently used			
EA11	Unit injector cylinder 1, -	EA11 / EA12	1.5 - 2.0 Ω	
EA12	Unit injector cylinder 1, 2, 3 (90 Volt), +		see EA11, EA22 and EA23	
EA13	Fuel temperature sensor, signal			D12 C
EA14	Oil pressure sensor, signal			
EA15	Not currently used			
EA16	Not currently used			
EA17	Not currently used			
EA18	Engine position sensor (cam), -		see EA7	
EA19	Not currently used			
EA20	Not currently used			


Conne- ction	Signal type	Measuring points	Ignition key in the OFF position	Other
EA21	Not currently used			
EA22	Unit injector cylinder 2, -	EA22 / EA12	1.5 - 2.0 Ω	
EA23	Unit injector cylinder 3, -	EA23 / EA12	1.5 - 2.0 Ω	
EA24	Unit injector cylinder 4, 5, 6 (90 Volt), +		see EA34, EA35, and EA36	
EA25	Coolant temperature sensor, signal	EA25 / EA5	1.9 k Ω (+20 °C/68 °F) 160 Ω (+85 °C/185 °F)	
EA26	Fuel pressure sensor, signal			D12 C
EA27	Not currently used			
EA28	Not currently used			
EA29	Not currently used			
EA30	Engine speed sensor (crank), +	EA30 / EA31	775 - 945 Ω	
EA31	Engine speed sensor (crank), -	EA31 / EA30	775 - 945 Ω	
EA32	Not currently used			
EA33	VCB, -			
EA34	Unit injector cylinder 4, -	EA34 / EA24	1.5 - 2.0 Ω	
EA35	Unit injector cylinder 5, -	EA35 / EA24	1.5 - 2.0 Ω	
EA36	Unit injector cylinder 6, -	EA36 / EA24	1.5 - 2.0 Ω	
EB1	SAE J1939 + Communications link			
EB2	SAE J1939 - Communications link			
EB3	Ambient air temperature sensor, signal	EB3 / EB13	6.2 k Ω (+20 °C/68 °F) 1.7 k Ω (+50 °C/122 °F)	
EB4	Buffered idle validation switch			
EB5	Pre-heat sense 1 (if equipped)	EB5 / EB9	open circuit (open) < 5.0 Ω (closed)	
EB6	Not currently used			
EB7	Coolant level sensor, signal	EB7 / EB8	open circuit (coolant level normal) <1 Ω ; closed (coolant level low)	Applies to WX , VN and VHD
EB8	Sensors ground			
EB9	EECU ground, -			
EB10	EECU ground, -			
EB11	EECU B+			
EB12	EECU B+			
EB13	Ambient air temperature sensor			
EB14	Not currently used			
EB15	Not currently used			
EB16	Pre-heat sensor 2 (if equipped)	EB16 / EB9	open circuit (open) < 5.0 Ω (closed)	
EB17	Air filter indicator sensor signal			
EB18	Not currently used			
EB19	Not currently used			

Conne- tion	Signal type	Measuring points	Ignition key in the OFF position	Other
EB20	Not currently used			
EB21	Engine fan control (if equipped with on/off fan)			
EB22	Not currently used			
EB23	Not currently used			
EB24	EOL Enable	EB24/EB9	Open circuit(open)	
EB25	SAE J1587/J1708 A Information link	EB25 / (connection A in the 6 pin diagnostics connector)	<1 Ω	
		EB25 / DCA (connection F in the 9 pin diagnostics connector)	<1 Ω	
EB26	SAE J1587/J1708 B Information link	EB26 / (connection B in the 6 pin diagnostics connector)	<1 Ω	
		EB26 / (connection G in the 9 pin diagnostics connector)	<1 Ω	
EB27	Not currently used			
EB28	Not currently used			
EB29	Not currently used			
EB30	Not currently used			
EB31	Preheating relay coil ground (if equipped)			
EB32	Not currently used			
EB33	Not currently used			
EB34	Not currently used			
EB35	EPG 1, -			
EB36	EPG 2, -			

Pinouts

Engine Electronic Control Unit (EECU)


VOLVO D12B/D12C EECU/EA Connector		
Cavity	Color	Description
1	GN	OIL TEMPERATURE
2	BL/W	BOOST TEMPERATURE
3	GR	BOOST PRESSURE
4	GN/W	BOOST & OIL PRESSURE COMMON (+)
5	BN/W	PRESSURE & TEMP. SENSOR COMMON (-)
6		NOT USED
7	Y	ENGINE POSITION SENSOR, CAM (+)
8-10		NOT USED
11	W	INJECTOR, CYL 1 (-)
12	W	CYL 1, CYL 2, CYL 3 INJECTOR COMMON, 90 Volt (+)
13	GN	FUEL TEMPERATURE (D12C)
14	BN	OIL PRESSURE
15-17		NOT USED
18	BN/W	ENGINE POSITION SENSOR, CAM (-)
19-21		NOT USED
22	W	INJECTOR, CYL 2 (-)
23	W	INJECTOR, CYL 3 (-)
24	W	CYL 4, CYL 5, CYL 6 INJECTOR COMMON, 90 Volt (+)
25	Y/W	COOLANT TEMPERATURE
26		NOT USED
27	BN	FUEL PRESSURE (D12C)
28-29		NOT USED
30	BL/SB	ENGINE SPEED SENSOR, CRANK (+)
31	BL/R	ENGINE SPEED SENSOR, CRANK (-)
32		NOT USED
33	GN/W	VCB SOLENOID VALVE RETURN
34	W	INJECTOR, CYL 4 (-)
35	W	INJECTOR, CYL 5 (-)
36	W	INJECTOR, CYL 6 (-)

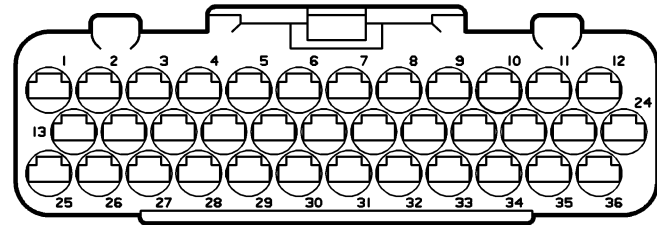

W3000945

Wire Colors:	BL BLUE	R RED
	BN BROWN	SB SOLID BLACK
	GN GREEN	VO VIOLET
	GR GRAY	W WHITE
	OR ORANGE	Y YELLOW
	P PINK	

VOLVO D12B/D12C EECU/EB Connector		
Cavity	Color	Description
1	Y	DATA LINK J1939 CAN HI
2	GN	DATA LINK J1939 CAN LO
3	BL/Y	AMBIENT AIR TEMPERATURE
4	P	BUFFERED IDLE VALIDATION SWITCH
5	R	PREHEAT SENSE 1
6		NOT USED
7	BL/SB	COOLANT LEVEL WARNING
8	GR/W	AIR FILTER, COOL LVL COMMON
9	W	GROUND (-)
10	W	GROUND (-)
11	R/SB	POWER SUPPLY (+)
12	R/SB	POWER SUPPLY (+)
13	VO/W	AMBIENT AIR TEMP COMMON (-)
14-15		NOT USED
16	R/W	PREHEAT SENSE 2
17	BL/R	AIR FILTER INDICATOR
18-20		NOT USED
21	GR/R	COOLING FAN CONTROL (-)
22-23		NOT USED
24	Y/SB	FACTORY PROGRAMMING (NOT USED)
25	GR	DATA LINK J1708/1587 (+)
26	OR	DATA LINK J1708/1587 (-)
27-30		NOT USED
31	BL/R	PREHEAT RELAY(Coil Ground)
32-34		NOT USED
35	GR/SB	EPG1 CONTROL
36	GR/W	EPG2 CONTROL

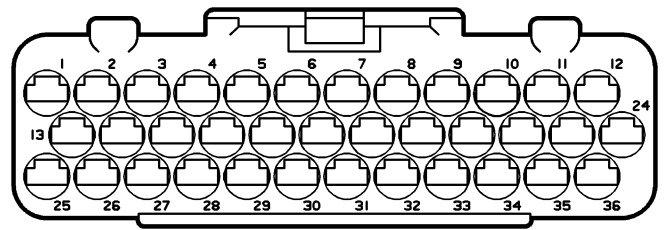


W3000945

Wire Colors:

BL	BLUE	R	RED
BN	BROWN	SB	SOLID BLACK
GN	GREEN	VO	VIOLET
GR	GRAY	W	WHITE
OR	ORANGE	Y	YELLOW
P	PINK		

VOLVO D7C EECU/EA Connector		
Cavity	Color	Description
1	GN	OIL TEMPERATURE
2	BL/W	BOOST TEMPERATURE
3	GR	BOOST PRESSURE
4	GN/W	BOOST, OIL & FUEL PRESSURE COMMON (+)
5	BN/W	PRESSURE & TEMP. SENSOR COMMON
6		NOT USED
7	Y	REDUNDANT ENGINE SPEED SENSOR (+)
8	Y/R	RACK DRIVE, PWM (+)
9	Y/SB	TIMING SLEEVE, PWM
10	GN/BN	RACK DRIVE, PWM (-)
11-12		NOT USED
13	GN/BN	FUEL TEMPERATURE
14	BN	OIL PRESSURE
15	GR/SB	NEEDLE LIFT SENSOR(+)
16	BL/R	RACK POSITION SENSOR, SEARCH COIL
17	Y/GR	RACK POSITION SENSOR, COMMON
18	BN/W	REDUNDANT ENGINE SPEED SENSOR (-)
19-20		NOT USED
21	OR	TIMING SLEEVE, PWM (-)
22-24		NOT USED
25	Y/W	COOLANT TEMPERATURE
26		NOT USED
27	BN	FUEL PRESSURE
28	GR/R	NEEDLE LIFT SENSOR (-)
29	Y/W	RACK POSITION SENSOR, REFERENCE COIL
30	BL/SB	ENGINE SPEED SENSOR, CRANK(+)
31	BL/R	ENGINE SPEED SENSOR, CRANK(-)
32-36		NOT USED

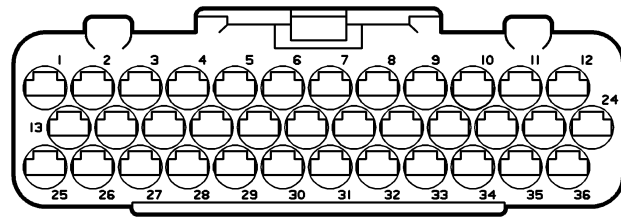


W3000945

Wire Colors:

BL	BLUE	R	RED
BN	BROWN	SB	SOLID BLACK
GN	GREEN	VO	VIOLET
GR	GRAY	W	WHITE
OR	ORANGE	Y	YELLOW
P	PINK		

VOLVO D7C EECU/EB Connector		
Cavity	Color	Description
1	Y	DATA LINK J1939 CAN HI
2	GN	DATA LINK J1939 CAN LO
3	BL/Y	AMBIENT AIR TEMPERATURE
4	P	BUFFERED IDLE VALIDATION SWITCH
5	R	PREHEAT SENSE 1
6		NOT USED
7	BL/SB	COOLANT LEVEL WARNING
8	GR/W	AIR FILTER, COOL LEVEL COMMON (-)
9	W	GROUND (-)
10	W	GROUND (-)
11	R/SB	POWER SUPPLY (+)
12	R/SB	POWER SUPPLY (+)
13	VO/W	AMBIENT AIR TEMP COMMON (-)
14-16		NOT USED
17	BL/R	AIR FILTER INDICATOR
18-23		NOT USED
24	Y/SB	FACTORY PROGRAMMING (NOT USED)
25	GR	DATA LINK J1708/1587 (+)
26	OR	DATA LINK J1708/1587 (-)
27-30		NOT USED
31	BL/R	PREHEAT RELAY, CONTROL
32-33		NOT USED
34	Y/BN	FUEL SHUTOFF VALVE CONTROL
35	GR	EPG1
36		NOT USED

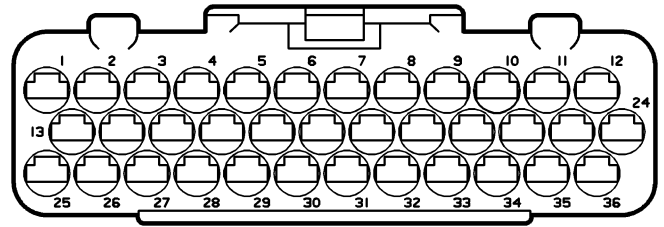


W3000945

Wire Colors:	BL BLUE	R RED
	BN BROWN	SB SOLID BLACK
	GN GREEN	VO VIOLET
	GR GRAY	W WHITE
	OR ORANGE	Y YELLOW
	P PINK	


Pinouts

Vehicle Electronic Control Unit(VECU)


Vehicle ECU Connector A-(GREEN)		
Cavity	Circuit	Description
1	564A	CC/PTO SWITCH SET(-) INPUT
2	563A	CC/PTO SWITCH SET(+) INPUT
3	562A	CC/PTO SWITCH ON INPUT
4		NOT USED
5	567B	SERVICE BRAKE SWITCH INPUT
6	284-A	12V STARTER CONTROL SOLE-NOID FEED
7	245	ENGINE PREHEAT CIRCUIT PROTECTION FEED
8	571	CLUTCH SWITCH INPUT
9	385-A	PARK CONTROL WIPER MOTOR
10	388	INTERMITTENT WIPER INPUT
11	387-C	SWITCH TO WASHER MOTOR
12	0XE	ELECTRONIC GROUND
13	18V	ELECTRONIC ENGINE SWITCHED BATTERY FEED
14	196V	IGNITION SWITCH DR FEED
15-18		NOT USED
19	300D	MANUAL FAN SWITCH INPUT
20	629	ENGINE BRAKE MEDIUM FEED
21	628	ENGINE BRAKE LOW FEED
22		NOT USED
23	555	IDLE VALIDATION INPUT
24	682	HIGH REFRIGERANT PRESSURE SWITCH FEED
25-28		NOT USED
29	573	PTO SWITCH ON INPUT
30	565A	CC/PTO SWITCH RESUME INPUT

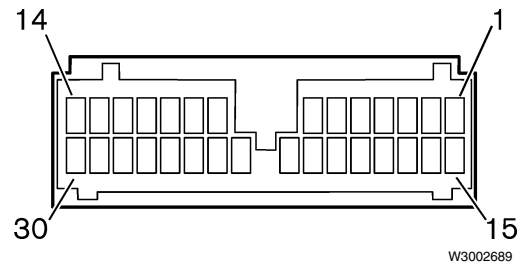

Vehicle ECU Connector B-(BLUE)		
Cavity	Circuit	Description
1		NOT USED
2	312A	TRANSMISSION AREA INHIBITOR VALVE RETURN
3-4		NOT USED
5	597	ECU COMMON 12V OUTPUT
6	550	VEHICLE SPEED INPUT
7		NOT USED
8	553	THROTTLE POSITION SENSOR INPUT
9		NOT USED
10	552	THROTTLE POSITION SENSOR SUPPLY
11	581	PARKING BRAKE SWITCH INPUT
12-14		NOT USED
15	583	POWER CONTROL FROM ENGINE ECU
16	389B	INTERMITTENT WIPER RELAY COIL RETURN
17	555A	IDLE VALIDATION FROM ENGINE ECU
18	312C	RANGE INHIBITOR VALVE RETURN
19	558	ECU COMMON +12V OUTPUT
20	551	VEHICLE SPEED RETURN FROM ECU
21	317B	TRANSMISSION LOW RANGE INDICATOR SIGNAL
22	554	THROTTLE POSITION SENSOR RETURN
23-26		NOT USED
27	567A	SERVICE BRAKE SWITCH INPUT
28-30		NOT USED

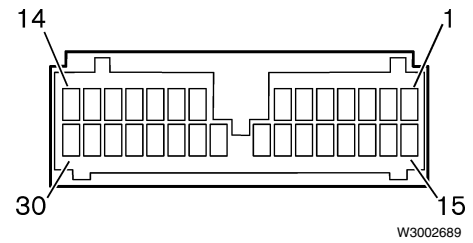


Vehicle ECU Connector C-(GREEN)		
Cavity	Circuit	Description
1	401-D	DATA LINK J1708 (-)
2	400-D	DATA LINK J1708 (+)
3	408-B	DATA LINK J1939 SHIELD
4	406-B	DATA LINK J1939 CAN HI
5	407-B	DATA LINK J1939 CAN LOW

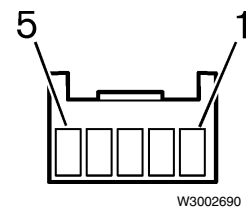

Schematic

D12C

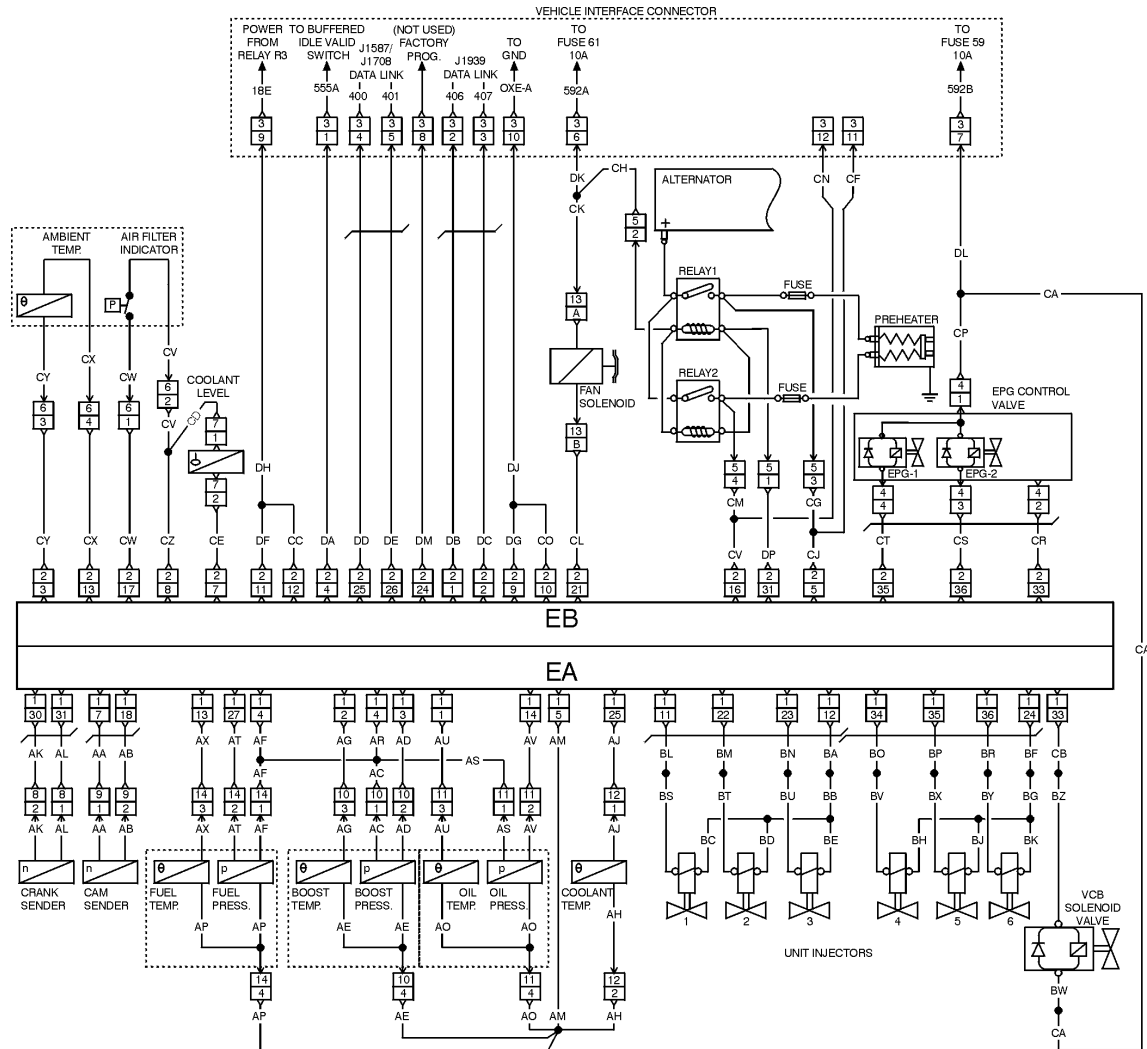

CONN NO.	DESCRIPTION	CONN NO.	DESCRIPTION
1	ENGINE ECU - EA	8	CRANK SENDER
2	ENGINE ECU - EB	9	CAM SENDER
3	VEHICLE INTERFACE	10	BOOST PRESSURE/TEMP
4	EPG CONTROL VALVE (PWM)	11	OIL TEMP/PSI SENSOR
5	PREHEATER HARNESS	12	COOLANT TEMP SENSOR
6	AMBIENT AIR TEMP SENSOR	13	COOLING FAN SOLENOID
7	COOLANT LEVEL SENSOR	14	FUEL TEMP/PRESSURE SENSOR


SYMBOL DEFINITION	
	DENOTES TWISTED PAIR
	DENOTES CONNECTOR
	DENOTES CAVITY

W2003348

Schematic

VECU

Vehicle Electronic Control Unit Wiring Schematic

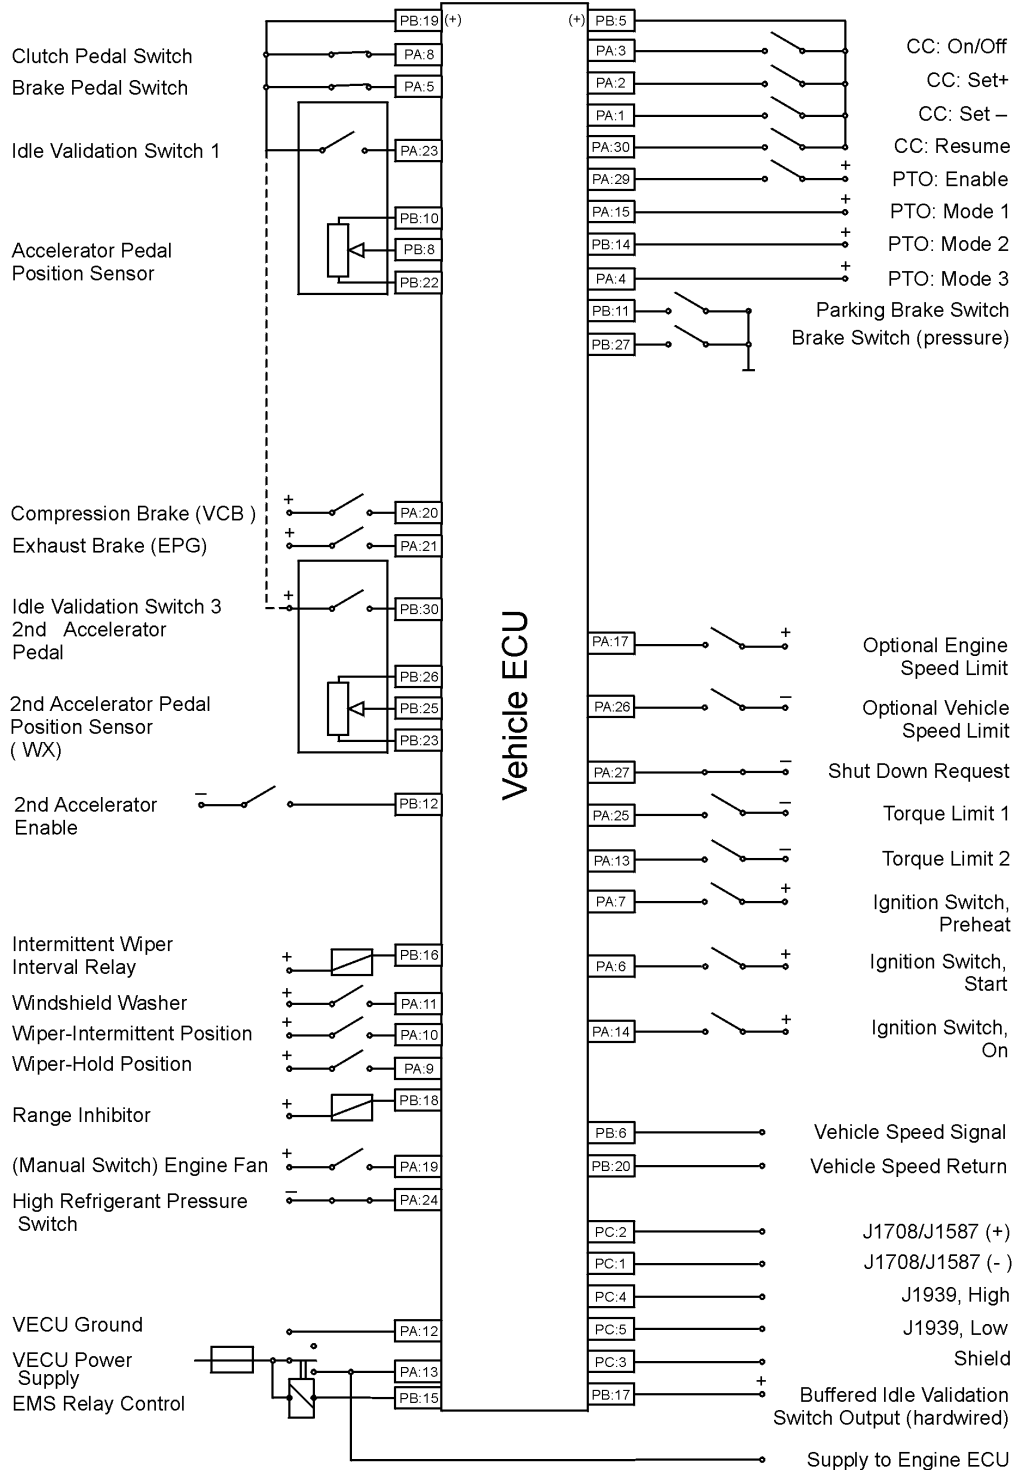


W3003497


Tools

Special Tools


The following special tools are required for work with the D12 electronic control system. The 3917916 VOLVO breakout kit, along with its components, is available from Volvo Truck. When requesting tools, provide the appropriate part number. Part numbers beginning with "J" are available from Kent-Moore.

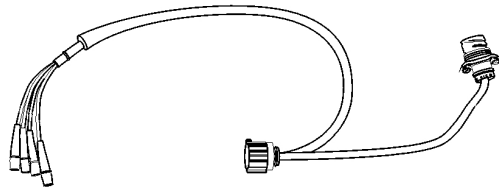


9998534




J-39200

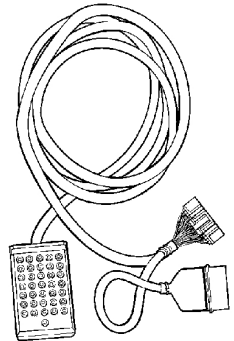


J-41132

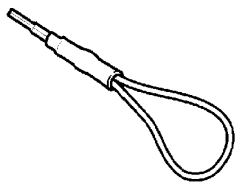


9998482

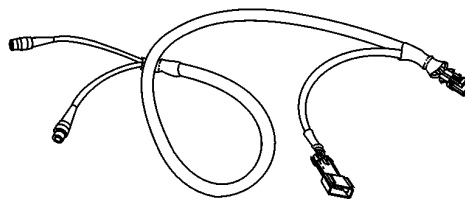


J-43147

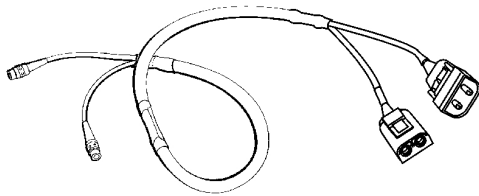


J-42472

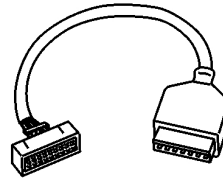


J-43233

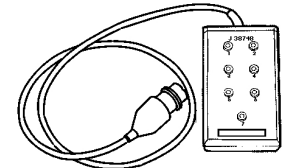


J-38748

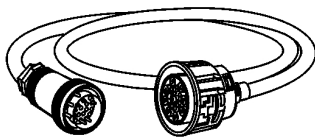


9809687

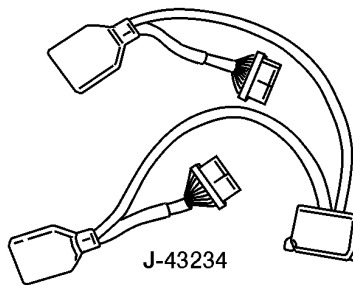


J-43234

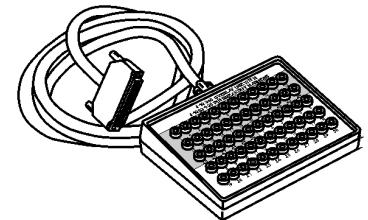

9998551/J-43340

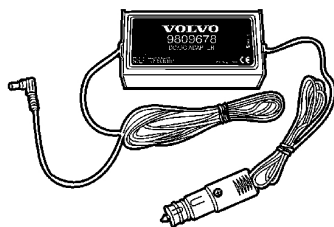

9809678

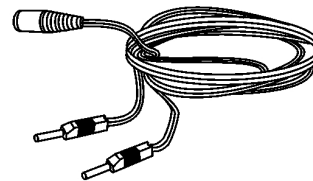

9809685

See list on next page for information about the tools in the picture.


W2003598

9998534	4-pin breakout harness	9809687	AC/DC power supply for PC toll.(optional)
J-39200	digital multimeter		
J-43147	2-pin breakout harness	9809678	12 Pin DIN Connector cable-alternative programming cable for EECU
9998482	Guage for inspection of control unit connector	9809685	Power extension cable —used together w/9808635.
J-41132	36-pin breakout box	J-43234	Adapter(Kent Moore).
J-42472	2-pin breakout harness	9998551/J-43340	60 Pin Breakout Box/Overlay.
J-43233	36-pin jumper		
J-38748	7-pin fuel injection pump breakout box		

Other Special Equipment

The following hardware is used to operate VCADS Pro. The tools can be ordered from Volvo quoting the specified part number.

VCADS Pro tools for diagnostics is for vehicles built from 1998 and later. For diagnostics on vehicles built prior to 1998, use Pro-Link 9000 (J-38500) with Volvo Application Cartridge J-38500-2000.

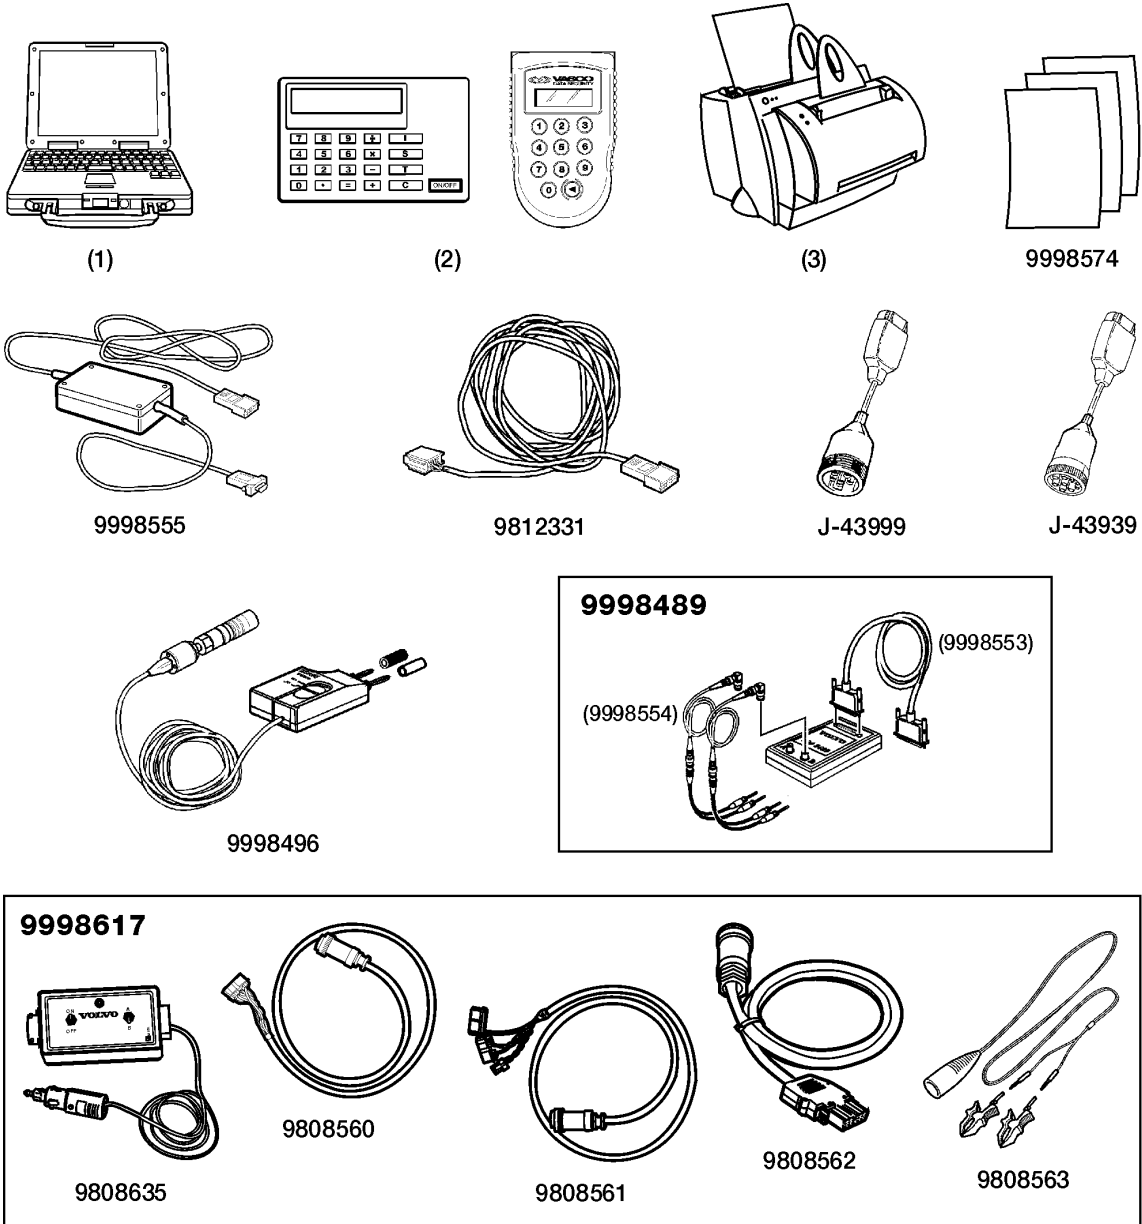

W2003597

See list on next page for information about the tools in the picture.

1	PC tool -package.
2	Didgipass password generator, model 300 or 500.
3	Laser printer; HP 1100A (To be purchased from a local supplier. Not supplied by Volvo.)
9998574	Laser printer labels. Used when printing labels for the engine electronic control unit (EECU).
9998555	Communication interface unit; for connection between the PC tool and the vehicle's diagnostic connector.
9812331	Extension Cable; for communication, 22 yards (optional)
J-43999	6 Pin Diagnostic adapter; for vehicles prior to 1999
J-43939	9 Pin Diagnostic adapter; for vehicles built from January 1999.
9998496	Pressure Guage
9998489	Oscilloscope interface
9998554	Oscilloscope Cable-BNC connector cable to banana jack (optional)
9998553	Oscilloscope Cable-25 pin parallel cable (optional)
9998617	Programming Kit (see below)
9808635	Programming Unit
9808560	Cable for direct connection to the Engine ECU
9808561	Cable for direct connection to the Vehicle ECU
9808562	Cable for direct connection to the Instrument Cluster
9808563	Cable for power supply

Note: There are three ways of connecting the power cable; 1) To radio power supply, 2) Directly to battery with battery. 3) To cigar lighter.


Design and Function

Vehicle Management System

Strategy

The vehicle management system is designed to incorporate the entire vehicle system and instantly receive real-time data from key vehicle components.

- Uniform interfaces between the control systems.
- Standard adaptations to the vehicle's functions.
- Stand-alone diagnostics for the vehicle's main electronic components.

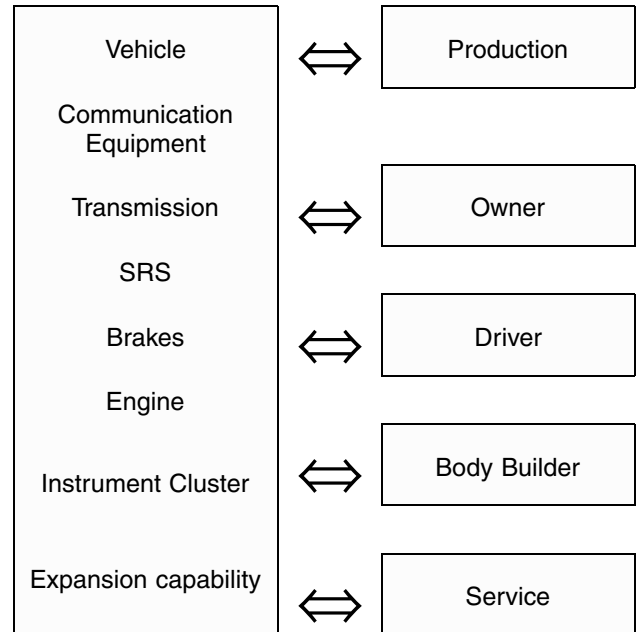


Conventional Control Systems

In principle, a conventional control system is constructed so that one or several of the vehicle's components have their own control units that receive signals from different sensors. Each control unit serves its own component and sends signals to other control units via electrical wires.

An example of this is the engine control unit that receives signals from different sensors on the engine, as well as from other control units on the vehicle. The accelerator pedal position, the clutch pedal position, the speed signal, engaged power take-off etc., are sent to the engine electronic control unit (EECU) via wires from different sensors and contacts.

The system must have one or more communication ports, to which tools can be connected for programming as well as for reading information and any fault codes.

In the future, the vehicle's sub-components will require several specific control units and the vehicle electronics will therefore become even more complex. In the long run this will limit the ability of conventional control systems to fulfill their tasks.

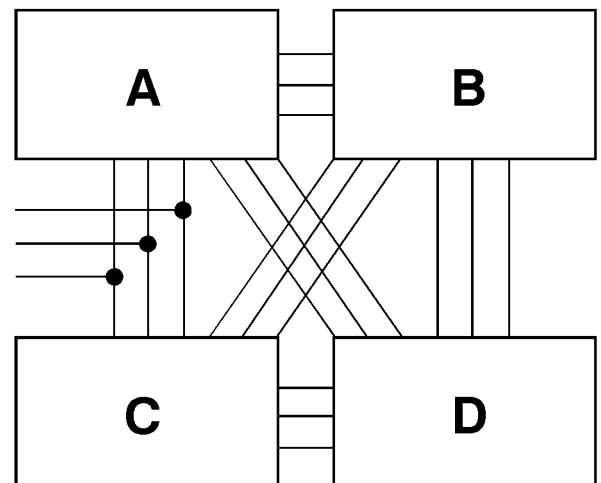

T3008752

Data Link System

Volvo's vehicle electronics are constructed on the principle that all communications between the control units in the system are accomplished via two data links:

- the J1939 Control Data Link
- and the J1587/1708 Information Data Link

The vehicle's main components have their own control units that are connected to one or both links in order to be able to communicate with each other.


Here is how the system works on a vehicle equipped with a Volvo engine: when the driver wants to increase the vehicle's speed, a signal is sent from the accelerator position sensor to the vehicle electronic control unit (VECU). The signal is then transferred via the data link to the engine electronic control unit (EECU).

The EECU communicates with its own sensors to verify that the conditions exist to permit increased acceleration. If the conditions are met, it carries out the VECU's request.

The EECU communicates with the other control units via the data links, either by requesting or by receiving direct information that all prerequisites are met in order to be able to carry out the request.

If an error should occur in any of the systems, a signal is sent out on the J1587/1708 information data link, which makes it possible to read the information, either on the driver's instrument cluster, or via a PC or diagnostic tool (i.e. Pro-Link, VCADS or VCADS Pro) connected to the diagnostic connector.

The data link system provides an extremely flexible solution with great potential for expansion.

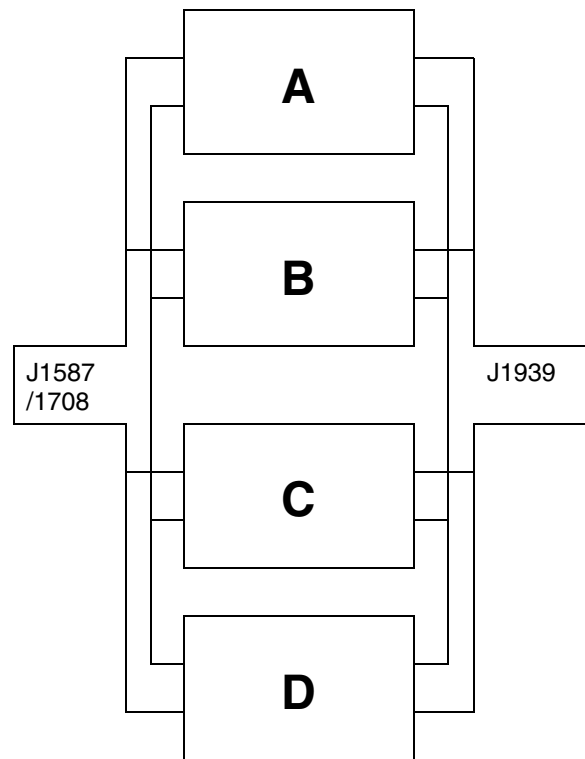

CAUTION

No modifications or connections should be made to wires 406 (yellow), 407 (green) or 408 (shielded). These wires carry the high-speed communications between the electronic systems in the vehicle. **Any modification, connection to, or damage to these wires can result in the failure of the vehicle's electronic systems.**

Data Links, Design and Function

Data links are one way of transferring information between various components. In conventional systems, analog signals have mostly been used.

Analog signals mean that different voltage levels represent different values. A simplified example of analog signals could be:

1 volt = 10° C

2 volts = 20° C


3 volts = 30° C

Data links use digital communication. This means that the voltage only varies between two different values, either “high” or “low”. By combining these high and low signals various values can be described.


The diagram shows an oscilloscope image where the voltage of the data link is measured. As can be seen from the diagram, a large part of the time the link is “silent” but at times a number of fast pulses are sent. A group of pulses is called a message.

The enlarged portion of the diagram shows that each message consists of a combination of high and low voltage levels.

The following sections describe what type of information this message contains.

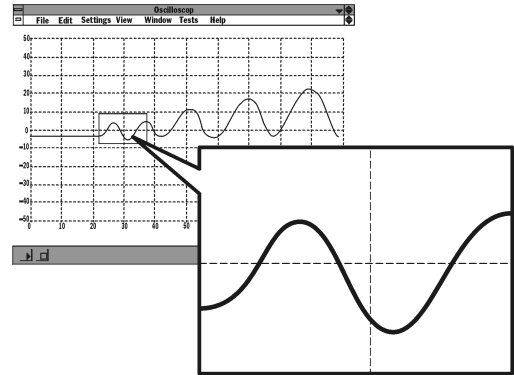

W3003960

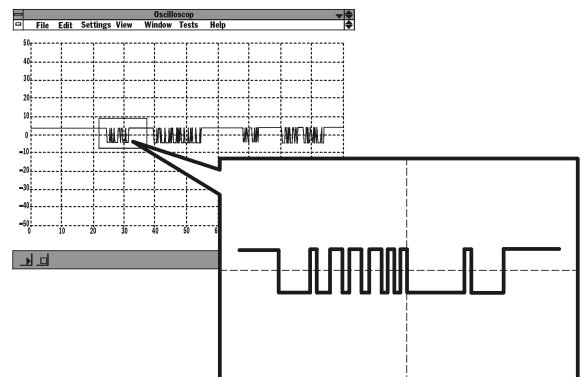

W3003957


Messages and Information Content

Different voltage levels are represented by the different numbers in the binary number system. The binary number system has only two numbers, one and zero.

The ones are normally represented by a high voltage and the zeros by a low voltage.

Each binary number is called a “bit”. This message consists of four groups of binary numbers. Each group of eight bits makes up a “byte”, a decimal number from 0–255 with information, as well as a start bit and a stop bit.

The purpose of the start and stop bits is to function as markers for where that group of data begins and ends. In the diagram above only the start and stop bits are labeled. The other information is shaded.

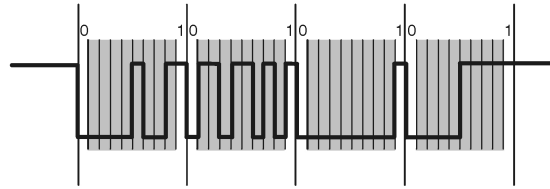


W3003956

Example

The diagram shows the information content in the four different parts of the message. The start and stop bits are shaded since they do not contain any information.





The box in the diagram shows the different binary and decimal values which comprise the message.

Note: The information is sent over the data link with the “least” bit first in the binary numbers. The normal way to notate binary numbers is shown in the box in the diagram.

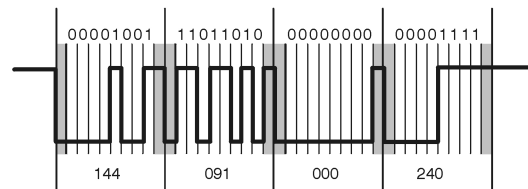

	128	64	32	16	8	4	2	1
144	=	1	0	0	1	0	0	0
091	=	0	1	0	1	1	0	1
000	=	0	0	0	0	0	0	0
240	=	1	1	1	1	0	0	0

W3003958

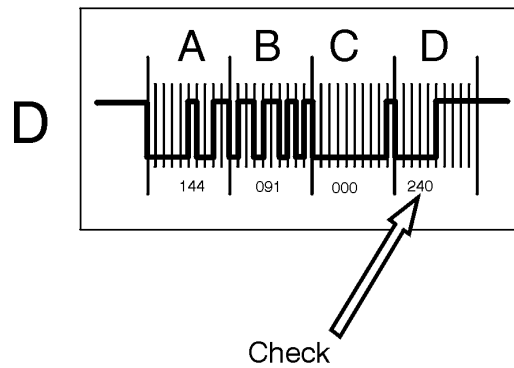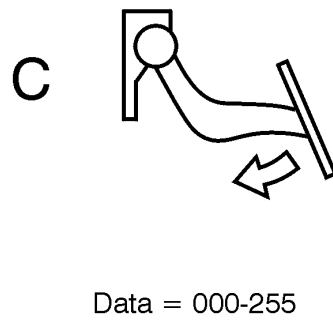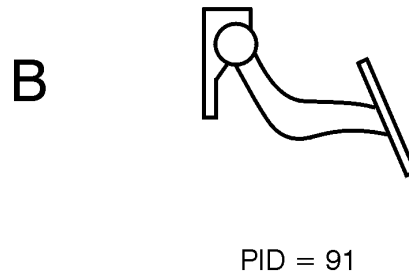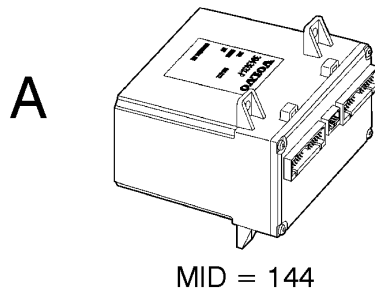

W2003293

Message 144–091–000–240 in this example, has the following meaning:

- A** MID 144 — The message comes from the Vehicle ECU.
- B** PID 091 — The message states the accelerator pedal position percentage.
- C** Data 000 — The accelerator pedal is in the completely released position.

000 is a data component, which in this case states how much the accelerator pedal has been pressed down. The value can vary between 000 for a completely released pedal and 255 for a completely pressed down accelerator pedal.

- D** Check 240 — The checksum is used as a check that the message is reasonable.

Diagnostic Message Description

The Society of Automotive Engineers (SAE) and the American Trucking Association (ATA) have developed a standardized list of diagnostic messages, or fault codes. These diagnostic messages are used to communicate information about problems detected by an electronic control unit's (ECU's) self-diagnostic program. In addition to the industry-standard SAE codes, Volvo has developed a list of diagnostic messages that are unique to Volvo applications. Generally, diagnostic messages and their descriptions are listed in the service manual for each respective ECU and in the user manual for diagnostic tools.

- MID** MID is an acronym for Message Identification Description. MIDs are SAE standardized codes used to identify individual electronic control units.
- PID** PID is an acronym for Parameter Identification Description. PIDs are SAE standardized codes used to identify parameters or values.
- PPID** PPID is an acronym for Proprietary Parameter Identification Description. PPIDs are Volvo's unique codes used to identify parameters or values.
- SID** SID is an acronym for Subsystem Identification Description. SIDs are SAE standardized codes used to identify components.
- PSID** PSID is an acronym for Proprietary Subsystem Identification Description. PSIDs are Volvo's unique codes used to identify components.
- FMI** FMI is an acronym for Failure Mode Identifier. FMIs are SAE standardized codes used to identify a type of failure.


Data Link Communication

General

Communication between the different ECUs takes place via the two data links: the J1939 control data link and the J1587/1708 information data link.

The diagram shows how the control units, the diagnostic connector, and the instrument cluster are connected in principle.

The instrument cluster, the engine ECU and the diagnostic connector are always included in the system. The system may include other control units, depending on the vehicle type, engine type and optional equipment.

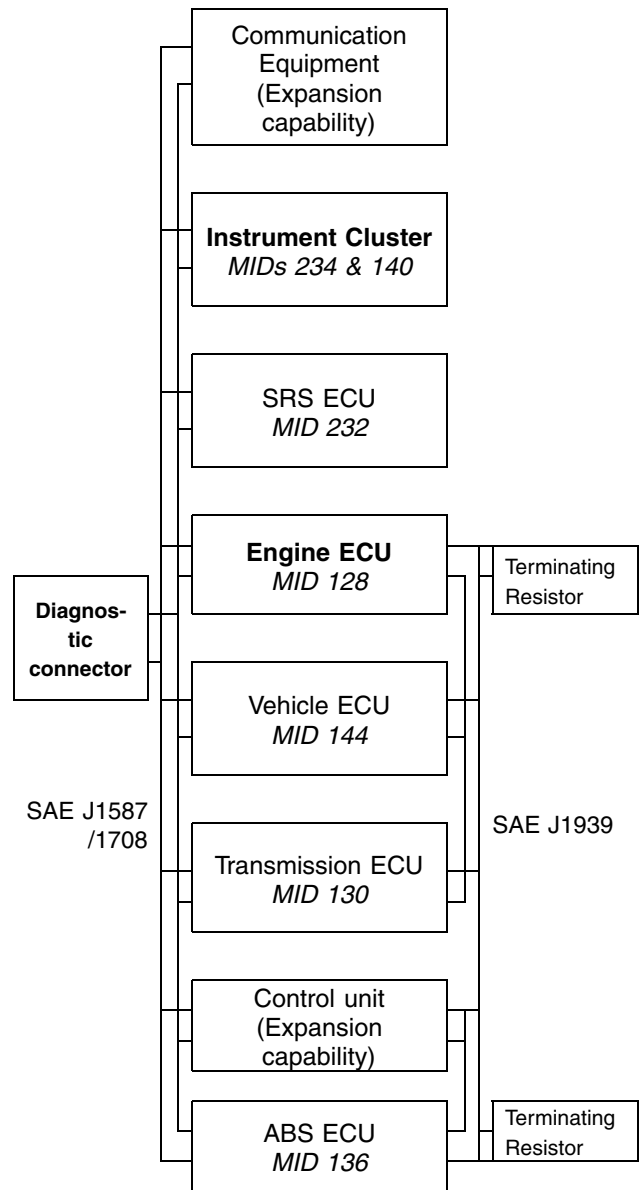

SAE J1939 Control Data Link

The system's **control signals** are sent via this link.

The J1939 link is very fast, operating at 250,000 bits per second. This operating speed allows the system to function more effectively and adapt quickly to changing conditions and vehicle requirements.


The link complies with SAE standards, and consists of three twisted wires: a green wire (407), a yellow wire (406) and in early designs a shield wire (408—optional). The twisted wire set (40 turns per meter) is used to protect the link from electrical interference.



CAUTION

No modifications or connections should be made to wires 406 (yellow), 407 (green) or 408 (shielded). These wires carry the high-speed communications between the electronic systems in the vehicle. **Any modification, connection to, or damage to these wires can result in the failure of the vehicle's electronic systems.**

Terminating Resistor

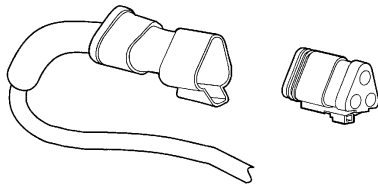

W3002905


Terminating resistors are wired into each end of the J1939 data link. One is located near the ABS ECU and the other near the engine ECU. On Volvo engines, the terminating resistor at the engine ECU end is located inside the EECU.

If you measure 120 ohm (+/- 10 ohm) between circuits 406 and 407, then there is only one terminating resistor. Check to determine which is missing and reconnect it.

Note: With Volvo engines, one terminating resistor is within the engine ECU. The other is positioned at the end of the J1939 network, typically at the ABS ECU. The one within the ECU is not accessible and should not be at fault.

If you measure less than 60 ohm, only two terminating resistors are used in a vehicle. Never install three in one truck. If more than two terminating resistors exist in the J1939 circuit, damage to the ECU electronics can occur over time. You can easily check to see if you have two resistors by measuring the resistance between circuits 406 and 407 with the ignition OFF. The correct resistance is 60Ω.

The purpose of these resistors is to prevent data link signal reflections. They must remain connected for the system to function properly.

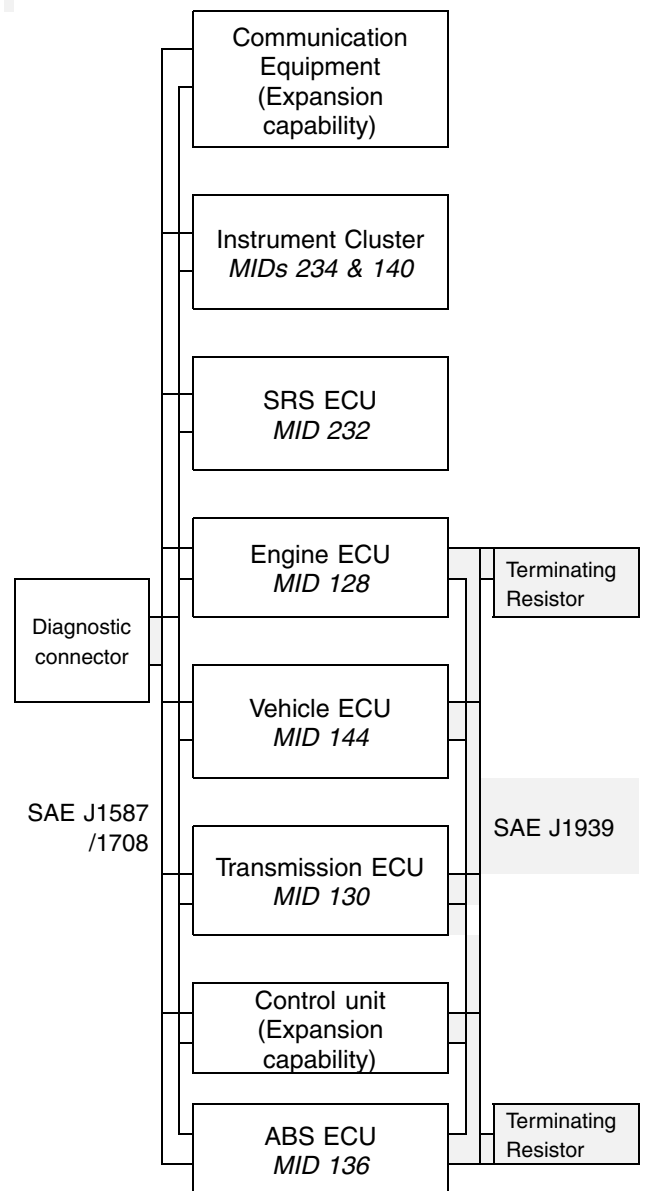

SAE J1587/1708 Information Data Link

Information and diagnostic signals are sent via this link. The link also functions as a “backup” should the J1939 control data link fail to function for any reason.

SAE J1708 is a standard that specifies hardware and a databus speed of 9600 bits per second. SAE J1587 is a protocol that provides a standard method for exchanging information between microprocessors.

The J1587 link consists of two wires (400 and 401) that are twisted around each other approx. 30 turns per meter. The twisted-pair wires are to protect the link against electrical interference.

CAUTION

If a circuit must be added to the electrical system, and will carry high currents or frequencies, route it in a location AWAY from wires 400 and 401 to prevent mutual inductance from interfering with data link functions.


CAUTION

Wires 400 and 401 **MUST NOT** be cut or spliced for any connections. These wires are used for the transmission of data for diagnostic messages and gauges. Modifying this circuit can cause these functions to fail.


SAE J1922 Data Link

For a short period of time some vehicles were produced which used the J1922 data link. The J1922 data link was developed as an interim standard until the J1939 control data link was established. The J1922 link operates on J1708 defined hardware and is used like a control link for communication between engine, transmission and ABS ECUs.

The J1922 link consists of two wires (404 and 405) that are twisted around each other approx. 30 turns per meter. The twisted-pair wires are to protect the link against electrical interference.

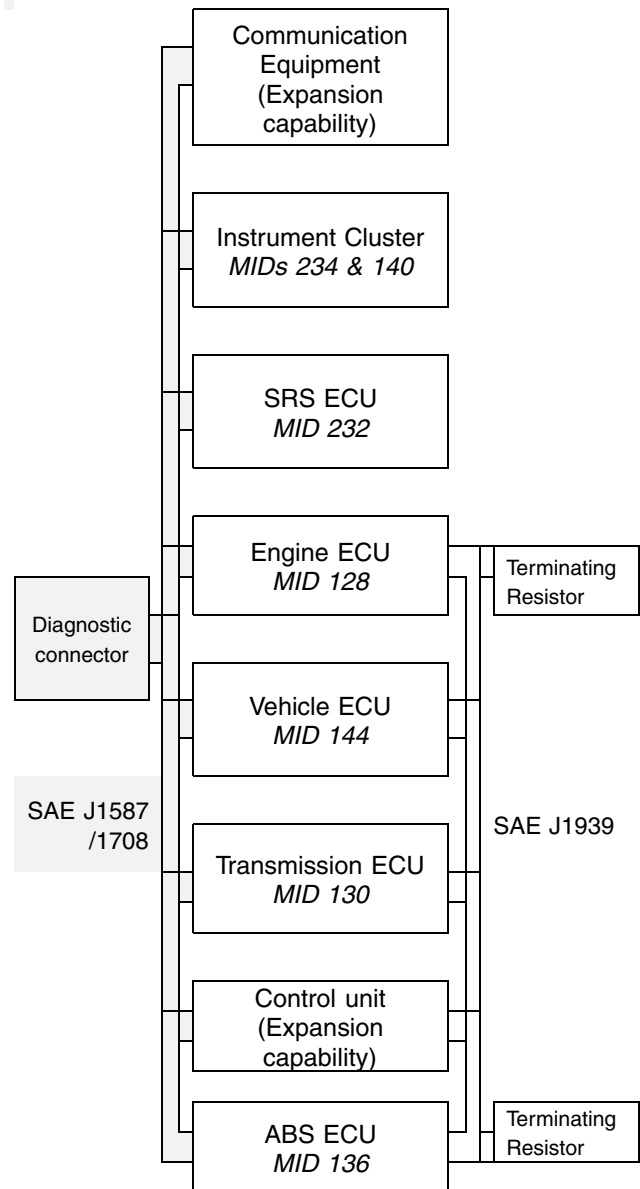

Diagnostic Connector

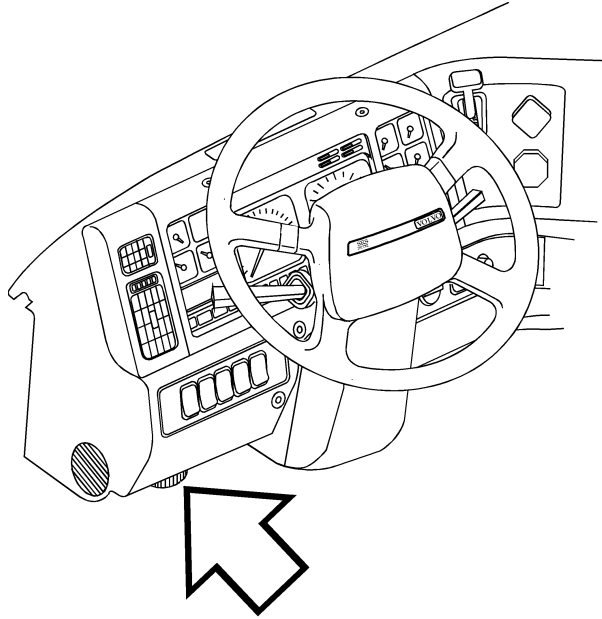


W8001310

The diagnostic connector is a round Deutsch connector located in the driver's side kick panel. The diagnostic connector is connected to the J1587/1708 information link and gives the system a way to communicate with an external PC or diagnostic tool.


With a PC or diagnostic tool connected, fault codes can be read from all the control units. This is important in fault tracing to carry out basic checks of all the vital parts of the vehicle's electronics.

Some programming can also be done via the diagnostic connector.

The standard diagnostic connector is a 6-pin Deutsch. A newer 9-pin Deutsch version has been introduced on certain vehicle/engine variants. The new 9-pin connector connects to both the J1939 and J1587/1708 data links.

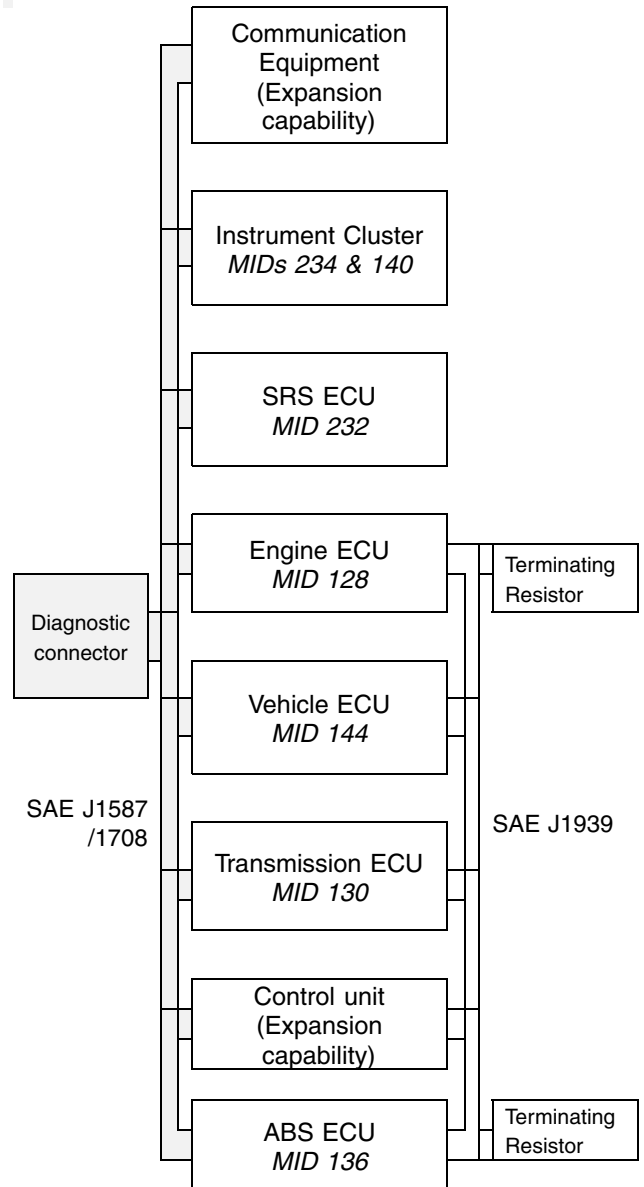


Communication Equipment

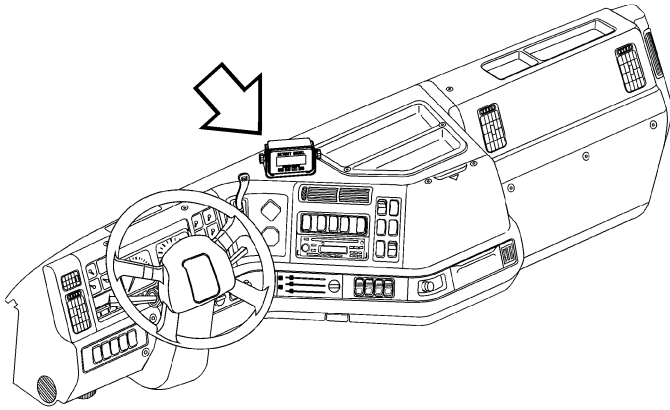

Pro-Driver Display


W2003295

Various manufacturers offer communication equipment designed to allow drivers to keep log book records electronically, maintain communication with the home office, monitor and record vehicle operations, and many other functions. Currently these communication devices are connected to the J1587/1708 Information Data Link. Newer and more sophisticated versions of these devices may also connect to the J1939 Control Data Link. Note: No provisions have currently been made to add communication equipment to the J1939 link in aftermarket adaptations.


 CAUTION
<p>No modifications or connections should be made to wires 406 (yellow), 407 (green) or 408 (shielded). These wires carry the high-speed communications between the electronic systems in the vehicle. Any modification, connection to, or damage to these wires can result in the failure of the vehicle's electronic systems.</p>

Provisions are made for adding aftermarket communication devices to the J1587/1708 link via connectors in the wiring harness.

Some of the communication devices currently used in Volvo trucks include Road Relay, Pro-Driver, Qualcomm and Highway Master.

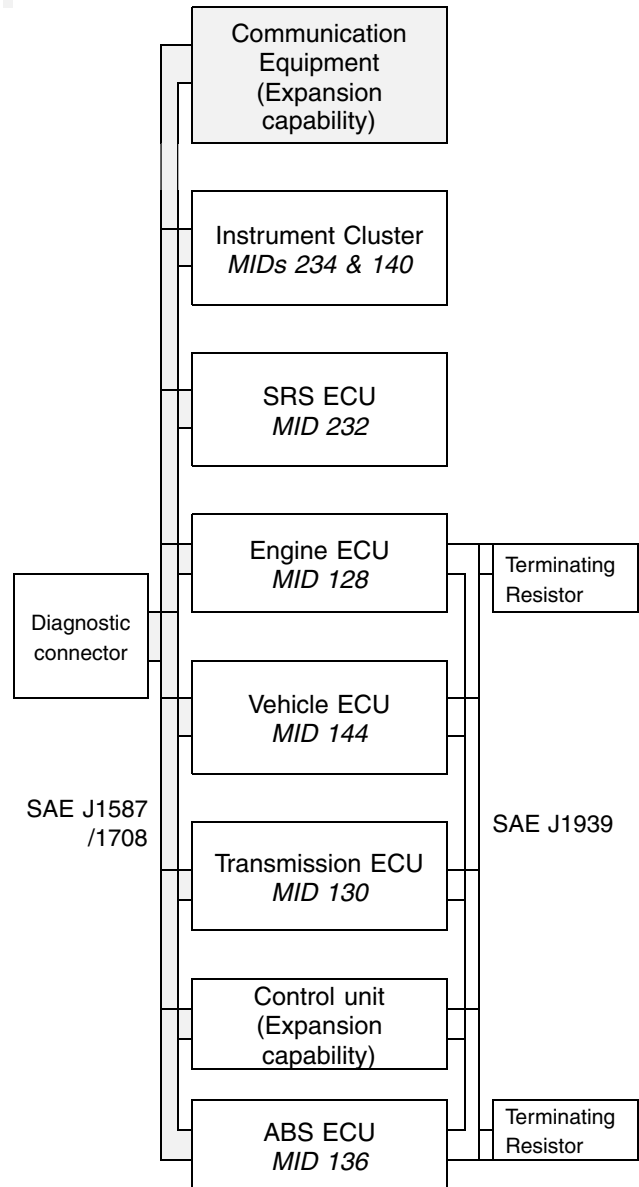

Instrument Cluster

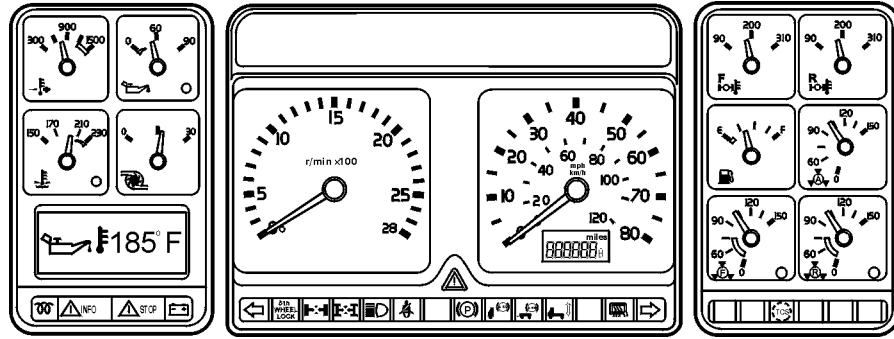


W3003621


The instrument cluster used on Volvo vehicles uses both data link signals and hardwired sensors depending on the vehicle/engine variant and instrument configuration. A graphic display screen is integrated into the instrument cluster to provide additional features and vehicle system information not available from other gauges. Diagnostic codes can also be retrieved and displayed. The instrument cluster is connected to the J1587/1708 information data link.

For information about the instrumentation that communicates via the data link, refer to service manuals in group 38:

Model:	See Publication:
WG/AC/WC/WI from 1994; WX with electronic engines from 5.96	Data Link Instrumentation, PV776-381-620SM
WX	Kysor Mini-Cluster, PV776-TSP108262
VN from 1.98-2.99	Instrumentation, PV776-TSP106805/1
VN from 3.99 ADN VHD	Instrumentation, PV776-TSP139790

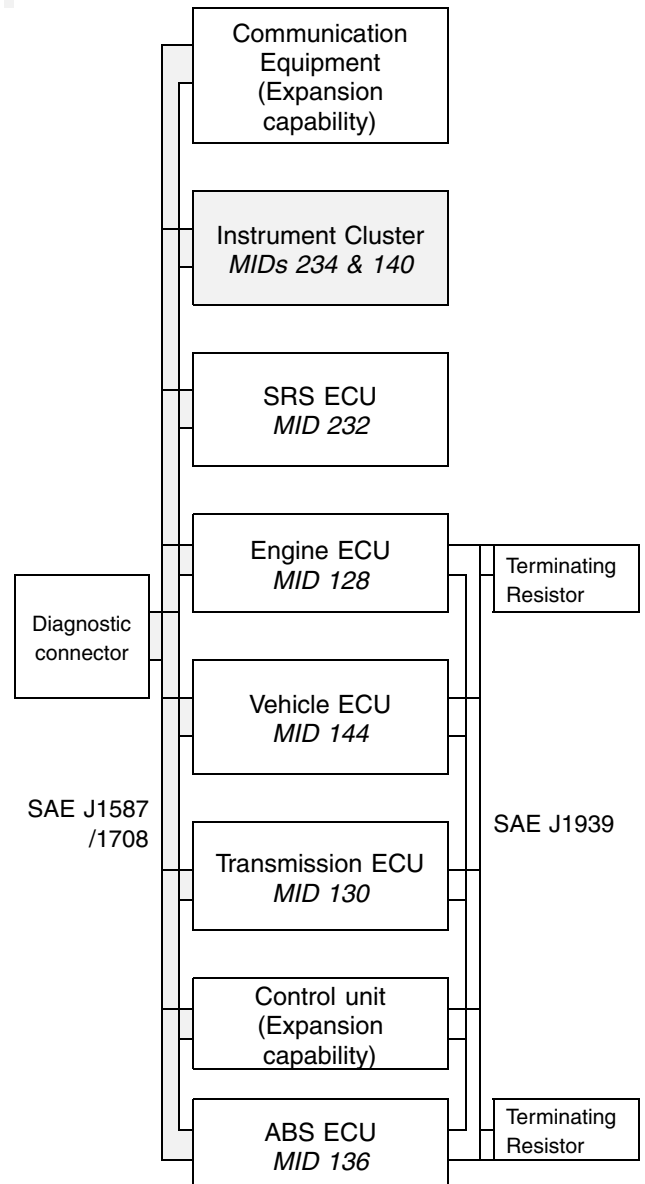

Vehicle Electronic Control Unit (VECU)

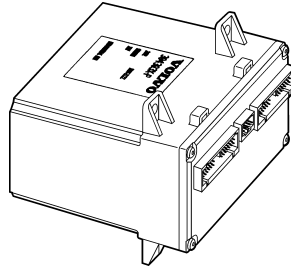


W2002673

The vehicle electronic control unit (VECU) is part of the integrated vehicle electronics. The VECU is located in the cab, but its specific mounting location varies by model.


The main function of the VECU is to collect data from different cab control units and then to pass this data to other ECUs in the system (primarily to the engine ECU).

For detailed information about the VECU see *Vehicle Electronic Control Unit, MID 144*, Volvo service publication number PV776-300-610.

The VECU is only used in vehicles equipped with Volvo engines.

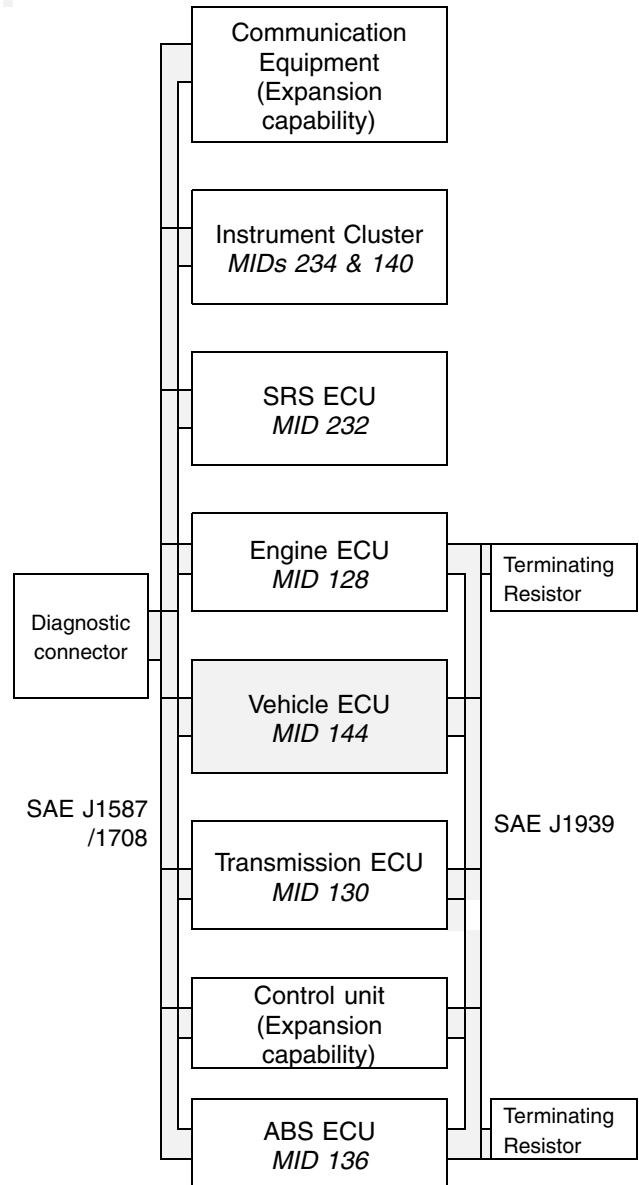

Engine Electronic Control Unit

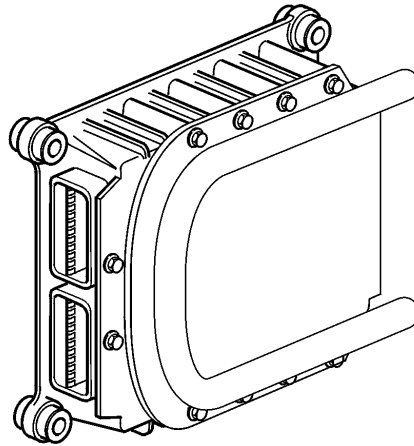


Irrespective of engine variant, the engine electronic control unit (EECU) performs the same basic functions in the system: control of engine operation. The EECU receives signals from various sensors and the data links. Based on these signals and the parameters programmed into the EECU, the EECU calculates the proper injection angle and fuel quantity to satisfy the requested operating requirements.

The EECU is connected to both the J1939 control data link and the J1587/1708 information data link.


Note: Early production model EECUs may use only the J1587/1708 data link, or the J1587/1708 and the J1922 data links.

For detailed information about EECUs see the service literature for that particular engine.

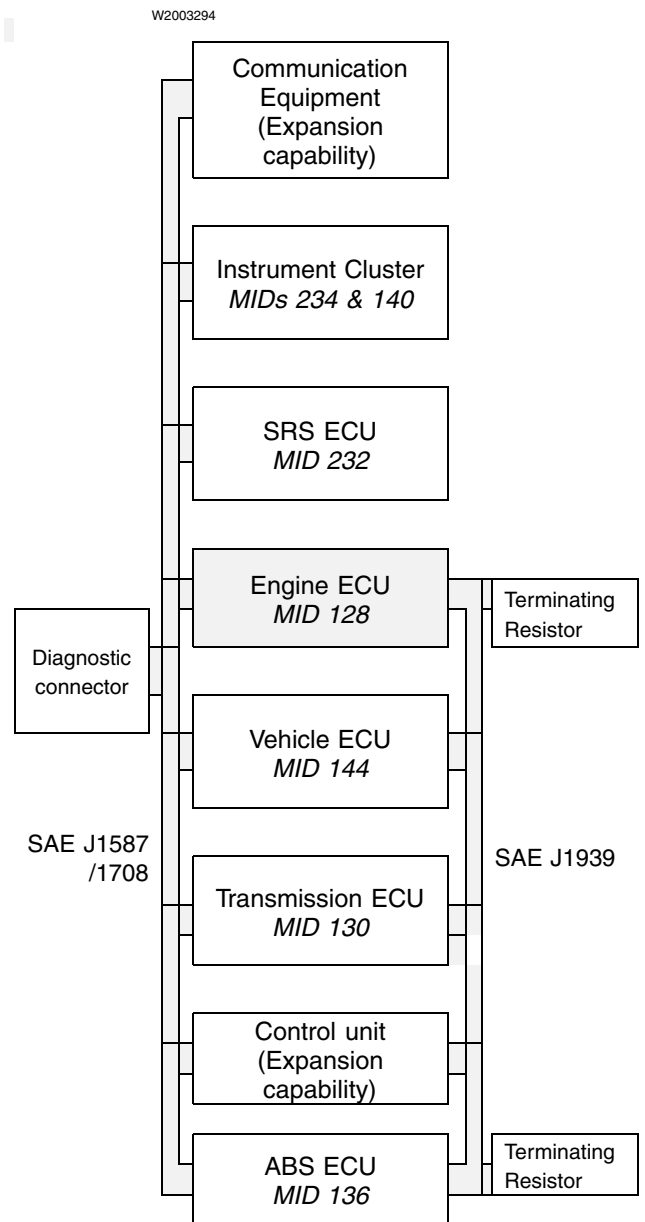

EECU

The EECU is an electronic control unit that monitors certain operational parameters of the Volvo engine from the SAE J1587 Data Link and appropriate sensors.

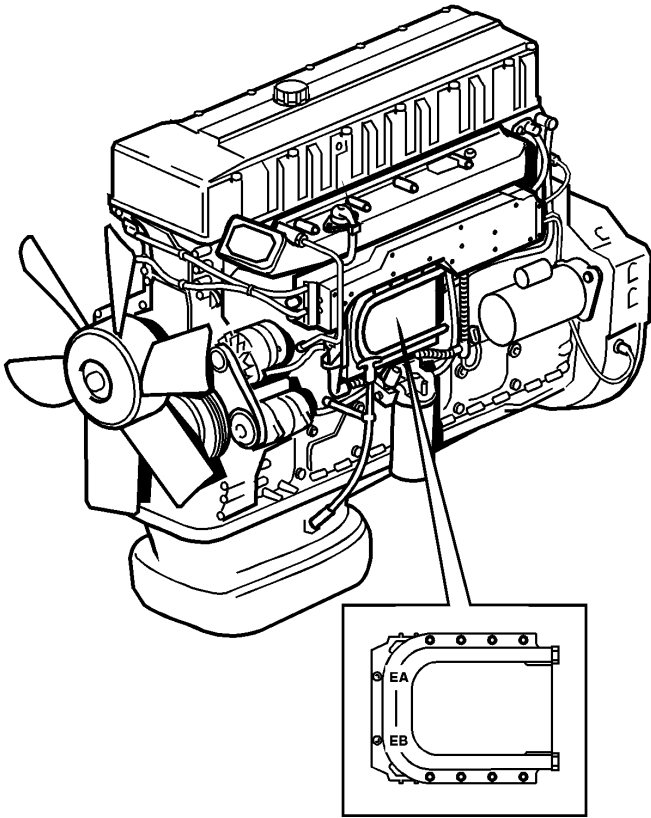

W2003076

ON/OFF Engine Cooling Fan

The EECU receives the input from the engine coolant temperature sensor to turn on the cooling fan at 115 °C (202 °F). The fan will remain engaged until the engine coolant drops to 90 °C (195 °F).

The ON/OFF cooling fan can also be engaged by the EECU if it receives a signal from the air conditioning systems APADS module. When the A/C system pressure reaches 20.5 bar (300 psi) the APADS module will send a signal to the EECU to engage the cooling fan. The on time of the cooling fan is controlled by the APADS module.

If the EECU does not receive any coolant temperature data, the fan is engaged for a minimum of 30 seconds. The fan will stay engaged until valid coolant temperature data is received and the coolant temperature drops below 90 °C (195 °F).

Converting Engine Oil Pressure Signal

The EECU takes an analog signal from a pressure transducer and broadcasts the signal on the SAE J1587 data link.

Engine Information and Warning Lamp-On Dash

- **Engine Oil Pressure**
The EECU will make the Δ STOP lamp light and the icon in the display light up if the oil pressure is $< 41 \pm 3$ kPa (6 ± 1.2 psi). Also a warning signal sounds if the engine is running.
- **Engine Coolant Level**
The EECU will make the Δ STOP lamp light stay on (solid) if the low coolant level sensor detects a low coolant level condition. The low coolant level condition is active only after 5 seconds of a constant signal from the low level sensor.
- **Engine Coolant Temperature**
The EECU will make the Δ STOP lamp light illuminate and gauge LED illuminate, plus the icon in the display if a high coolant temperature from the engine ECU is received.
- **Engine Oil Temperature**
If the Engine oil temperature becomes too high an information message is shown automatically with the text HIGH. At the same time the yellow Δ INFO lamp under the display lights up. The engine may also derate, if it is set up to do so in the engine ECU programming. The temperature which activates this warning varies for different engines. This temperature is set in the engine ECU. For Volvo engines, it is 275 °F (135 °C).

Note: If the engine is running and the stop lamp comes on you will get a **buzzer** or warning signal.

Electronic Unit Injectors

The engine has six unit injectors, one for each cylinder.


Each **Electronic Unit Injector**, or EUI, is a combination of injection pump and injector, but operates at a considerably higher pressure than a standard injector.

Each unit injector is mounted vertically in the cylinder head at each cylinder, centered between the four valves. The compressive force for the unit injector is developed by a lobe on the overhead camshaft. It is then transferred by a rocker arm to the injector.

The injection angle and the amount of fuel to be injected into the cylinder is determined by the EECU, which transmits signals to the electromagnetically controlled fuel valve in the unit injector valve housing.



Make sure to turn the ignition key off before working on the electronic unit injectors. This eliminates the possibility of electric shock which may result in personal injury or death.

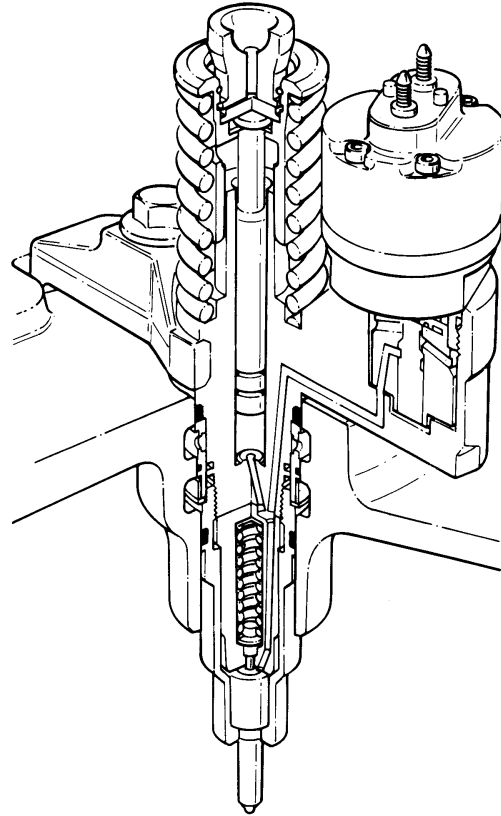

T2006998

Electronic unit injector

Calculating Fuel Quantities


The EECU calculates the quantity of fuel to be injected into a cylinder. This calculation provides the period of time during which the fuel valve is closed (when the fuel valve is closed, fuel is injected into the cylinder). Factors that determine how much fuel to inject into a cylinder are:

- Requested fuel amount
- Limitation of fuel amount

Flywheel

There are 54 notches cut into the flywheel; these are read by the speed sensor for the flywheel. With the help of these notches, the EECU can set the correct injection angle and calculate the time which gives the correct fuel amount.

The notches are divided into three groups, with 18 notches in each group. There is a flat area between each group of notches equivalent to 18° . A flat area and 18 notches is equivalent to 120° on the flywheel, or a third of a full turn. The area between each notch equals 6° on the flywheel.

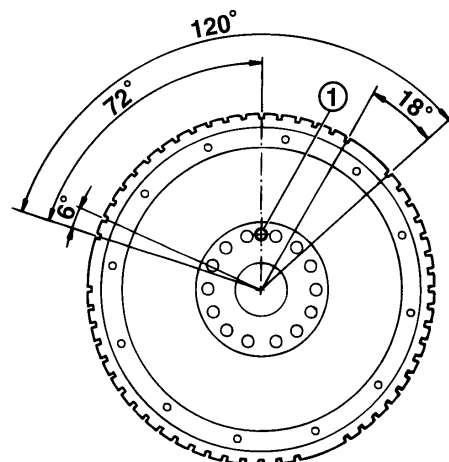


T2007019

Flywheel

Cam Sensor Wheel

The cam sensor wheel has six teeth (one tooth for each unit injector) evenly spaced at 60° center-to-center, plus an extra tooth, placed 15° before the tooth that indicates cylinder number 1.

The EECU uses these teeth to determine which injector is in line for injection. In other words, each tooth (teeth 1–6) represents the start of a cylinder operating phase (does not apply to the extra tooth).

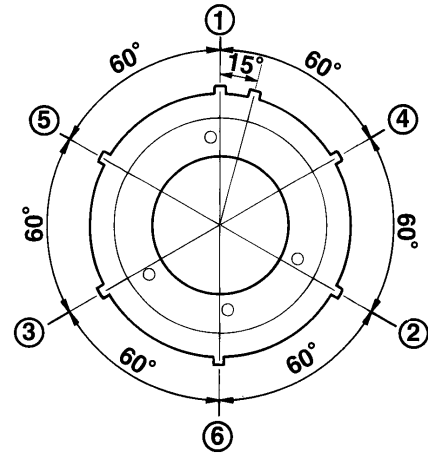

T2007099

Cam sensor wheel


Flywheel and Cam Sensor Wheel

The ratio between the flywheel and cam sensor is 2:1. This means that when the flywheel has rotated two turns, the cam sensor wheel has rotated one turn or when the flywheel has rotated 30° , the cam sensor wheel has rotated 15° and so on.

Injector Operational Phases

The operational phase of the number 1 cylinder is given in the following example. Fuel is injected at 7° before top dead center (BTDC) (the injection angle may vary between 18° BTDC and 6° after top dead center).

The cam sensor reacts to the extra tooth on the cam sensor wheel. This informs the control unit that the next tooth in turn (tooth 1) indicates the number 1 cylinder.

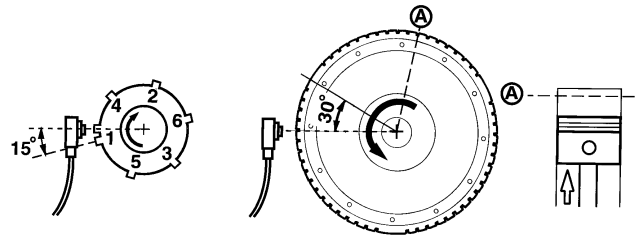


T2007100

Locating number 1 cylinder

A top dead center (TDC)

The cam sensor wheel detects tooth 1 and the flywheel sensor reaches a flat area on the flywheel at the same time.

At this point, the piston is on its way upward in the cylinder and no fuel is injected into the cylinder.

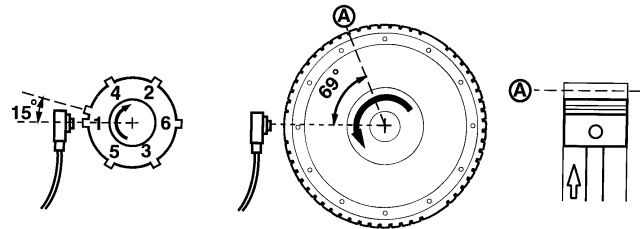


T2007101

Engine speed calculated

A top dead center (TDC)

The sensor detects the first notch after a flat area on the flywheel. Using the engine speed calculation, the EECU can determine:

- When to begin injecting fuel into the number 1 cylinder. This gives selected injection angle (7° BTDC in the example).
- When to stop injecting fuel into the number 1 cylinder. This gives the selected fuel amount.

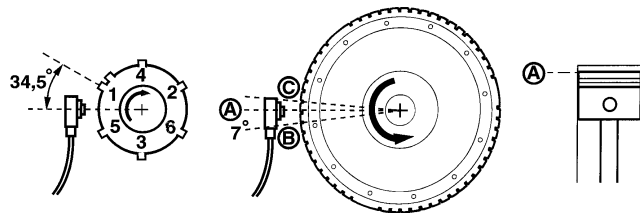

T2007102

Calculating injection angle

A TDC
 B 7° BTDC (injection begins)
 C ATDC (injection stops)

From the first notch after a flat area, the EECU advances the angle from which it is to begin injecting fuel into the cylinder and on to the angle where it is to stop injecting fuel into the cylinder. If the calculated angles do not agree with the notches on the flywheel, the EECU measures the time between the last notches to rectify the angles.

Because the EECU must calculate the engine speed during 120° , the engine speed calculation for each cylinder occurs one step ahead at all times. In other words, during the operational phase for one cylinder, the EECU calculates engine speed for the next cylinder and so on.

This procedure is repeated for the next cylinder in the same manner as described for the number 1 cylinder.

Note: Note that the calculation of the injection angle and fuel amount takes place continuously, regardless of the operational phase of the cylinders.

Cylinder Balancing

The EECU can provide each cylinder with a different quantity of fuel to make the engine run more smoothly at idling speeds. At higher speeds, there are no problems with smooth running and all cylinders receive the same amount of fuel. If the variation in fuel quantity between different cylinders is too great during cylinder balancing, the EUI, which deviates most, triggers a fault code from 31 to 36. This indicates that there must be a fault in the cylinder in question.

For cylinder balancing to take place, the following conditions must be satisfied:

- Idling speed must be below 650 rpm.
- Fuel requirement must be below a specific rating.
- Idling adjustment function must not be active.
- PTO not active.
- Cruise control mode not active.
- Accelerator pedal in idling position.
- Coolant temperature must be above 50°C (122°F).
- Vehicle must be at a standstill.
- No fault codes in existence.

Other Functions

The EECU guides the EUIs based on the following "control functions."

Smoke limitation — To prevent injecting too much fuel into the cylinder, the EECU checks:

- Boost pressure
- Engine speed
- Boost air temperature

PTO engine speed — The engine can be kept at a constant rpm level that is at least 100 rpm greater than low idle and less than high idle.

Cruise control — The engine can be set to maintain a constant speed between 48 km/h (30 mph) and 140 km/h (87 mph). For the cruise control mode to function, the following conditions must be satisfied:


- Cruise control in **ON** position.
- Brake pedal must not be depressed.
- Clutch pedal must not be depressed.

Speed limitation — The EECU can be programmed to limit the maximum speed up to 140 km/h (87 mph). A fault on the sensor signal and/or a faulty cable to the EECU generates a fault code.

Differentiated speed limitation — This mode is available as an option. It limits the speed to various levels depending on the gear selected. In other words, each gear has a maximum speed.


Engine protection — To a certain extent, the EECU can also protect the engine by:

- Reducing engine speed at low coolant temperatures (cold engine cranking): When coolant temperature is lower than 50 °C (122 °F), engine speed is limited during a specific time to 1000 rpm immediately after starting. At -20 °C (-4 °F) and lower, this period is 16 seconds, and above 50 °C (122 °F) the period is 0 second. This function allows oil pressure to build up before engine speeds become too high.
- Reducing engine output at high coolant temperatures (during engine operation): Should coolant temperature exceed 102 °C (216 °F), the maximum fuel provision is reduced by a certain percentage of its original rating and the coolant temperature warning lamp lights up. If the coolant temperature becomes **excessively** high, the engine will gradually reduce power to 50%. When coolant temperature has dropped below 100 °C (212 °F), maximum fuel provision is permitted again and the coolant temperature warning lamp goes out.

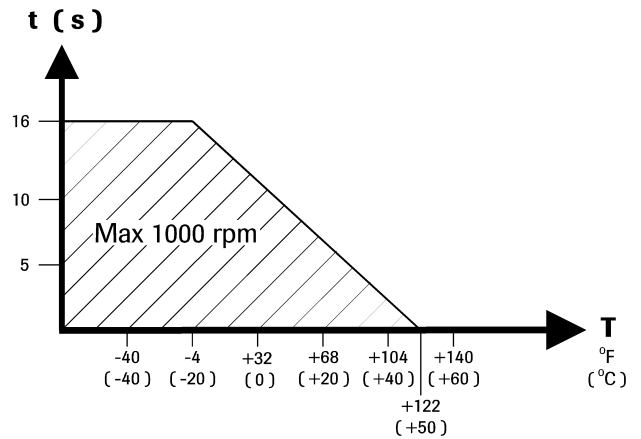

W2000768

Engine speed during cold cranking

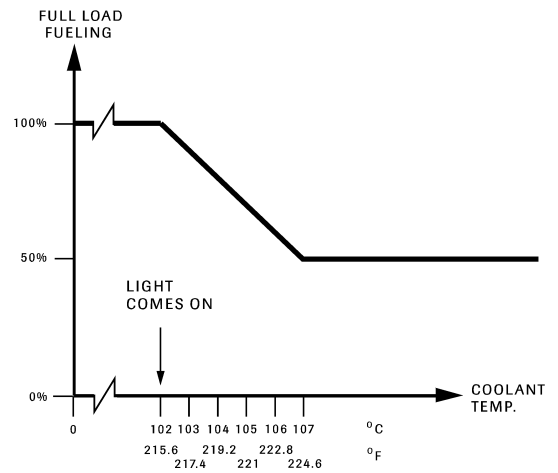

W2000769

Engine speed during operation

The safety signal is an optional system that enables the EECU too switch off the engine. The EECU can be programmed to provide three levels of engine protection:

- No engine protection (fire engine)
- Engine protection
- Extended engine protection

Idle shutdown — This function is available as an option. It switches off the engine after it has run at idling speed for a specific time. This time can be set to between 1 and 40 minutes. The engine will be switched off if the following conditions are met:

- Vehicle speed is 0.
- Parking brake is applied.
- Engine running at idle speed.
- Coolant temperature is above 45 °C (113 °F).

Cold starts, idling — Idling speed is automatically boosted to heat the engine more quickly from a cold start when coolant temperature is below a specific level. When this mode is activated, idling speed is boosted to 650 rpm. When coolant temperature has reached 30 °C (86 °F), idling speed drops steadily to its normal level which is reached at a coolant temperature of 45 °C (113 °F).

Starting the engine

Before any fuel can be injected into the cylinders, the EECU must have had a sufficient amount of time to carry out the first calculations on injection angles and fuel quantities. This time is equivalent to two engine revolutions.

VEB (VOLVO engine brake)

The VEB consists of an exhaust brake and a compression brake. The EECU activates the VEB when the following conditions are satisfied:

- Accelerator pedal at idling position (fuel injection must not occur).
- Engine speed must exceed 1200 rpm.
- Clutch pedal must not be depressed.
- Boost pressure must be lower than 152 kPa (22 psi) (overpressure).
- PTO not activated.
- Vehicle speed is greater than 3.2 km/h (2 mph).
- ABS not activated.
- Engine coolant temperature is greater than 40 ± 2 °C (104 ± 5 °F).
- Engine oil temperature is greater than 55 °C (130 °F).

The VEB may be activated when the cruise control is in use. For this to take place, the following condition must be satisfied:

- Vehicle road speed must exceed the set speed of the cruise control by between 5 and 30 km/h (4 and 20 mph), depending on what level has been programmed into the EECU.

Idle Speed Adjustment

Note: This service information should be considered supplemental to the Engine Control information for base D12 B and C engine.


The idle speed is adjusted on the VN vehicles at the turn signal stalk. The idle speed can be adjusted between 500 RPM and 650 RPM.

Prerequisites to adjusting idle speed:

- Accelerator pedal not depressed.
- Engine temperature above 45 °C (113 °F).
- Vehicle is stationary / Parking brake set.

Idle speed adjustment


- 1 Cruise control in the ON position.
- 2 Depress the brake pedal and continue to hold it during the entire adjustment procedure.
- 3 Move the ON/OFF switch to the RESUME position and hold for four seconds. Release the switch; the engine speed will drop to approximately 500 RPM.
- 4 The idle speed can be adjusted with the SET switch. Each time the SET switch is pressed, the idle speed will increase approximately 10 RPM.
- 5 Move the ON/OFF switch to the RESUME position and the idle speed will decrease approximately 10 RPM each time.
- 6 Hold in the SET switch and move the ON/OFF switch to the RESUME position and hold them in position for four seconds. Release the switches
- 7 Release the brake pedal and the new idle speed is set. If an error was made during the adjustment procedure, the default idle speed will be maintained.

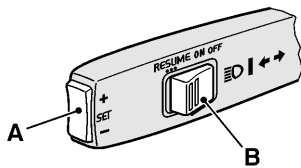

T3014326

- 1 **A**-Set
- 2 **B**-Resume, On/Off

ABS Brake System ECU

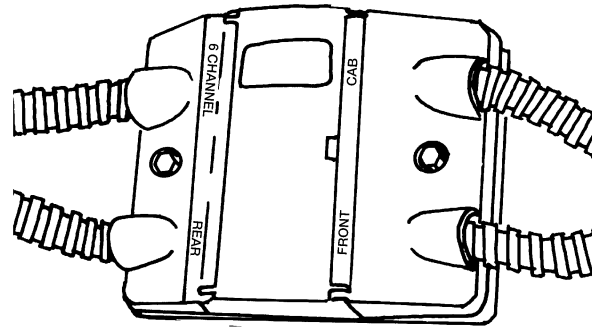


The ABS ECU continuously monitors wheel speed and helps to control braking in extreme situations. It also helps prevent wheel spin in vehicles equipped with traction control systems (ATC or TCS).


The ABS ECU is connected to the J1939 control data link and the J1587/1708 information data link.

Note: Early production model ABS ECUs may be connected to the J1587/1708 and J1922 data link or have no data link connection at all.

For detailed information about ABS systems see the appropriate service literature for the type of ABS system used on the vehicle.

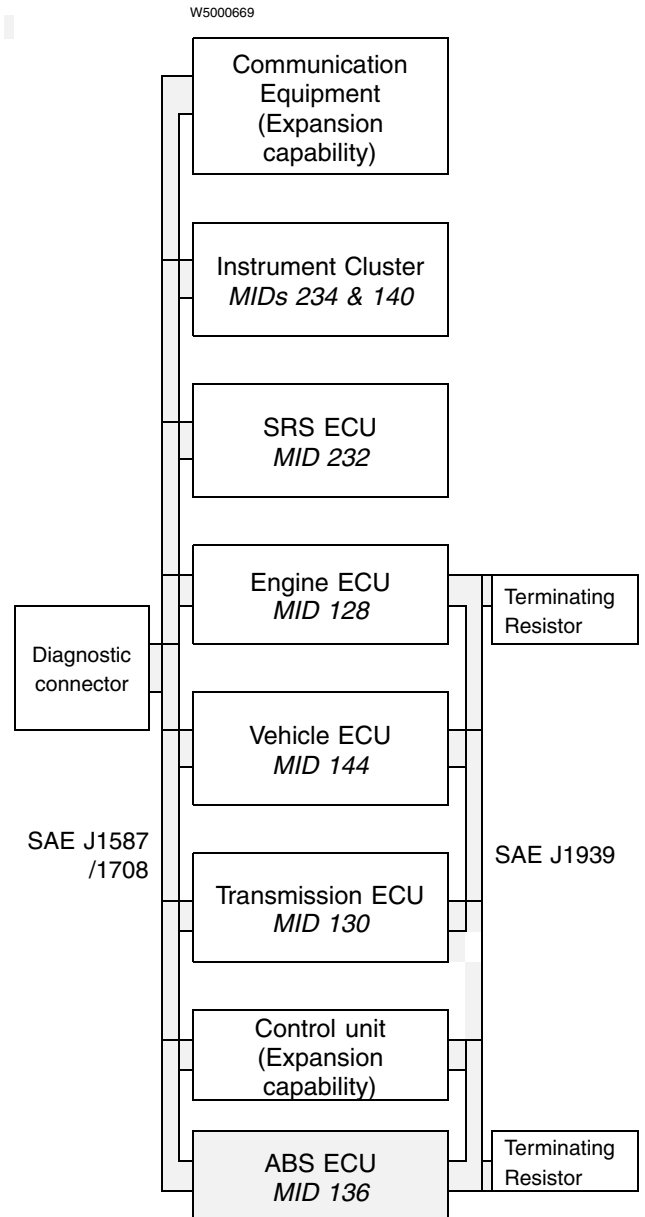


SRS Airbag ECU

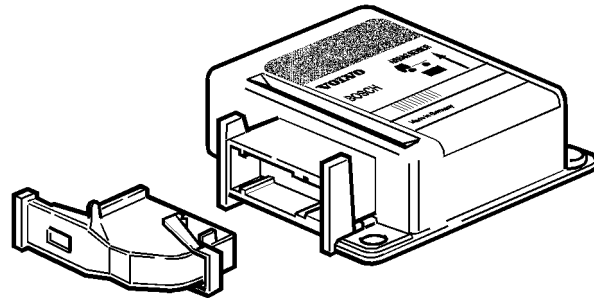


The Supplemental Restraint System (SRS) ECU senses frontal collisions with two rapid deceleration sensors. The SRS ECU will deploy the airbag module in the steering wheel if a collision of sufficient force and duration is detected.

The SRS ECU is connected to the J1587/1708 information data link. For detailed information about the SRS see *Supplemental Restraint System (SRS), VNL, VNM*, Volvo service publication number PV776–TSP21771/1.

Note: The SRS system is not available on all models.

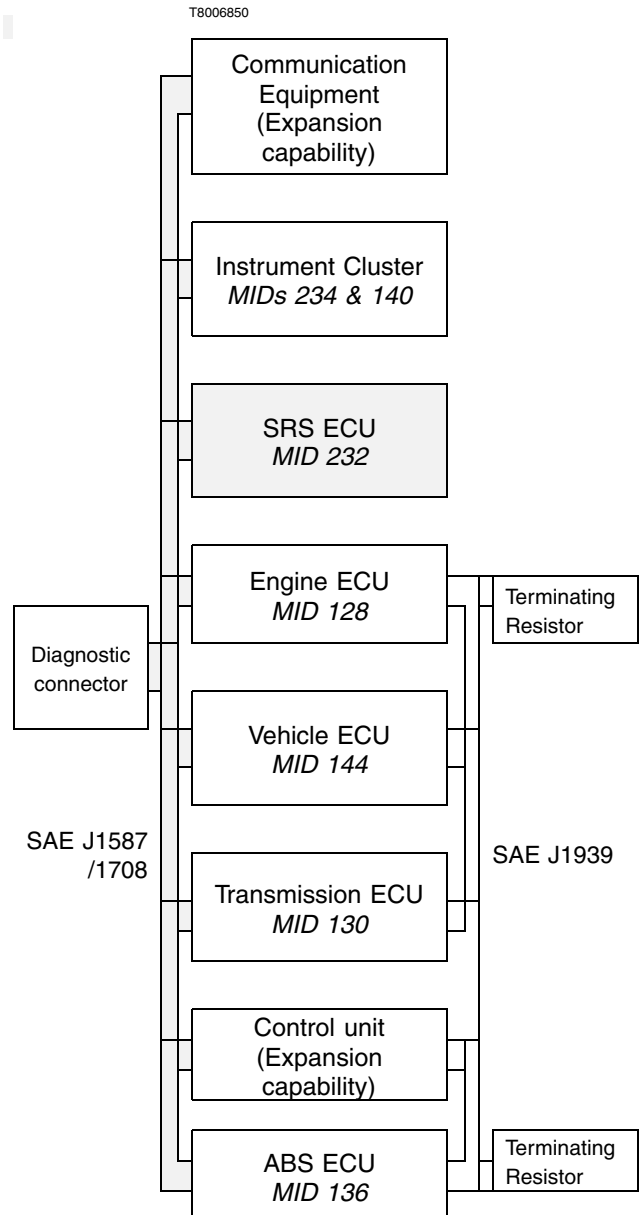

Transmission ECU

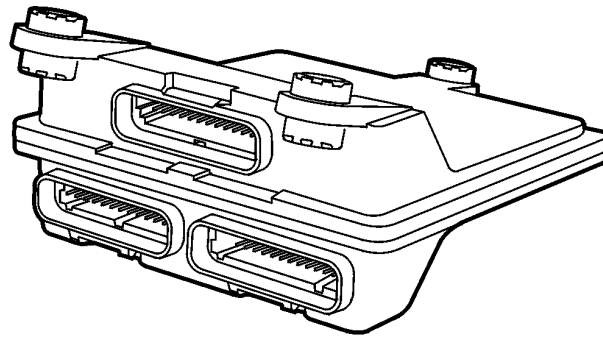


The transmission electronic control unit (ECU) receives signals directly from switches and sensors and via the data links. Based on those inputs, the transmission ECU controls transmission operation via solenoid valves and switches. The transmission ECU also supplies system status and diagnostic information.

The transmission ECU is connected to both the J1939 control data link and the J1587/1708 information data link.

Note: Early production model transmission ECUs may be connected to the J1587/1708 and J1922 data links.

For detailed information about transmission ECUs see the service literature for that particular transmission.

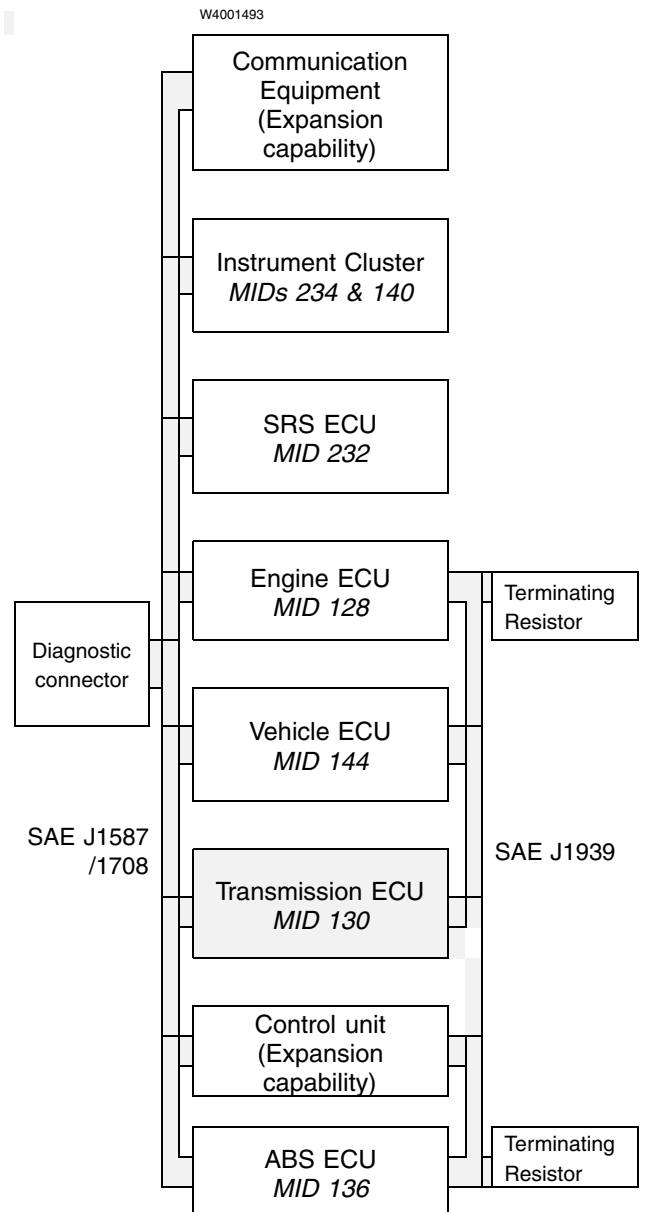

Breakout Boxes and Harnesses

The harness adapters are used to gain access to the EECU, the VECU, the throttle pedal and certain other sensors on the engine, while the circuit is intact. This allows the technician and vehicle to take measurements on functional circuits.


Example:

The **36-pin breakout box** allows the technician to measure resistance and voltage on the EECU's EA connector (which covers the engine mounted components) and the EB connector (which covers the remaining components involved).




CAUTION

Check that the proper cable and connector location is observed and used while connectin to the ECU. Otherwise, damage to the ECU or tool will occur.

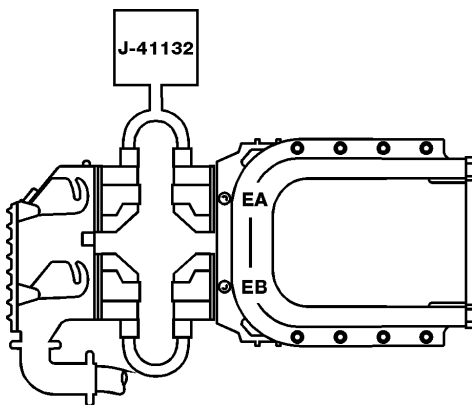

W2002712

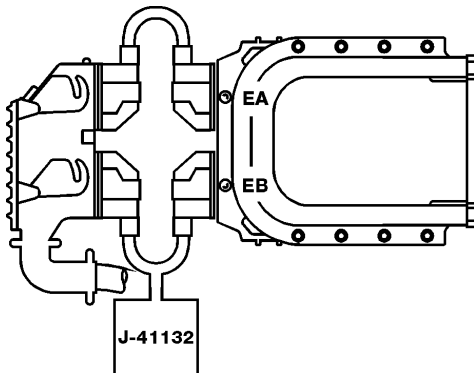

W2002710

VECU Overview

The Vehicle Electronic Control Unit (VECU) receives inputs and generates output signals for functions associated with cab devices. It also converts information into digital data to be broadcast over the J1587/1708 Information Link and the J1939 Control Link.

Note: The VECU may also be referred to as the “Cab Controller” on the graphics display of the VN series dash and in some Volvo publications.

VECU Programming


Each VECU is programmed with specific vehicle performance characteristics corresponding to customer-ordered options for that particular vehicle. This dataset is stored in the VECU memory, making the VECU unique to each vehicle.

For this reason, it is not possible to “swap” a suspected faulty VECU with one from another vehicle without reprogramming the replacement VECU.

Replacement VECUs are programmed using the VCADS Pro tool. Programming is based on the particular dataset that matches the vehicle; datasets are stored in the Volvo Data Administration (VDA) database. Authorized technicians can update and/or alter software datasets, change customer parameters, and perform campaigns.

For more information about the proper operation of the VCADS Pro tool and VECU programming, please refer to Information on VCADS Pro in Group O. This manual is also available as a pdf file within VCADS Pro tool located under Help.

Note: Customer parameter changes are not stored in the VDA database. Therefore, after a replacement VECU is programmed for the vehicle, it will have to be customized to include those customer alterations.

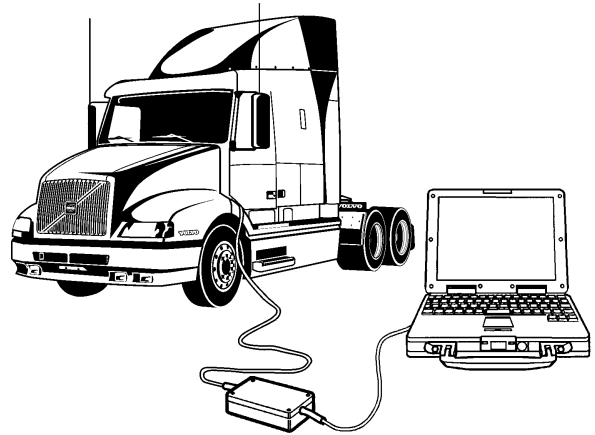

W0001632

VECU Functions

The following functions are monitored or controlled by the VECU. Only the functions needed for each specific vehicle/engine application are wired and programmed into the VECU.

Accelerator Pedal

The accelerator pedal signals travel first to the VECU and are transferred to the Engine Electronic Control Unit (EECU) via the J1939 Control Link.

If there is a fault in the J1939 Control Link, the accelerator pedal signal travels to the EECU via the J587/1708 Information Link. The vehicle can also be driven in the “limp home” mode if there is a fault in both links. In this situation, the idle validation switch is used to determine when the accelerator pedal is pressed; then, the VECU sends a buffered idle validation switch signal (via hard wire) to the EECU.

Second Accelerator Pedal

If the vehicle is equipped with a second accelerator pedal, the second accelerator pedal signals travel first to the VECU and are transferred to the Engine Electronic Control Unit (EECU) via the J1939 Control Link.

A road speed limit may be programmed into the VECU to limit vehicle speed when the second accelerator pedal is being used. Second accelerator pedal road speed limit can be programmed using the VCADS Pro tool.

Speedometer

The speed signal comes from a sensor on the transmission or as a digital signal, if an electronically-controlled transmission (Allison) is used. The VECU then sends the vehicle speed signal on both the J1939 Control Link and J1587/1708 Information Link. The signal on the J1939 Control Link is used to control vehicle operation. The signal on the J1587/1708 Information Link is collected by the instrument cluster and is displayed on the speedometer.

Cruise Control

The VECU receives signals from the cruise control switch and sends signals to the EECU via the J1939 Control Link. Cruise control parameters can be programmed with the VCADS Pro tool.

Power Take-Off (PTO)

PTO functions are controlled by the VECU through the cruise control switch. Basic or optional PTO parameters can be programmed with the VCADS Pro tool.

Ignition Switch

Ignition switch positions are recognized by the VECU, which transfers the ignition switch position information to the EECU.

Idle Shut-Down

Timed engine shut-off can be controlled by the VECU as a customer option. Idle shut-down time can be programmed with the VCADS Pro tool.

Engine Brake

The control for the engine brake (including the exhaust pressure governor [EPG] and compression brake [VCB], if installed) are monitored by the VECU. At the request of the ABS ECU, the VECU can de-activate the engine brake.

Windshield Wipers

Windshield wiper function on the VN and VHD (with Volvo engine) is controlled by the VECU using signals received from the wiper switch.

Calibration Number

The calibration number (K factor) is a measurement of "Drivetrain Constant Pulses per Mile" and is used by the VECU to determine vehicle speed and distance traveled. The calibration number is calculated by multiplying "tire revolutions per mile" x "rear axle ratio" x "number of teeth on the transmission output shaft chopper wheel."

The calibration number is programmed into the VECU using the VCADS Pro tool.

Optional Engine Speed Limit

Optional engine speed limit is the maximum speed at which the engine can be operated with the vehicle at zero road speed and the PTO mode engaged. Optional engine speed limit parameters can be programmed with the VCADS Pro tool.

Optional Vehicle Speed Limit

Optional vehicle speed limit allows for an optional switch to limit vehicle speed. Typically, this switch is operated on the vehicle by someone other than the driver, such as a garbage collector who rides on the back of the vehicle. Optional vehicle speed limit parameters can be programmed with the VCADS Pro tool.

Note: Basic vehicle speed limit is set by the EECU.

Shut-Down Request

Optional engine shut-down request is made via a remote mounted switch (the ignition switch is the basic engine shut-down request). After the VECU receives the shut-down request, the request is sent to the EECU via the J1939 Control Link. Shut-down request is enabled using the VCADS Pro tool.

Note: The engine shut-down request function should not be considered or used as an emergency shut-down.

Torque Limit

Torque limit 1 and 2 are used to limit drive line torque. Torque limit parameters can be programmed with the VCADS Pro tool.

Engine Fan Request

The VECU receives the request for engine fan operation from either a manual switch or a high pressure A/C refrigerant switch. The VECU then transfers the request to the EECU via the J1939 Control Link.

Brake/Clutch Status Switches

The VECU recognizes the position of the brake, clutch, and parking brake. Various VECU functions (i.e. cruise control or PTO) operate only when these switches are in the proper position.

Safety Warnings/Cautions


- Always wear approved eye protection.
- To avoid personal injury and damage to the vehicle, always refer to and follow the vehicle manufacturer's WARNINGS, CAUTIONS, and service procedures.
- Unless otherwise directed, turn the ignition switch **OFF** before disconnecting or connecting any electrical components.
- Read and understand the manual provided with the tool before operating your Pro-Link® 9000.
- VGHT recommends an assistant drive the vehicle while you use the Pro-Link® 9000.
- Never leave the vehicle unattended while testing.

VCADS Pro

From the VCADS Pro Main Menu, VCADS Pro Test, Calibration, Programming and Job Cards are started. In addition, a number of settings can be done, i.e. the selection of language. Ensure your “language” is selected to get the right tests for your country’s vehicle variant.

Do one of the following to start an application:

- Select the application in the menu Select application. When highlighted press “Enter”.
- Click the program’s function button in the toolbar; test (1), calibration (2), programming (3) and job card (4).
- Double click the desired program in the function tree.

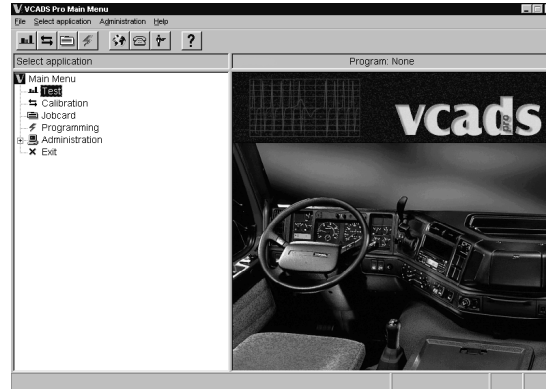


T0009469

The following can be performed in the Administrative functions

- Language selection
- Selection of screen saver and screen saver delay.
- Selection of background image.
- Selection of default application.
- Update the system. Get a new program version of VCADS Pro from Volvo via connection to the central systems.
- User administration. Select the user to change the password for. This function requires authorization and is not available to all users.
- General administration. Selection of communication method, vehicle/machine type and activation/deactivation of the simulator is possible.

Sensor Locations

VN/VHD Sensors and Switches

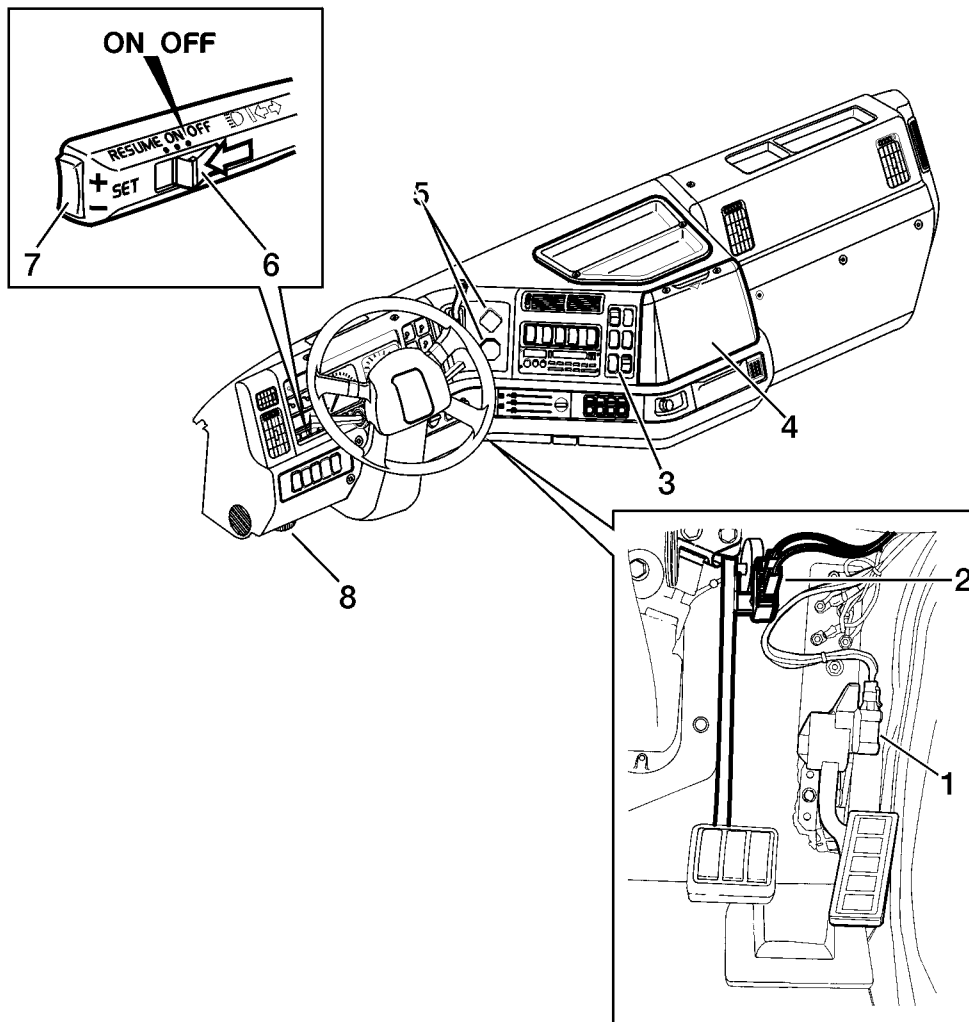


Inside cab

- 1 Throttle position sensor
- 2 Microswitch(service brake)
- 3 Engine/Exhaust Brake
- 4 VECU
- 5 Pressure Switch-Parking and Service Brake
- 6 ON/OFF—Resume Switch
- 7 Resume Switch
- 8 Diagnostic connector

W2003551


D7C

- 1 EECU connector EA/EB
- 2 EPG solenoid
- 3 Boost pressure/temperature sensor
- 4 Oil pressure/temperature sensor
- 5 Engine timing (crank) sensor
- 6 Engine electronic control unit (EECU)

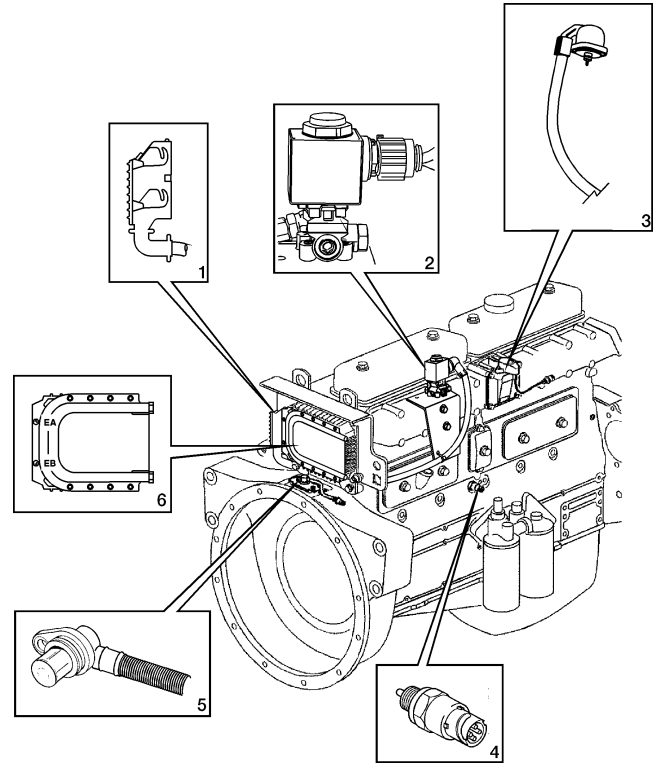

W2002748


- 1 Needle lift sensor (at injector #1)
- 2 Coolant temperature sensor
- 3 Redundant engine speed sensor (1); Fuel pressure/temperature sensor (2); Fuel shut-off valve (3); 7-pin connector (4), includes rack drive, rack position sensor, and timing sleeve

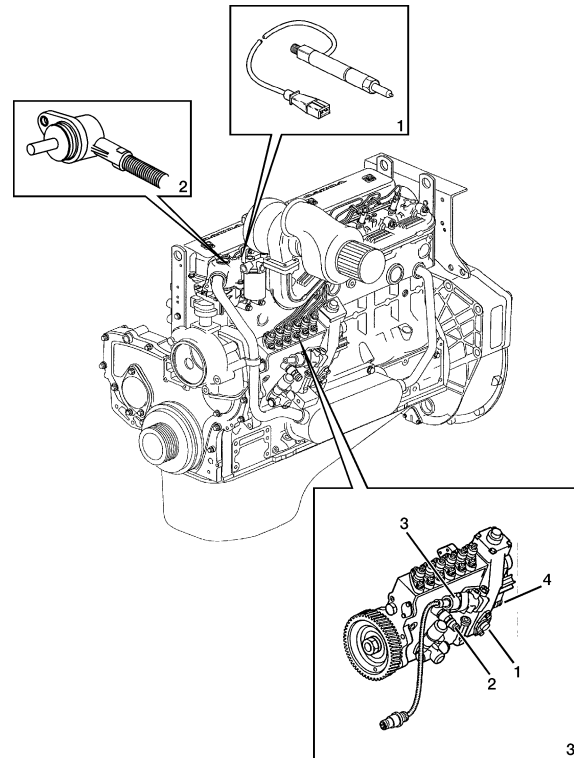


W2002749

D12B

- 1 Boost pressure/temperature sensor
- 2 Coolant temperature sensor
- 3 Oil pressure/temperature sensor
- 4 Engine timing (crank) sensor
- 5 Engine electronic control unit (EECU)
- 6 EECU connector EA/EB
- 7 Engine position (cam) sensor

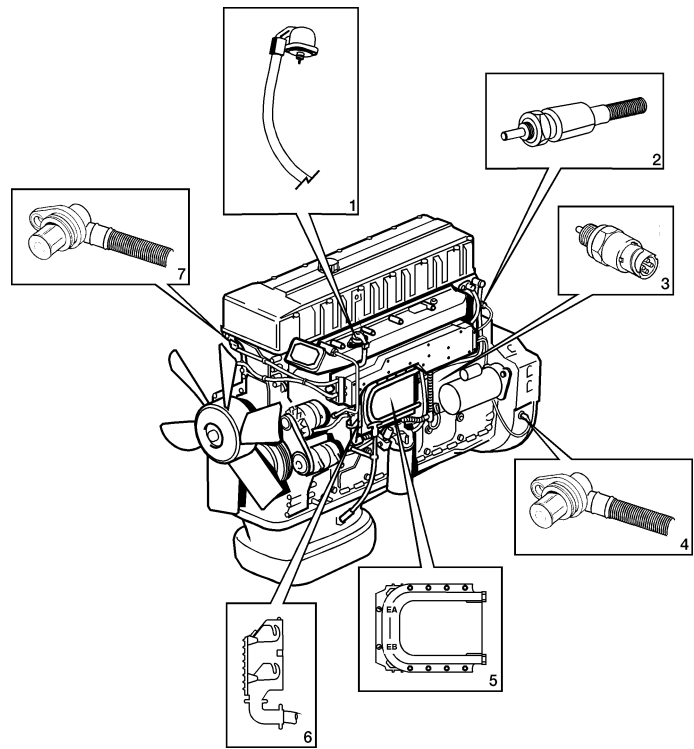


- 1 Compression brake, VCB (under valve cover)
- 2 EPG control (PWM box)

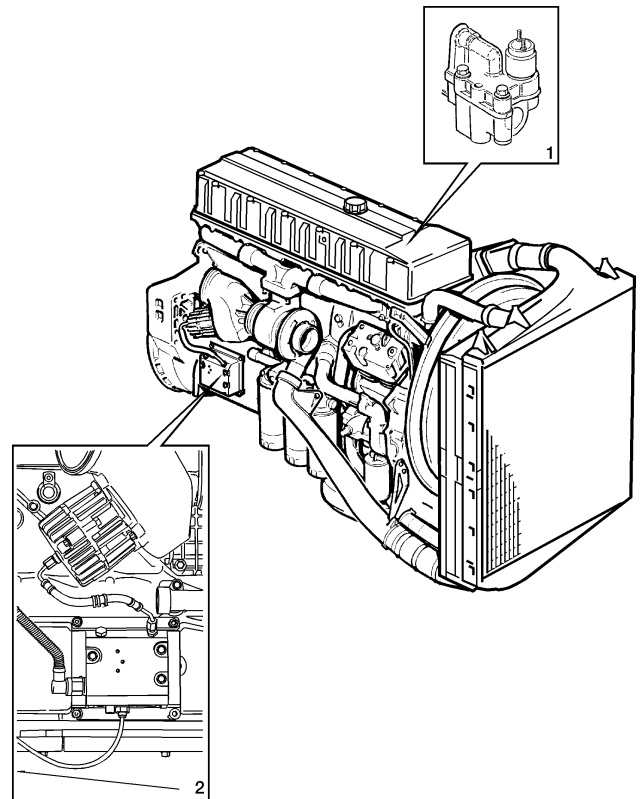

W2002745

W2002746

D12C

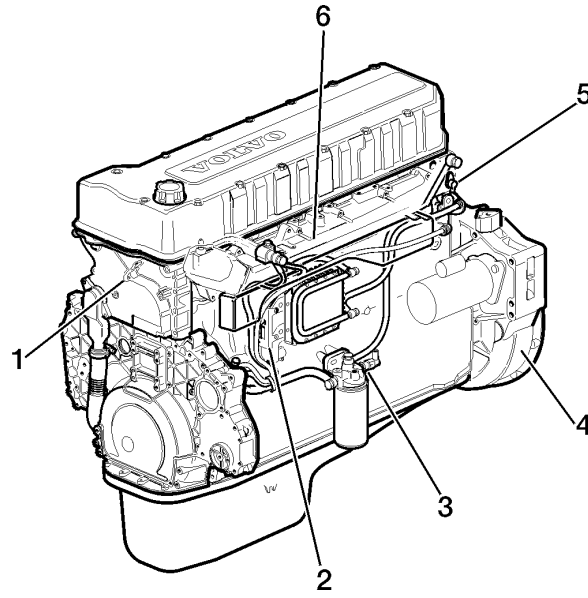

W2003550

Fig. 10: Engine electronic control unit (EECU) sensor locations D12C

Several engine sensors send signals to the EECU. They are:


- 1 **Cam Sensor (timing gears)**—This sensor determines which cylinder is in line for injection. It detects the camshaft's position via a pole wheel bolted to the camshaft drive gear.
- 2 **Oil Pressure/temperature sensor (cylinder block)**—This combined sensor monitors oil pressure and oil temperature.
- 3 **Fuel Pressure/Temperature Sensor** — Monitors the fuel pressure and fuel temperature
- 4 **Crank Sensor (flywheel housing)** — This sensor detects the crank-shaft's position and speed, via teeth in the flywheel. Detects Engine RPM's.
- 5 **Coolant Temperature Sensor (cylinder head)**— This sensor monitors coolant temperature.
- 6 **Intake Manifold Pressure (intake manifold)**—This is a combined sensor that monitors both the intake manifold air pressure and temperature.

Control Unit Locations

VN/VHD: Cab and Engine Compartment

The diagram shows the normal location of the different control units on a VN vehicle equipped with a Volvo engine.

Control units may vary slightly in location, depending on vehicle and component type (variant). The locations are virtually the same on a VHD vehicle.

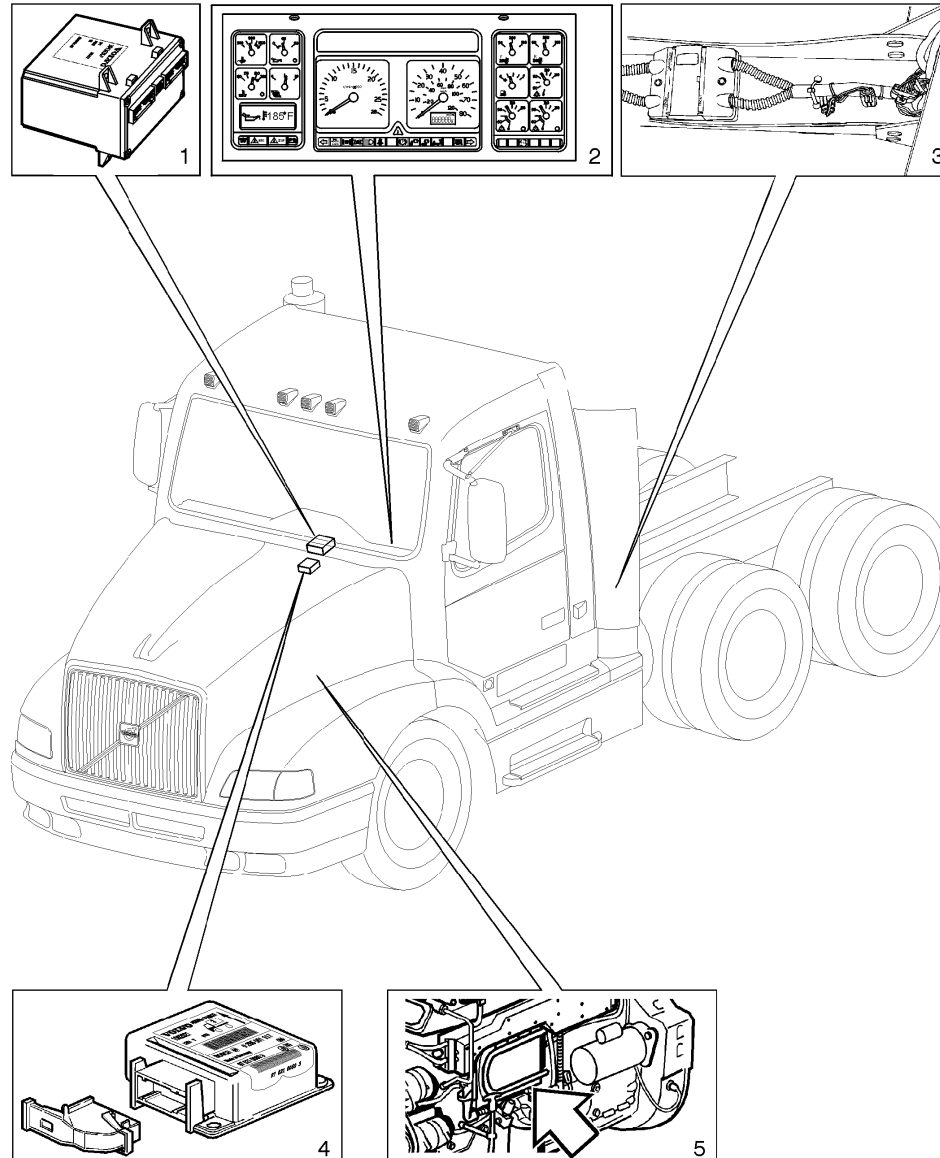


W3003955

- | | | | |
|---|--|---|---------------------------------------|
| 1 | Vehicle electronic control unit (VECU) | 4 | SRS control unit |
| 2 | Instrument cluster | 5 | Engine electronic control unit (EECU) |
| 3 | ABS control unit; crossmember located toward rear of cab | | |

WG/AC: Cab and Engine Compartment

The diagram shows the normal location of the different control units on WG and AC vehicles.

Control units may vary slightly in location, depending on vehicle type (variant).

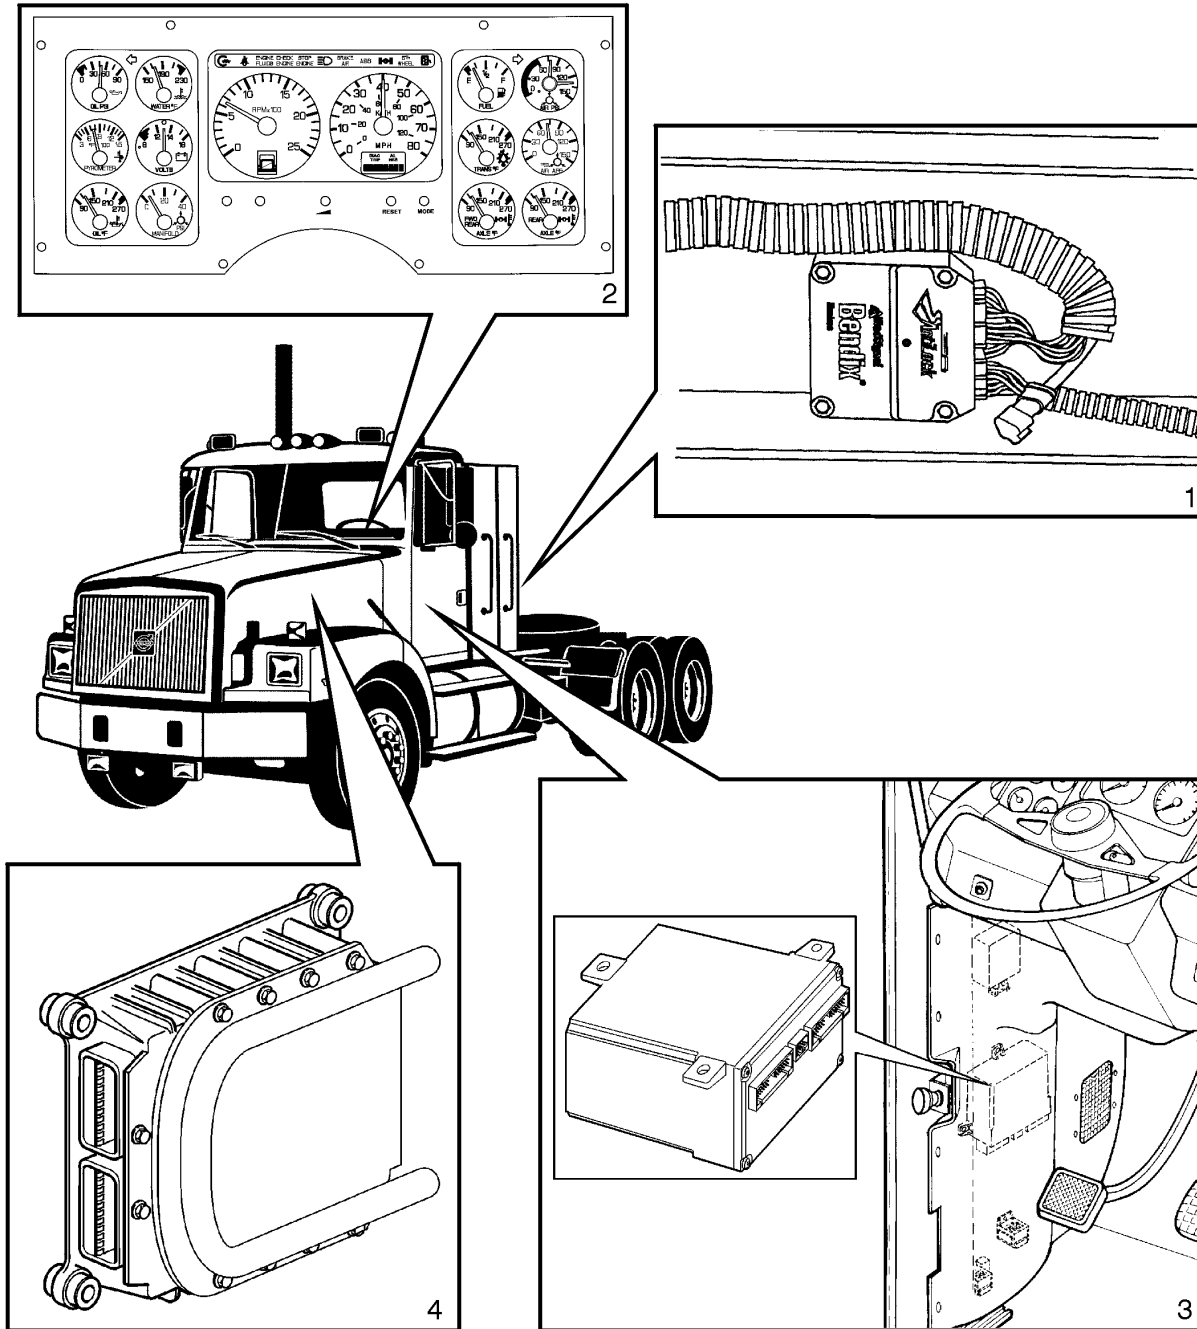

W3003963

1 ABS control unit, on right side frame rail

2 Instrument cluster


3 Vehicle electronic control unit (VECU)

4 Engine electronic control unit (EECU)

WX/WXLL: Cab and Engine Compartment

The diagram shows the normal location of the different control units on a WX or WXLL vehicle.

Control units may vary slightly in location, depending on vehicle type (variant).

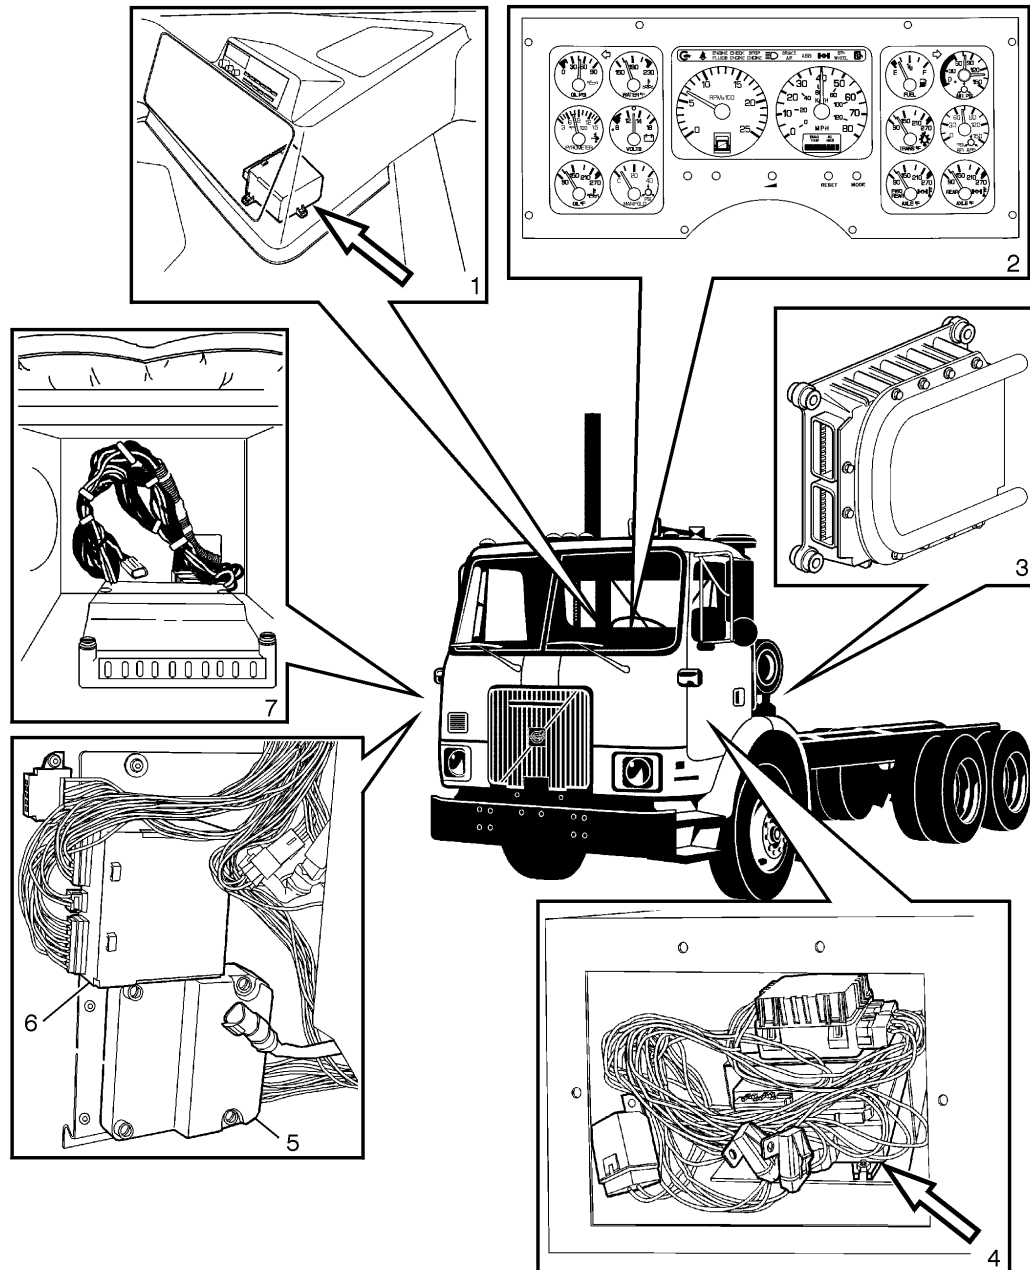


W3003961

- | | |
|--|---|
| <ul style="list-style-type: none"> 1 Vehicle electronic control unit (VECU), location in WX narrow cab only 2 Instrument cluster 3 Engine electronic control unit (EECU) 4 Transmission ECU, under driver's seat | <ul style="list-style-type: none"> 5 ABS control unit, right side engine tunnel 6 VECU, WX and WXLL, right side engine tunnel 7 ABS control unit, location in WX narrow cab only |
|--|---|

WXR: Cab and Engine Compartment

The diagram shows the normal location of the different control units on a WXR vehicle.

Control units may vary slightly in location, depending on vehicle type (variant).

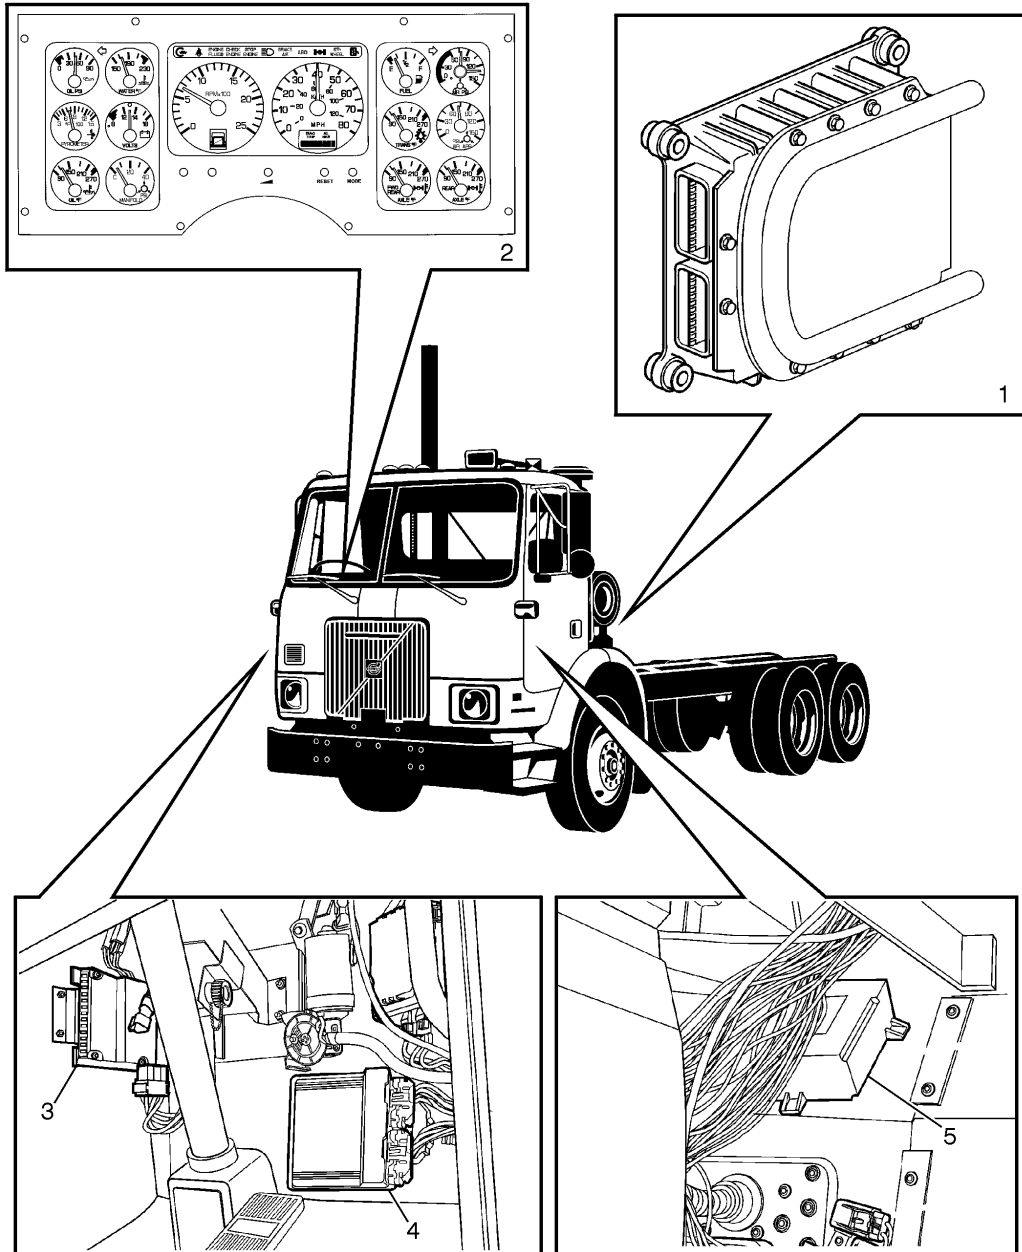


- 1 Engine electronic control unit (EECU)
- 2 Instrument cluster
- 3 ABS control unit

- 4 Transmission ECU
- 5 Vehicle electronic control unit (VECU) — on left side of cab, below center dash panel


W3003962

Fuses and Relays

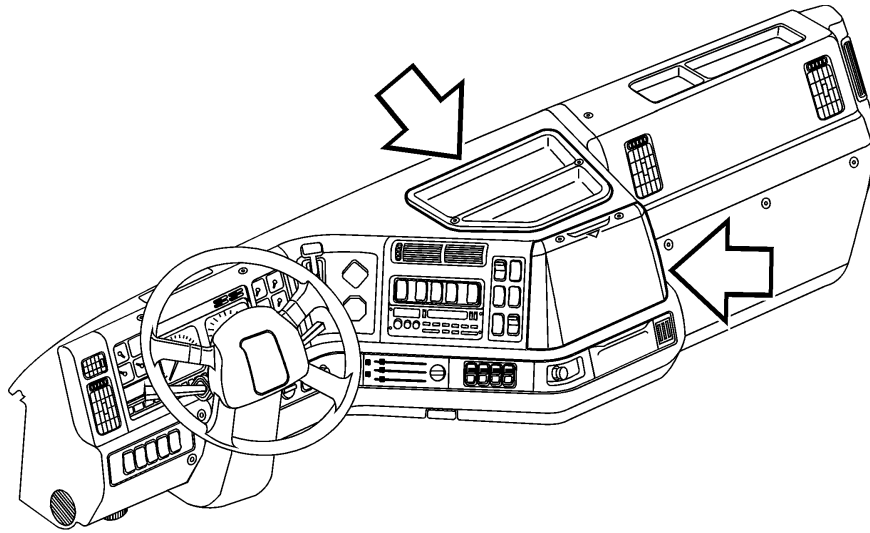

W8000923


The VN/VHD vehicles have easy access to the TEC panel. Fuses and relays are easily identified by referring to the decals inside the TEC covers.

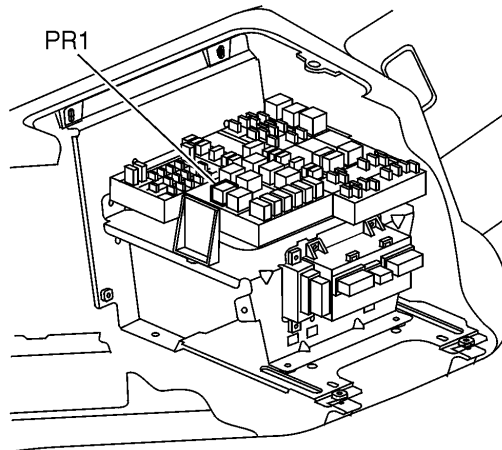

W3004398

VN

Note: Refer to the decal inside the TEC cover for vehicle's exact fuse descriptions and ratings.

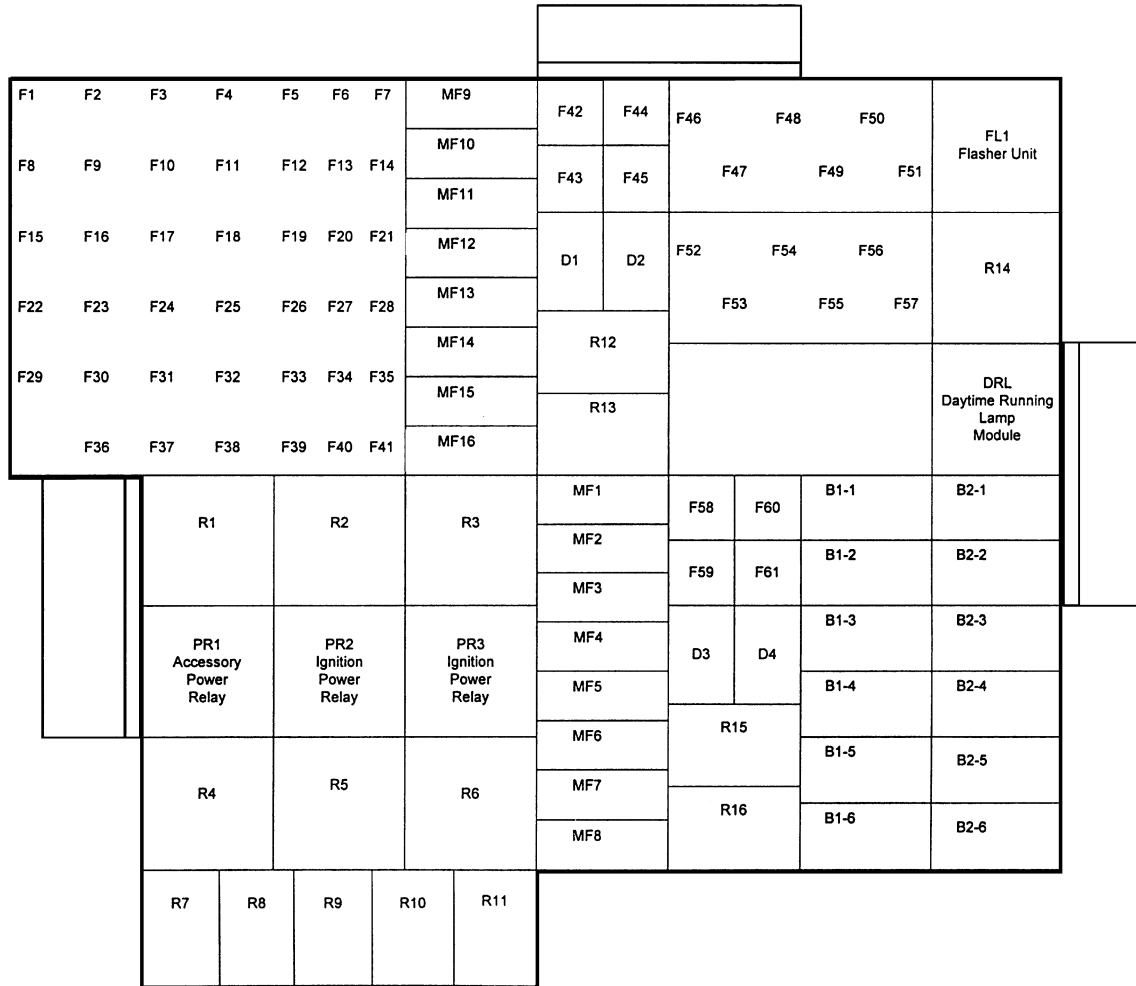

W3002729


Fig. 11: Fuse and Relay Positions (in the top TEC panel, VN)

- B1-1 through B1-6** Ignition Expansion Blocks
- B2-2 through B2-4** Battery Expansion Blocks
- PR1** Accessory Power Relay
- PR2, PR3** Ignition Power Relays

One Accessory and two Ignition Power relays are used to transfer the heavy current load coming from the battery to the Ignition/Accessory circuits. These relays are located on the TEC tray for easy access and replacement.

VHD

Note: Refer to the decal inside the TEC cover for vehicle's exact fuse descriptions and ratings.

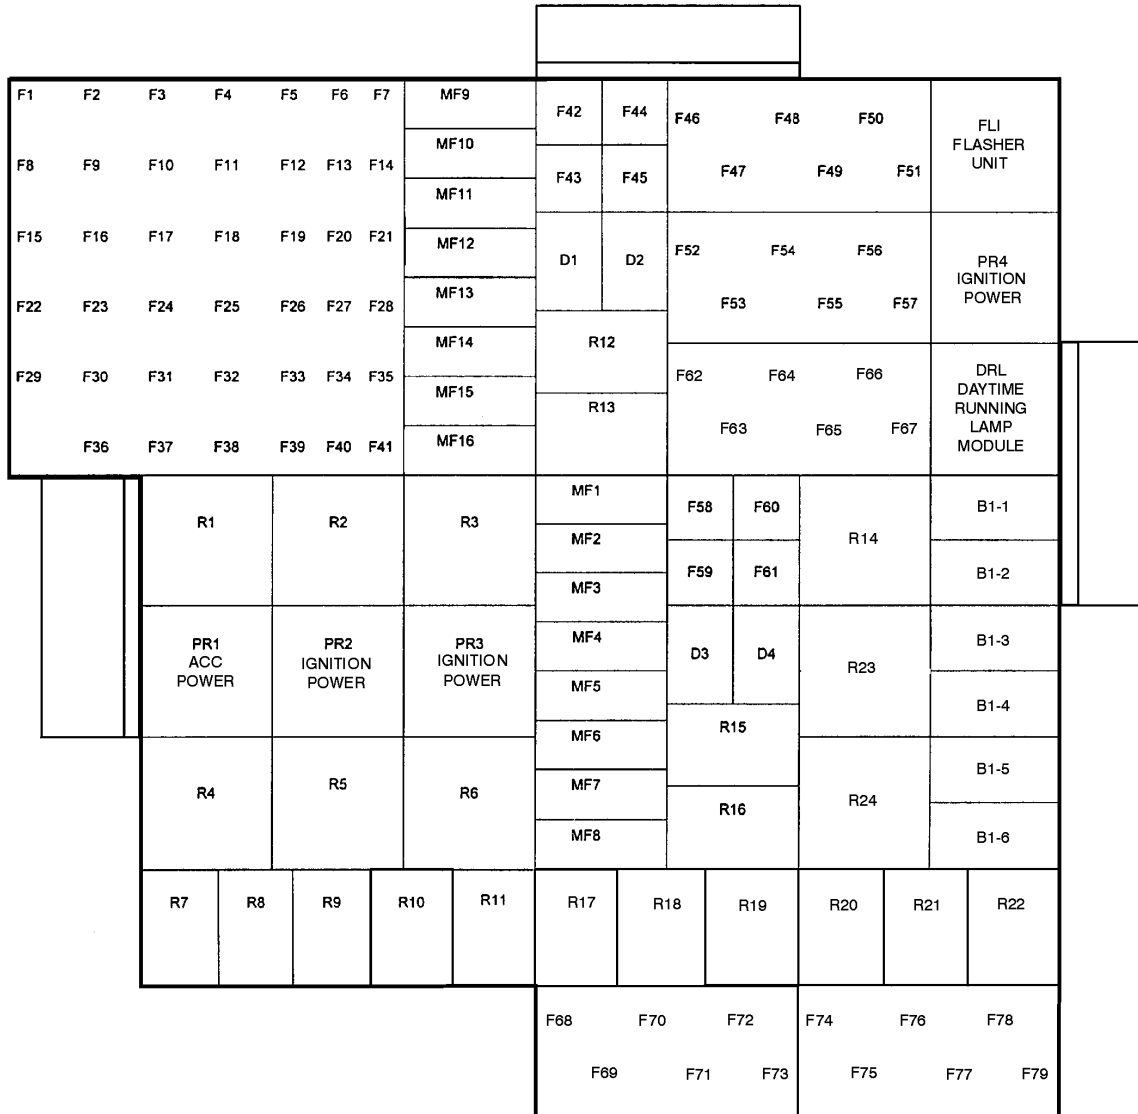

W3004362

Fig. 12: Fuse and Relay Positions (in the top TEC panel, VHD)

- B1-1 through B1-6** Battery and Ignition Expansion Block
- PR1** Accessory Power Relay
- PR2, PR3, PR4, R24** Ignition Power Relays

One Accessory and four ignition Power relays are used to transfer the heavy current load coming from the battery to the Ignition/Accessory circuits. These relays are located on the TEC tray for easy access and replacement. PR4 is used in the VHD bodybuilder applications

Troubleshooting

Fault Code Troubleshooting

Message and Parameter Descriptions

MID's (message ID's)	Description
128	EECU (Engine Electronic Control Unit)
232	SRS (Supplemental Restraint System)
136	ABS (Antilock Braking System)
140	Instrument Cluster Center Module
234	Instrument Cluster Left Module
144	VECU (Vehicle Electronic Control Unit)
130	TECU (Transmission Electronic Control Unit)

PID's (Parameter ID's)	Description
84	Road Speed
91	% Accelerator Pedal
100	Engine Oil Pressure
102	Boost Pressure
105	Air Inlet Temperature
110	Engine Coolant Temperature
111	Coolant Level
173	Pyrometer
175	Engin Oil Temperature
190	Engine Speed

PPID's (Proprietary Parameter ID's)	Description
69	Buffered idle switch
70	Pedal switches, supply
71	Cruise control and retarder, supply switch
72	Accelerator pedal and retarder, supply sensors
73	Accelerator control 2 and primary tank, supply sensors
75	Range inhibitor, status solenoid valve
77	Compressor, status solenoid valve
78	Interval wiper, status relay
79	Area inhibitor, status solenoid valve
86	Engine brake torque percent
109	EOG3 drive stage failure
121	MTE (Engine compressor control output) failure
122	VCB Engine compression brake
123	EPG2 Start and Warmhold
124	EPG1 Engine brake
125	EOL Enable failure
195	Proprietary Diagnostic Data Request Clear Count
196	Proprietary Diagnostic Data/Count Clear Response

FMI Table

SAE Standard

FMI value	SAE Text
0	Data Valid, but above normal operating range.
1	Data Valid, but under normal operating range.
2	Intermittent or incorrect data.
3	Abnormally high voltage.
4	Abnormally low voltage.
5	Abnormally low current or open circuit.
6	Abnormally high current or chort circuit.
7	Mechanical system no repsonse
8	Abnormal frequency or Pulse Width
9	Abnormal update rate
10	Abnormal change rate
11	Failure unkown
12	Bad device
13	Out of calibration
14	Special instruction (see Note)
Note: The special instruction FMI 14 is broadcast when the airbag has stored crash data.	

Engine-specific for Injectors

FMI value	Explanation
2	Short circuit to battery voltage, unit injector high side.
3	Short circuit to battery voltage, unit injector low side.
4	Short circuit to ground, unit injector high or low side.
5	Open circuit in the unit injector circuit.

Engine-specific for Injection Pump

FMI value	Explanation
2	Short circuit to battery voltage, injection pump high side.
3	Short circuit to battery voltage, injection pump low side.
4	Short circuit to ground, injection pump high or low side.
5	Open circuit in the unit injection pump circuit.
6	Short circuit to ground, injection pump high side.
8	Injection pump current too high for long period of time.

Reading/Clearing Fault Codes

Fault codes can be read and cleared using the VCADS Pro tool or the Pro-Link tool with Volvo application cartridge. See the appropriate service information for details on reading and clearing fault codes using VCADS Pro or Pro-Link tools.

On VN-series vehicles, fault codes also can be accessed, read, and cleared via the instrument cluster graphic display. Clearing fault codes is password protected. For information, see "Instrumentation VN, from 3/99 and VHD," Volvo Service Publication PV776–TSP139790."


The Data Link Instrument cluster used WX-series vehicles can access and read a limited number of fault codes. However, it does not have the ability to clear fault codes. For more information, see "Data Link Instrumentation," Volvo Service Publication PV776–381–620SM.

Fault Tracing Strategy

CAUTION

Check that the proper cable and connector location is observed and used while connecting to the ECU. Failure to do so may result in permanent damage to the ECU or the tool.

Generally, the fault tracing strategy employed in this section follows a set sequence in which measurements are taken at specific points in the vehicle wiring. The three basic elements in this strategy are:

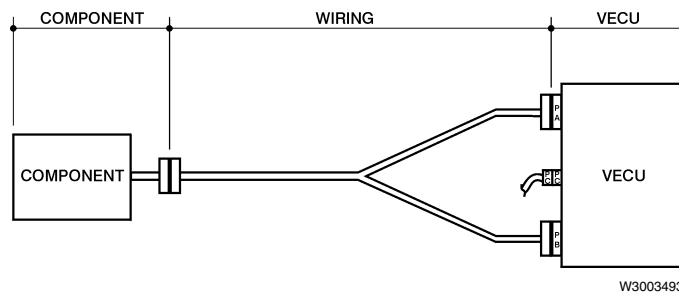

- 1 Vehicle Electronic Control Unit (VECU)
- 2 The actual component being tested (varies with each fault code)
- 3 Wiring between VECU and the component being tested


The following information describes the three test strategies:

- "Measurement at the Component's Connector, to the VECU" page 90
- "Check of Component" page 90
- "Check of the Subsystem" page 91

Measurement at the Component's Connector, to the VECU

In this procedure, the component is disconnected and measurements are made at specific pin locations on the wiring harness end of the connector. Measurements usually involve supply, ground, and signal wire connections through the wiring harness and VECU.

Breakout boxes or harnesses may be used to assist in taking measurements. Measurements outside "expected values" may indicate faults in the wiring or in the VECU itself

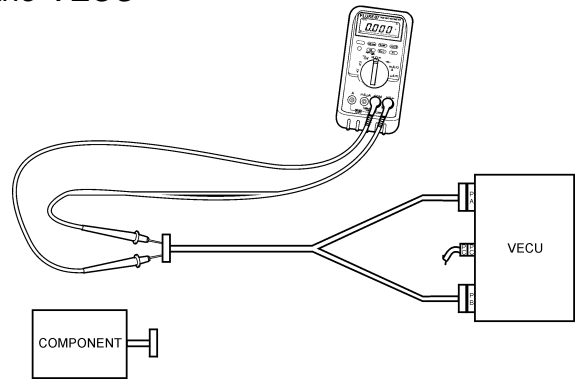


W3003494

Check of Component

In this procedure, the component is disconnected and measurements are made at specific pin locations on the component wiring harness or directly to the component. The component is usually a sensor or switch; it is identified at the beginning of each check.

Breakout boxes or harnesses may be used to assist in taking measurements. Measurements outside "expected values" may indicate faults in the component or in the wiring to the component.

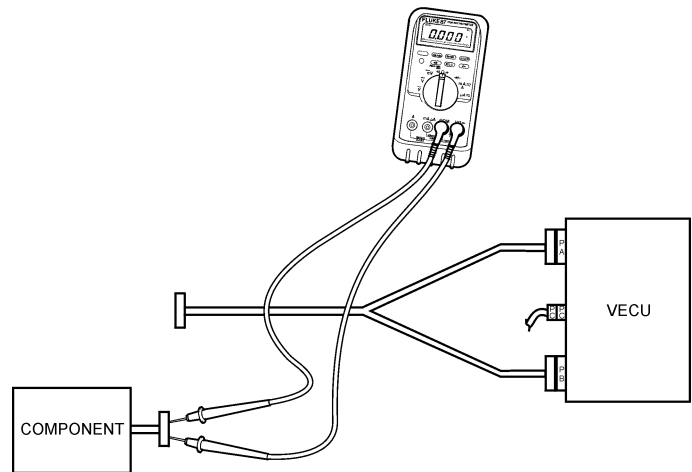

W3003495

Check of the Subsystem

In this procedure, the VECU is disconnected, a breakout box is connected between the VECU and wiring harness, and measurements are made at specific pin locations on the breakout box. This check is made to measure the voltage that is present at the VECU with the circuit intact.

Measurements outside “expected values” may indicate faults in the component, wiring, or VECU.


Tests Using the VCADS Pro Tool

The VCADS Pro tool is a Windows95®-based PC tool that is used to program, test, and read information from the VECU and EECU.

A number of “real time” tests can be performed by connecting the VCADS Pro tool to the vehicle’s diagnostic connector. If a test in the VCADS Pro tool may be of benefit when troubleshooting a specific fault code, that test will be referenced in the section titled, “Appropriate tests in the VCADS Pro tool.”

Note: Not all tests will apply to all vehicle variants. When starting VCADS Pro, menu selections for various vehicles and engines are entered. Only those tests that apply will be available for selection.

For information about the proper operation of the VCADS Pro tool, please refer to VCADS Pro Service Information in group 0.

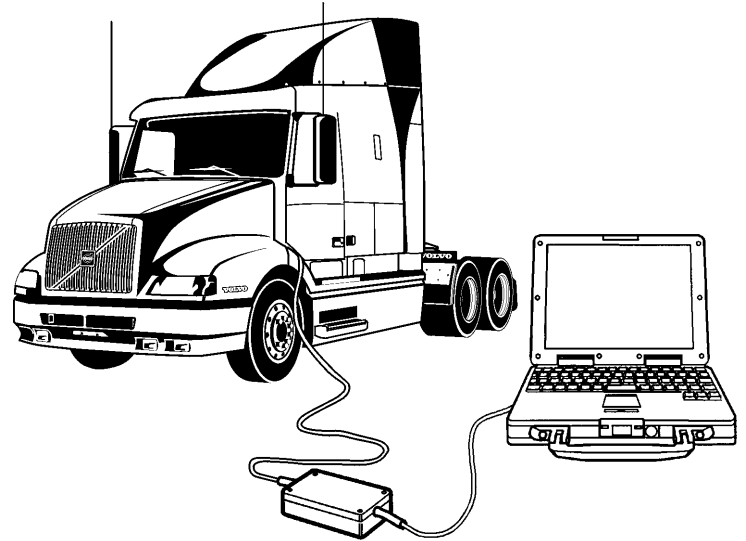

W0001632

MID 128 EECU

MID 128 Fault Code Table

MID:Message Identification Description.

SID:Subsystem Identification Description.

PID:Parameter Identification Description.

FMI:Failure Mode Identifier.

Error code	Component/Function	FMI	Section
MID 128-PID 45	Preheater Status	3, 4, 5	"MID 128 PID 45 Pre-heater Status" page 96
MID 128-PID 49	ABS Control Status	9	"MID 128 PID 49 ABS Control Status" page 98
MID 128-PID 84	Road speed	9, 11	"MID 128 PID 84 Road Speed" page 100
MID 128-PID 85	Cruise Control Status	9	"MID 128 PID 85 Cruise Control Status" page 102
MID 128-PID 91	Accelerator Pedal Position	9, 11	"MID 128 PID 91 Accelerator Pedal Position" page 104
MID 128-PID 94	Fuel Delivery Pressure (D7C and D12C only)	1, 3, 4	"MID 128 PID 94 Fuel Delivery Pressure" page 106
MID 128-PID 100	Engine Oil Pressure	1, 3, 4	"MID 128 PID 100 Engine Oil Pressure" page 110
MID 128-PID 102	Boost Pressure	3, 4	"MID 128 PID 102 Boost Pressure" page 114
MID 128-PID 105	Boost Air Temperature	3, 4	"MID 128 PID 105 Boost Air Temperature" page 118
MID 128-PID 107	Air Filter Differential Pressure	0, 3, 4, 5	"MID 128 PID 107 Air Filter Differential Pressure" page 122
MID 128-PID 108	Atmospheric Pressure	3, 4	"MID 128 PID 108 Atmospheric Pressure" page 125
MID 128-PID 110	Engine Coolant Temperature	0, 3, 4	"MID 128 PID 110 Engine Coolant Temperature" page 126
MID 128-PID 111	Coolant level	1	"MID 128 PID 111 Coolant Level" page 129
MID 128-PID 158	Battery Voltage	3	"MID 128 PID 158 Battery Voltage" page 131
MID 128-PID 172	Air Inlet Temperature	3, 4	"MID 128 PID 172 Air Inlet Temperature" page 133
MID 128-PID 174	Fuel Temperature (D7C and D12C only)	3, 4	"MID 128 PID 174 Fuel Temperature" page 136

Error code	Component/Function	FMI	Section
MID 128–PID 175	Engine Oil Temperature	0, 3, 4	“MID 128 PID 175 Engine Oil Temperature” page 140
MID 128–PID 228	Road Speed Sensor Calibration	11	“MID 128 PID 228 Road Speed Sensor Calibration” page 144
MID 128–PPID 86	Engine Brake Torque Percent	9	“MID 128 PPID 86 Engine Brake Torque Percent” page 146
MID 128–PPID 119	High Coolant Temperature	0	“MID 128 PPID 119 High Coolant Temperature” page 148
MID 128–PPID 122	VCB Engine Compression Brake (D12B and D12C only)	3, 4, 5	“MID 128 PPID 122 VCB Engine Compression Brake” page 151
MID 128–PPID 123	EPG 2 (D12B and D12C only)	3, 4, 5	“MID 128 PPID 123 EPG 2” page 153
MID 128–PPID 124	EPG 1	3, 4, 5	“MID 128 PPID 124 EPG 1” page 155
MID 128–SID 1-6	Injector (D12B and D12C only)	2, 3, 4, 5, 7, 11	“MID 128 SID 1/2/3/4/5/6 Injector” page 157
MID 128–SID 17	Fuel Shutoff Valve (D7C only)	3, 4, 5	“MID 128 SID 17 Fuel Shutoff Valve” page 161
MID 128–SID 20	Timing Sleeve (D7C only)	2, 3, 4, 5, 6, 7, 8, 11	“MID 128 SID 20 Timing Sleeve” page 163
MID 128–SID 21	Engine Position Timing Sensor (D12B and D12C)	3, 8	“MID 128 SID 21 Engine Position Timing Sensor” page 166
MID 128–SID 21	Needle Lift Sensor (D7C only)	2	“MID 128 SID 21 Needle Lift Sensor” page 168
MID 128–SID 22	Engine Speed Sensor	2, 3, 8	“MID 128 SID 22 Engine Speed Sensor” page 170
MID 128–SID 23	Rack Actuator (D7C only)	2, 3, 4, 5, 6, 7, 8, 11	“MID 128 SID 23 Rack Actuator” page 172
MID 128–SID 24	Rack Position Sensor (D7C only)	2, 13	“MID 128 SID 24 Rack Position Sensor” page 175
MID 128–SID 33	Fan Control	3, 4, 5	“MID 128 SID 33 Fan Control” page 177
MID 128–SID 64	Redundant Engine Speed Sensor (D7C only)	3, 8	“MID 128 SID 64 Redundant Engine Speed Sensor” page 179
MID 128–SID 70	Preheater Element 1	3, 4, 5	“MID 128 SID 70 Preheater Element 1” page 181

Error code	Component/Function	FMI	Section
MID 128–SID 71	Preheater Element 2 (D12B only)	3, 4, 5	“MID 128 SID 71 Pre-heater Element 2” page 183
MID 128–SID 230	Idle Validation Switch 1	3, 4	“MID 128 SID 230 Idle Validation Switch 1” page 185
MID 128–SID 231	SAE J1939 Control Link	2, 9, 11, 12	“MID 128 SID 231 SAE J1939 Control Link” page 187
MID 128–SID 232	5 Volt DC Supply	3, 4	“MID 128 SID 232 5 Volt DC Supply” page 189
MID 128–SID 240	Program Memory	2, 12	“MID 128 SID 240 Program Memory” page 191
MID 128–SID 250	SAE J1587/1708 Information Link	12	“MID 128 SID 250 SAE J1587/1708 Information Link” page 192
MID 128–SID 253	Data Set Memory EEPROM	2, 12	“MID 128 SID 253 Data Set Memory EEPROM” page 193
MID 128–SID 254	Engine Electronic Control Unit (EECU)	2, 8, 9, 11, 12, 13	“MID 128 SID 254 Engine Electronic Control Unit (EECU)” page 194

MID 128 PID 45 Preheater Status

The preheat relay is provided battery voltage at all times through the supply wire. If the EECU requests preheat operation (based on engine temperature), the control wire will be grounded through the EECU. Preheating is standard on the D7C engine with one preheat relay/element. Preheating is optional on the D12B engine with two preheat relays/elements.

Fault Codes

FMI 3

Short circuit to battery voltage.

Conditions for fault code:

- Output activated.
- Short circuit to battery voltage on EB31.

Possible cause:

- Short circuit to battery voltage on wire between preheating relay and EECU.
- Short circuit in the preheating relay.

Reaction from the EECU:

- Fault code is set.
- Yellow lamp is requested.
- The EECU switches off the output.

Noticeable external symptom:

- Yellow lamp lights up.
- The preheating relay is not activated.
- White smoke for cold start.
- Difficult to start in extreme cold.

FMI 4

Short circuit to ground.

Conditions for fault code:

- Output switched off.
- Short circuit to ground on EB31.

Possible cause:

- Short circuit to ground on wire between preheating relay and EECU.

Reaction from the EECU:

- Fault code is set.
- Yellow lamp is requested.

Noticeable external symptom:

- Yellow lamp lights up.
- The intake air is warm since the preheating relay is on all the time.
- High current consumption.

FMI 5:

Break

Conditions for fault code:

- Output switched off.
- Open circuit.

Possible cause:

- Blown fuse to the supply for preheating relay.
- Open circuit in wire between EECU and preheating relay.
- Open circuit in the preheating relay.
- Open circuit in supply wire to preheating relay.

Reaction from the EECU:

- Fault code is set.
- Yellow lamp is requested.
- The EECU switches off the output.

Noticeable external symptom:

- Yellow lamp lights up.
- The preheating relay is not activated.
- White smoke for cold start.
- Difficult to start in extreme cold.

MID 128 PID 45 Preheater Status, Check

Special tools: J-43233, J-39200, J-41132

NOTE!

Check all the particular connectors for loose connections, switch resistance, and oxidation.

For detailed circuit information, refer to "VNL, VNM Electrical Schematics," Group 37.

Measurement at the component's connector, to the EECU

1

Note: Check the component to verify that each of the following values is correct. Incorrect values can cause this component to fail.

2

Disconnect the control wire (D7C: small blue/red wire; D12B: small solid black wire) at the preheat relay.

Control wire:

3

Ignition key must be in the OFF position. J-39200

Measuring points	Optimal value
Control wire / alternate ground	180 k Ω

Supply wire:

4

Measure the voltage at the supply wire (D7C: small solid black wire; D12B: small blue/red wire) using voltmeter J-39200. J-39200

Ignition key must be in the ON position.

Measuring points	Optimal value
Supply wire / alternate ground	B+

Check of component

Preheating relay

1

Disconnect the control and supply wires to the preheat relay. J-39200

Ignition key must be in the OFF position.

Note: Each relay must be checked independently.

Measuring points	Optimal value
Control and supply terminals on the preheat relay	8.5 Ω

Check of Subsystem

Control of the preheating relay

1

Ignition key must be in the ON position. J-41132

J-43233

J-39200

Connect breakout box J-41132 in series between connector EB and the EECU. Connect jumper harness J-43233 in series between connector EA and the EECU.

Note: Test with "Preheat ON" can only be performed if the EECU requested preheat.

Measuring points	Optimal value
EB31 / EB9	B+ (preheat off)
EB31 / EB9	0 V (preheat on)
Ground term EB31 with a jumper wire	preheat relay clicks on

MID 128 PID 49 ABS Control Status

Applies only to vehicles with ABS.

Fault Codes

FMI 9

Status message from the ABS control unit is not available (SAE J1587 message).

Conditions for fault code:

- PID 49 — the message is unavailable or is not being updated regularly.

Possible cause:

- Error in the information link (SAE J1587).
- Error from the ABS control unit.

Reaction from the EECU:

- Fault code is set.
- Yellow lamp is requested.

Noticeable external symptom:

- Yellow lamp lights up.

MID 128 PID 49 ABS Control Status, Check

Special tools: J-43233, J-39200, J-41132

NOTE!

Check all the particular connectors for loose connections as well as for switch resistance and oxidation.

For detailed circuit information, refer to “VNL, VNM Electrical Schematics,” Group 37.

Also check if the ABS system has any active fault codes. This fault code could be due to the fact that there is a fault in the ABS system.

Check of Subsystem

Check of the SAE J1587 Information link

1

Ignition key must be in the OFF position.

Connect breakout box J-41132 in series between connector EB and the EECU.

2

Connect jumper harness J-43233 in series between connector EA and the EECU.

J-41132
J-43233
J-39200

Measuring points	Optimal value
EB25 / DCA (connection A in diagnostics connector)	<1 Ω
EB26 / DCB (connection B in diagnostics connector)	<1 Ω

MID 128 PID 84 Road Speed

Fault Codes

FMI 9

Vehicle road speed signal not available (SAE J1587 message).

Conditions for fault code:

- PID 84 — the message is unavailable or is not being updated regularly.

Possible cause:

- Fault in speed sensor.
- Fault in the information link (SAE J1587).
- Error from the vehicle ECU (VECU).

Reaction from the EECU:

- Fault code is set.
- Yellow lamp is requested.
- If FMI 11 has also been set, the EECU limits the engine speed to approx. 1700 rpm.

Noticeable external symptom:

- Yellow lamp lights up.
- If FMI 11 has also been set, the maximum engine speed is approx. 1700 rpm.

FMI 11

Vehicle road speed signal not available. (SAE J1939 message).

Conditions for fault code:

- The vehicle speed signal is not available on the communications link (SAE J1939).

Possible cause:

- Fault in speed sensor.
- Fault in the communications link (SAE J1939).
- Fault in VECU.

Reaction from the EECU:

- Fault code is set.
- Yellow lamp is requested.
- The message is read from the information link (SAE J1587) instead.
- If FMI 9 has also been set, the EECU limits the engine speed to approx. 1700 rpm.

Noticeable external symptom:

- Yellow lamp lights up.
- If FMI 9 has also been set, the maximum engine speed is approx. 1700 rpm.

MID 128 PID 84 Road Speed, Check

Special tools: J-43233, J-39200, J-41132

NOTE!

Check all the particular connectors for loose connections as well as for switch resistance and oxidation.

For detailed circuit information, refer to "VNL, VNM Electrical Schematics," Group 37.

Also check the speed sensor and the VECU. This fault code could be due to the fact that there is a fault in any of these components.

Check of Subsystem

Check of the SAE J1587 Information link

1

Ignition key must be in the OFF position.

Connect breakout box J-41132 in series between connector EB and the EECU.

2

Connect jumper harness J-43233 in series between connector EA and the EECU.

J-41132
J-43233
J-39200

Measuring points	Optimal value
EB25 / DCA (connection A in diagnostics connector)	<1 Ω
EB26 / DCB (connection B in diagnostics connector)	<1 Ω

MID 128 PID 85 Cruise Control Status

Fault Codes

FMI 9

Status message from Cruise Control is not available (SAE J1587 message).

Conditions for fault code:

- PID 85 — the message is unavailable or not being updated regularly.

Possible cause:

- Fault in the information link (SAE J1587).
- Fault in the VECU.

Reaction from the EECU:

- Fault code is set.
- Yellow lamp is requested.

Noticeable external symptom:

- Yellow lamp lights up.

MID 128 PID 85 Cruise Control Status, Check

Special tools: J-43233, J-39200, J-41132

NOTE!

Check all the particular connectors for loose connections as well as for switch resistance and oxidation.

For detailed circuit information, refer to “VNL, VNM Electrical Schematics,” Group 37.

Also check the cruise control switch and VECU. This fault code could be due to the fact that there is a fault in any of these components.

Check of Subsystem

Check of the SAE J1587 Information link

1

Ignition key must be in the OFF position.

Connect breakout box J-41132 in series between connector EB and the EECU.

2

Connect jumper harness J-43233 in series between connector EA and the EECU.

J-41132
J-43233
J-39200

Measuring points	Optimal value
EB25 / DCA (connection A in diagnostics connector)	<1 Ω
EB26 / DCB (connection B in diagnostics connector)	<1 Ω

MID 128 PID 91 Accelerator Pedal Position

Fault Codes

FMI 9

Accelerator pedal message not available. (SAE J1587 message)

Conditions for fault code:

- PID 91 message is unavailable or not being updated regularly.

Possible cause:

- Fault in the accelerator pedal.
- Fault in the information link (SAE J1587).
- Error from the VECU.

Reaction from the EECU:

- Fault code is set.
- Yellow lamp is requested.
- If FMI 11 has also been set, the EECU will switch to the “Limp home mode”.

Noticeable external symptom:

- Yellow lamp lights up.
- If FMI 11 has also been set, the engine will be put in the “Limp home mode” and the buffered idle validation switch is used instead of the accelerator pedal position sensor.

the “Limp home mode.”

Noticeable external symptom:

- Yellow lamp lights up.
- If FMI 9 has also been set, the engine will be put in the “Limp home mode” and the buffered idle validation switch is used instead of the accelerator pedal position sensor.

FMI 11

Accelerator pedal faulty. (SAE J1939 message)

Conditions for fault code:

- Faults in the accelerator pedal sensor are sent on the communications link (SAE J1939).
- The accelerator pedal signal is not available on the communications link (SAE J1939).

Possible cause:

- Fault in the accelerator pedal.
- Fault in the communications link (SAE J1939).
- Error from the VECU.

Reaction from the EECU:

- Fault code is set.
- Yellow lamp is requested.
- Accelerator pedal signal is retrieved instead from the information link (SAE J1587).
- If FMI 9 has also been set, the EECU will switch to

MID 128 PID 91 Accelerator Pedal Position, Check

Special tools: J-43233, J-39200, J-41132

NOTE!

Check all the particular connectors for loose connections as well as for switch resistance and oxidation.

For detailed circuit information, refer to "VNL, VNM Electrical Schematics," Group 37.

Also check the accelerator pedal and the VECU. This fault code could be due to the fact that there is a fault in any of these components.

Check of Subsystem

Check of the SAE J1587 Information link

1

Ignition key must be in the OFF position.

Connect breakout box J-41132 in series between connector EB and the EECU.

2

Connect jumper harness J-43233 in series between connector EA and the EECU.

J-41132
J-43233
J-39200

Measuring points	Optimal value
EB25 / DCA (connection A in diagnostics connector)	<1 Ω
EB26 / DCB (connection B in diagnostics connector)	<1 Ω

MID 128 PID 94 Fuel Delivery Pressure

D7C and D12C

In addition to the fuel pressure, the sensor also measures the fuel temperature.

Fault Codes

FMI 1

Pressure too low.

Conditions for fault code:

- The voltage on EA27 is below the alarm limit.

Possible cause:

- Clogged fuel filter.
- Air in fuel system.
- Opening pressure too low on overflow valve.
- Worn out fuel pump.
- Mechanical fault in sensor.

Reaction from the EECU:

- Fault code is set.
- Yellow lamp is requested.

Noticeable external symptom:

- Yellow lamp lights up.
- Low power output.
- Difficult to start.
- Blue smoke.

FMI 3

Short circuit to voltage or permanent loss of signal.

Conditions for fault code:

- The voltage on EA27 is below the alarm limit.

Possible cause:

- Short circuit to voltage, 5 V supply wire

- Short circuit to voltage, signal wire.
- Fault in sensor.

Reaction from the EECU:

- Fault code is set.
- Yellow lamp is requested.

Noticeable external symptom:

- Yellow lamp lights up.

FMI 4

Short circuit to ground.

Conditions for fault code:

- The voltage on EA27 is under 0.08 V.

Possible cause:

- Break, 5 V supply wire.
- Break, signal wire.
- Break, ground wire.
- Short circuit to ground, 5 V supply wire.
- Short circuit to ground, signal wire.
- Fault in sensor

Reaction from the EECU:

- Fault code is set.
- Yellow lamp is requested.

Noticeable external symptom:

- Yellow lamp lights up.

MID 128 PID 94 Fuel Delivery Pressure, Check

D7C and D12C

Special tools: J-43233, J-39200, J-41132, 9998534

NOTE!

Check all the particular connectors for loose connections as well as for switch resistance and oxidation.

For detailed circuit information, refer to "VNL, VNM Electrical Schematics," Group 37.

Measurement at the component's connector, to the EECU

1
Note: An incorrect value (below) can also cause the component to fail; therefore, it is important to check the component if any of the values are incorrect.

2
Disconnect the connector for the fuel pressure sensor. Install breakout harness 9998534 to the wiring harness end only.

Ground wire:

3
Measure the resistance with ohmmeter J-39200.

Ignition key must be in the OFF position.

Measuring points	Optimal value
4 / alternate ground	<1 Ω

Supply wire:

4
Measure the voltage with voltmeter J-39200.

Ignition key must be in the ON position.

Measuring points	Optimal value
1 / alternate ground	5 V

Signal wire:

5
Measure the resistance with ohmmeter J-39200.

Ignition key must be in the OFF position.

Measuring points	Optimal value
2 / alternate ground	100 k Ω

Check of component

Fuel pressure sensor

1
Disconnect the connector for the fuel pressure sensor. Install breakout harness 9998534 to the sensor connector only.

2
Measure the resistance with ohmmeter J-39200.

Ignition key must be in the OFF position.

Measuring points	Optimal value
1 / 4	11 k Ω
1 / 2	40 k Ω
2 / 4	40 k Ω
1 / alternate ground	open circuit
2 / alternate ground	open circuit
4 / alternate ground	open circuit

Check of Subsystem

Fuel Pressure

1

Ignition key must be in the ON position.

J-41132

J-43233


Connect breakout box J-41132 in series between connector EA and the EECU. Connect jumper harness J-43233 in series between connector EB and the EECU.

J-39200

Measuring points	Optimal value
EA27 / EA5	0.5 V (engine not running)

Note: For fuel pressure/voltage chart, see page 109.

Fuel Pressure Sensor, Pressure/Voltage Chart

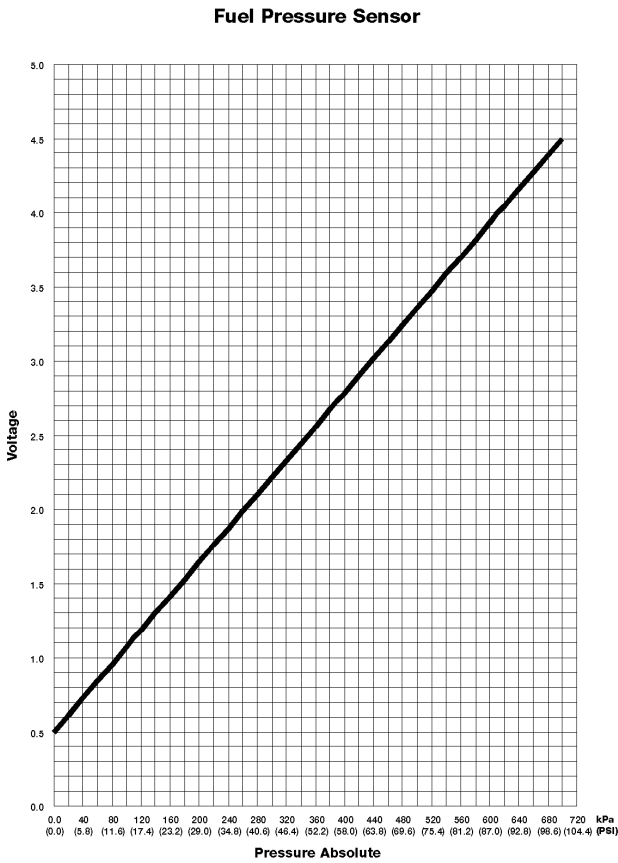

Bars	kPa	PSI	Volts	Volts (High)	Volts (Low)
0	0	0	0.50	0.52	0.49
0.2	20	2.9	0.61	0.63	0.60
0.4	40	5.8	0.73	0.75	0.71
0.6	60	8.7	0.84	0.87	0.82
0.8	80	11.6	0.96	0.99	0.93
1	100	14.5	1.07	1.10	1.04
1.2	120	17.4	1.19	1.22	1.15
1.4	140	20.3	1.30	1.34	1.26
1.6	160	23.2	1.41	1.46	1.37
1.8	180	26.1	1.53	1.57	1.48
2	200	29.0	1.64	1.69	1.59
2.2	220	31.9	1.76	1.81	1.70
2.4	240	34.8	1.87	1.93	1.82
2.6	260	37.7	1.99	2.05	1.93
2.8	280	40.6	2.10	2.16	2.04
3	300	43.5	2.21	2.28	2.15
3.2	320	46.4	2.33	2.40	2.26
3.4	340	49.3	2.44	2.52	2.37
3.6	360	52.2	2.56	2.63	2.48
3.8	380	55.1	2.67	2.75	2.59
4	400	58.0	2.79	2.87	2.70
4.2	420	60.9	2.90	2.99	2.81
4.4	440	63.8	3.01	3.10	2.92
4.6	460	66.7	3.13	3.22	3.03
4.8	480	69.6	3.24	3.34	3.15
5	500	72.5	3.36	3.46	3.26
5.2	520	75.4	3.47	3.58	3.37
5.4	540	78.3	3.59	3.69	3.48
5.6	560	81.2	3.70	3.81	3.59
5.8	580	84.1	3.81	3.93	3.70
6	600	87.0	3.93	4.05	3.81
6.2	620	89.9	4.04	4.16	3.92
6.4	640	92.8	4.16	4.28	4.03
6.6	660	95.7	4.27	4.40	4.14
6.8	680	98.6	4.39	4.52	4.25
7	700	101.5	4.50	4.63	4.36

W2002799

MID 128 PID 100 Engine Oil Pressure

In addition to the oil pressure, the sensor also measures the oil temperature.

Fault Codes

FMI 1

Pressure too low.

Conditions for fault code:

- The voltage on EA14 is below the alarm limit.

Possible cause:

- Fault in overflow valve.
- Oil level too low.
- Contaminated oil, slow-flowing or too thin.
- Worn oil pump.
- Fault in sensor.

Reaction from the EECU:

- Fault code is set.
- Power reduction in the first stage and shutdown in 2nd stage (if engine protection is chosen in the data set).

Noticeable external symptom:

- LED lights up at the oil pressure gauge.
- Power reduction (if engine protection is chosen in the data set).
- Engine shut-down if the vehicle speed falls below 5 mph (3 km/h), if engine protection is chosen in the data set.

FMI 3

Short circuit to voltage.

Conditions for fault code:

- The voltage on EA14 exceeds 4.95 V.

Possible cause:

- Short circuit to battery voltage, 5 V supply wire.
- Short circuit to battery voltage or 5 V, signal wire.

- Fault in sensor.

Reaction from the EECU:

- Fault code is set.
- Yellow lamp is requested.
- The EECU stops sending PID 100.

Noticeable external symptom:

- Yellow lamp lights up.
- The oil pressure gauge shows 0.

FMI 4

Short circuit to ground or open circuit.

Conditions for fault code:

- The voltage on EA14 is under 0.08 V.

Possible cause:

- Break, 5 V supply wire.
- Break, signal wire.
- Short circuit to ground, 5 V supply wire.
- Short circuit to ground, signal wire.
- Fault in sensor.

Reaction from the EECU:

- Fault code is set.
- Yellow lamp is requested.
- The EECU stops sending PID 100.

Noticeable external symptom:

- Yellow lamp lights up.
- The oil pressure gauge shows 0.

MID 128 PID 100 Engine Oil Pressure, Check

Special tools: J-43233, J-39200, J-41132, 9998534

NOTE!

Check all the particular connectors for loose connections as well as for switch resistance and oxidation.

For detailed circuit information, refer to "VNL, VNM Electrical Schematics," Group 37.

Measurement at the component's connector, to the EECU

1

Note: An incorrect value (below) can also cause the component to fail; therefore, it is important to check the component if any of the values are incorrect.

2

Disconnect the connector to the oil pressure sensor. Install breakout harness 9998534 to the wiring harness end only.

9998534

Ground wire:

3

Measure the resistance with ohmmeter J-39200.

J-39200

Ignition key must be in the OFF position.

Measuring points	Optimal value
4 / alternate ground	<1 Ω

Supply wire:

4

Measure the voltage with voltmeter J-39200.

J-39200

Ignition key must be in the ON position.

Measuring points	Optimal value
1 / alternate ground	5 V

Signal wire:

5

Measure the resistance with ohmmeter J-39200.

J-39200

Ignition key must be in the OFF position.

Measuring points	Optimal value
2 / alternate ground	100 k Ω

Check of component

Oil pressure sensor

1

Disconnect the connector to the oil pressure sensor. Install breakout harness 9998534 to the sensor harness end only.

9998534

2

Measure the resistance with ohmmeter J-39200.

J-39200

Ignition key must be in the OFF position.

Measuring points	Optimal value
1 / 4	11 k Ω
1 / 2	40 k Ω
2 / 4	40 k Ω
1 / alternate ground	open circuit
2 / alternate ground	open circuit
4 / alternate ground	open circuit

Check of Subsystem

Oil pressure

1

Ignition key must be in the ON position.

J-41132

J-43233

Connect breakout box J-41132 in series between connector EA and the EECU. Connect jumper harness J-43233 in series between connector EB and the EECU.


J-39200

Measuring points	Optimal value
EA14 / EA5	0.5 V (engine not running)

Note: For oil pressure/voltage chart, see "Oil Pressure Sensor, Pressure/Voltage Chart" page 113.

Oil Pressure Sensor, Pressure/Voltage Chart

Oil Pressure Sensor

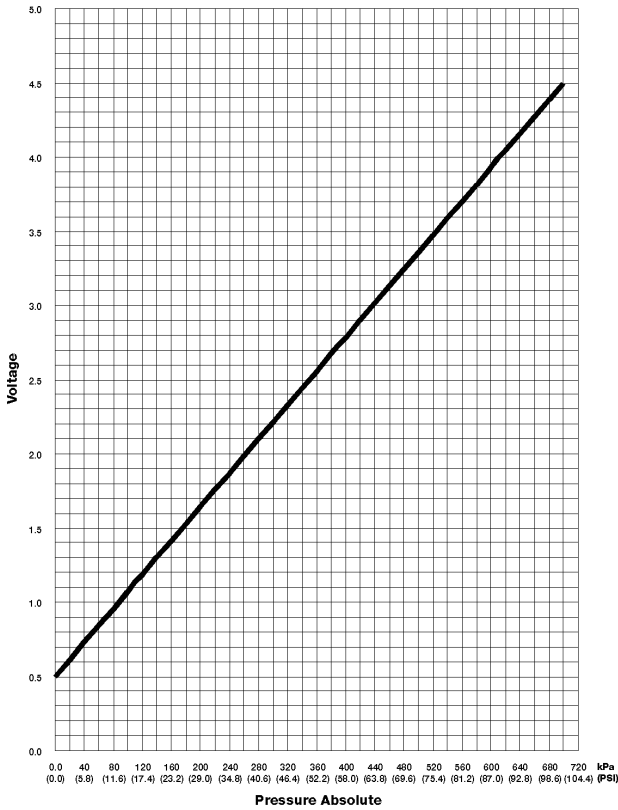

Bars	kPa	PSI	Volts	Volts (High)	Volts (Low)
0	0	0	0.50	0.52	0.49
0.2	20	2.9	0.61	0.63	0.60
0.4	40	5.8	0.73	0.75	0.71
0.6	60	8.7	0.84	0.87	0.82
0.8	80	11.6	0.96	0.99	0.93
1	100	14.5	1.07	1.10	1.04
1.2	120	17.4	1.19	1.22	1.15
1.4	140	20.3	1.30	1.34	1.26
1.6	160	23.2	1.41	1.46	1.37
1.8	180	26.1	1.53	1.57	1.48
2	200	29.0	1.64	1.69	1.59
2.2	220	31.9	1.76	1.81	1.70
2.4	240	34.8	1.87	1.93	1.82
2.6	260	37.7	1.99	2.05	1.93
2.8	280	40.6	2.10	2.16	2.04
3	300	43.5	2.21	2.28	2.15
3.2	320	46.4	2.33	2.40	2.26
3.4	340	49.3	2.44	2.52	2.37
3.6	360	52.2	2.56	2.63	2.48
3.8	380	55.1	2.67	2.75	2.59
4	400	58.0	2.79	2.87	2.70
4.2	420	60.9	2.90	2.99	2.81
4.4	440	63.8	3.01	3.10	2.92
4.6	460	66.7	3.13	3.22	3.03
4.8	480	69.6	3.24	3.34	3.15
5	500	72.5	3.36	3.46	3.26
5.2	520	75.4	3.47	3.58	3.37
5.4	540	78.3	3.59	3.69	3.48
5.6	560	81.2	3.70	3.81	3.59
5.8	580	84.1	3.81	3.93	3.70
6	600	87.0	3.93	4.05	3.81
6.2	620	89.9	4.04	4.16	3.92
6.4	640	92.8	4.16	4.28	4.03
6.6	660	95.7	4.27	4.40	4.14
6.8	680	98.6	4.39	4.52	4.25
7	700	101.5	4.50	4.63	4.36

W2002732

MID 128 PID 102 Boost Pressure

In addition to the boost pressure, the sensor also measures the boost air temperature.

Fault Codes

FMI 3

Short circuit to voltage.

Conditions for fault code:

- The voltage on EA3 exceeds 4.95 V.

Possible cause:

- Short circuit to battery voltage, 5 V supply wire.
- Short circuit to battery voltage or 5 V, signal wire.
- Fault in sensor.

Reaction from the EECU:

- Fault code is set.
- Yellow lamp is requested.
- The EECU stops sending PID 102.
- Power reduction.

Noticeable external symptom:

- Yellow lamp lights up.
- The boost pressure gauge shows 0.
- Low power output.

FMI 4

Short circuit to ground or open circuit.

Conditions for fault code:

- The voltage on EA3 is under 0.08 V.

Possible cause:

- Break, 5 V supply wire.
- Break, signal wire.
- Short circuit to ground, 5 V supply wire.
- Short circuit to ground, signal wire.
- Fault in sensor.

Reaction from the EECU:

- Fault code is set.
- Yellow lamp is requested.
- The EECU stops sending PID 102.
- Power reduction.

Noticeable external symptom:

- Yellow lamp lights up.
- The boost pressure gauge shows 0.
- Low power output.

MID 128 PID 102 Boost Pressure, Check

Special tools: J-43233, J-39200, J-41132, 9998534

NOTE!

Check all the particular connectors for loose connections as well as for switch resistance and oxidation.

For detailed circuit information, refer to "VN/VHD, Electrical Schematics," Group 37.

Measurement at the component's connector, to the EECU

1

Note: An incorrect value (below) can also cause the component to fail; therefore, it is important to check the component if any of the values are incorrect.

2

Disconnect the connector to the boost pressure sensor. Install breakout harness 9998534 to the wiring harness end only.

Ground wire:

3

Measure the resistance with ohmmeter J-39200.

Ignition key must be in the OFF position.

Measuring points	Optimal value
4 / alternate ground	<1 Ω

Supply wire:

4

Measure the voltage with voltmeter J-39200.

Ignition key must be in the ON position.

Measuring points	Optimal value
1 / alternate ground	5 V

Signal wire:

5

Measure the resistance with ohmmeter J-39200.

Ignition key must be in the OFF position.

Measuring points	Optimal value
2 / alternate ground	100 k Ω

Check of component

Boost pressure sensor

1

Disconnect the connector to the boost pressure sensor. Install breakout harness 9998534 to the sensor harness end only.

Measure the resistance with ohmmeter J-39200.

Ignition key must be in the OFF position.

Measuring points	Optimal value
1 / 4	11.5 k Ω
1 / 2	44 k Ω
2 / 4	44 k Ω
1 / alternate ground	open circuit
2 / alternate ground	open circuit
4 / alternate ground	open circuit

Check of Subsystem

Boost pressure

1

Ignition key must be in the ON position.

J-41132

J-43233


Connect breakout box J-41132 in series between connector EA and the EECU. Connect jumper harness J-43233 in series between connector EB and the EECU.

J-39200

Measuring points	Optimal value
EA3 / EA5	1.2 V (sea level, engine not running)

Note: For boost pressure/voltage chart, see "Boost Pressure Sensor, Pressure/Voltage Chart" page 117.

Boost Pressure Sensor, Pressure/Voltage Chart

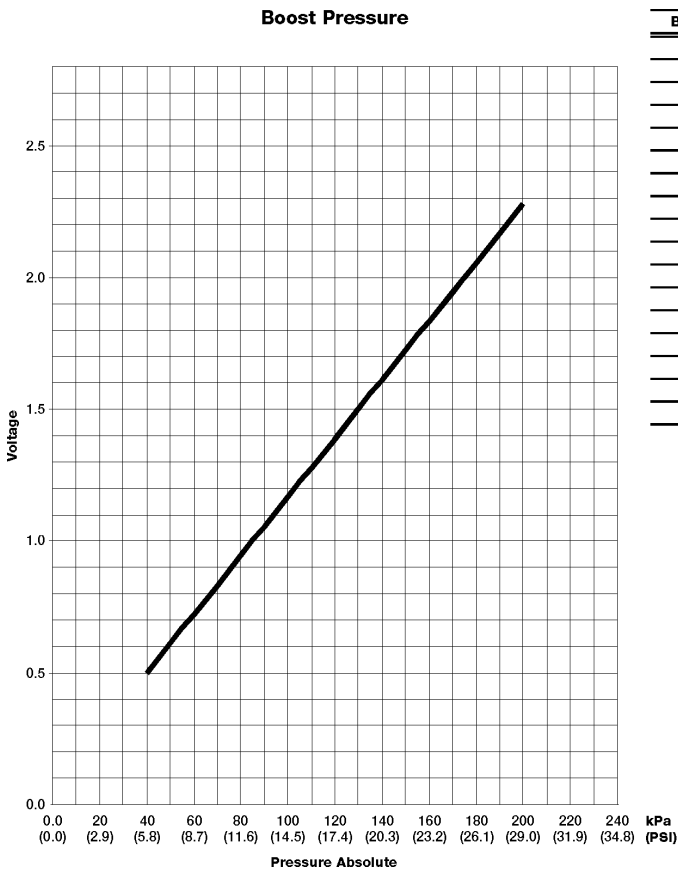

Bars	kPa	PSI	Volts	Volts (High)	Volts (Low)
0.4	40	5.8	0.50	0.53	0.47
0.5	50	7.3	0.61	0.64	0.58
0.6	60	8.7	0.72	0.76	0.69
0.7	70	10.2	0.83	0.87	0.80
0.8	80	11.6	0.94	0.98	0.91
0.9	90	13.1	1.06	1.09	1.02
1.0	100	14.5	1.17	1.20	1.13
1.1	110	16.0	1.28	1.31	1.24
1.2	120	17.4	1.39	1.42	1.36
1.3	130	18.9	1.50	1.53	1.47
1.4	140	20.3	1.61	1.64	1.58
1.5	150	21.8	1.72	1.76	1.69
1.6	160	23.2	1.83	1.87	1.80
1.7	170	24.7	1.94	1.98	1.91
1.8	180	26.1	2.06	2.09	2.02
1.9	190	27.6	2.17	2.20	2.13
2.0	200	29.0	2.28	2.31	2.24

W2002730

MID 128 PID 105 Boost Air Temperature

In addition to the boost air temperature, the sensor also measures the boost pressure. The boost air temperature signal can be used to switch on the radiator fan.

Fault Codes

FMI 3

Short circuit to voltage or open circuit.

Conditions for fault code:

- The voltage on EA2 exceeds 4.95 V.

Possible cause:

- Short circuit to voltage, signal wire.
- Short circuit to voltage, ground wire.
- Break, signal wire.
- Break, ground wire.
- Fault in sensor.

Reaction from the EECU:

- Fault code is set.
- Yellow lamp is requested.

Noticeable external symptom:

- Yellow lamp lights up.

FMI 4

Short circuit to ground.

Conditions for fault code:

- The voltage on EA2 is under 0.08 V.

Possible cause:

- Short circuit to ground, signal wire.
- Fault in sensor.

Reaction from the EECU:

- Fault code is set.
- Yellow lamp is requested.

Noticeable external symptom:

- Yellow lamp lights up.

MID 128 PID 105 Boost Air Temperature, Check

Special tools: J-43233, J-39200, J-41132, 9998534

NOTE!

Check all the particular connectors for loose connections as well as for switch resistance and oxidation.

For detailed circuit information, refer to "VNL, VNM Electrical Schematics," Group 37.

Measurement at the component's connector, to the EECU

1

Note: An incorrect value (below) can also cause the component to fail; therefore, it is important to check the component if any of the values are incorrect.

2

Disconnect the connector to the boost air temperature sensor. Install break-out harness 9998534 to the wiring harness end only.

Ground wire:

3

Measure the resistance with ohmmeter J-39200.

Ignition key must be in the OFF position.

Measuring points	Optimal value
4 / alternate ground	<1 Ω

Supply wire:

4

Measure the voltage with voltmeter J-39200.

Ignition key must be in the ON position.

Measuring points	Optimal value
1 / alternate ground	5 V

Signal wire:

5

Measure the resistance with ohmmeter J-39200.

Ignition key must be in the OFF position.

Measuring points	Optimal value
3 / alternate ground	5.7 k Ω

Check of component

Boost air temperature sensor

1

Disconnect the connector to the boost air temperature sensor. Install break-out harness 9998534 to the sensor harness only.

Measure the resistance with ohmmeter J-39200.

Ignition key must be in the OFF position.

Measuring points	Optimal value
3 / 4	6.2 k Ω (20 °C/68 °F)
3 / 4	2.5 k Ω (40 °C/104 °F)
1 / alternate ground	open circuit
2 / alternate ground	open circuit
4 / alternate ground	open circuit

Note: For boost air temperature/resistance chart, see "Boost Air Temperature Sensor, Temperature/Resistance Chart" page 121.

Check of Subsystem

Boost air temperature

1

Ignition key must be in the ON position.

Connect breakout box J-41132 in series between connector EA and the EECU. Connect jumper harness J-43233 in series between connector EB and the EECU.


J-41132
J-43233 J-
39200

Measuring points	Optimal value
EA2 / EA5	2.6 V (20 °C/68 °F)
EA2 / EA5	1.6 V (40 °C/104 °F)

Note: For boost air temperature/resistance chart, see "Boost Air Temperature Sensor, Temperature/Resistance Chart" page 121.

Boost Air Temperature Sensor, Temperature/Resistance Chart


Intake Manifold Air Temperature Sensor

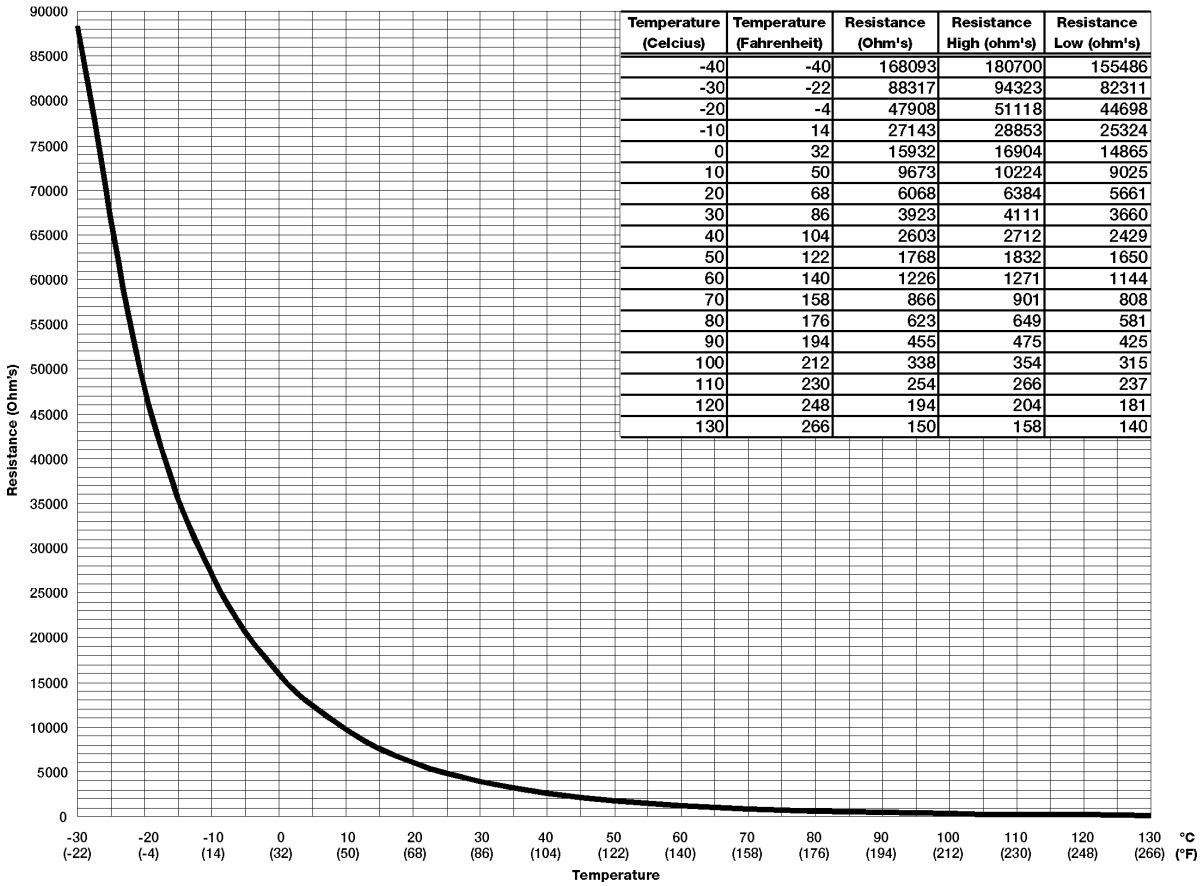

W2002728

MID 128 PID 107 Air Filter Differential Pressure

(D12B, D12C, D7C Engines)

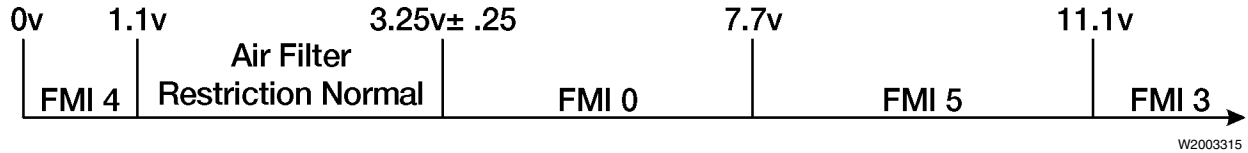

Fault Codes

FMI 0

Filter restriction is too great.

The pressure drop (filter restriction) is greatest at high engine speed/load. With current engine software, once PID 107 is triggered, it remains active until the ignition is turned to the OFF position. At that time, the fault code is reset (neither active nor inactive) until the fault condition recurs.

Conditions for fault code:

- Filter restriction too great.
- Voltage between EB17–EB8 exceeds 3.25 ± 0.25 V.

Possible cause:

- Clogged air filter.
- Fault in sensor.

Reaction from the EECU:

- Fault code is set.
- Yellow lamp is requested.

Noticeable external symptom:

- Yellow lamp is illuminated.
- Loss of tractive power.

Possible action:

- Check/replace the air filter.
- See Service Bulletin, "Checklist A: Turbo Boost Pressure," publication number PV776–200–040SB.

FMI 3

Short circuit to battery voltage.

Conditions for fault code:

- Voltage between EB17–EB8 exceeds 11.1 V.

Possible cause:

- Short circuit to battery voltage, signal wire.
- Short circuit to battery voltage, ground wire.
- Fault in sensor.

Reaction from the EECU:

- Fault code is set.

- Yellow lamp is requested.

Noticeable external symptom:

- Yellow lamp lights up.

Possible checks:

- "MID 128 PID 107 Air Filter Differential Pressure, Check" page 124.

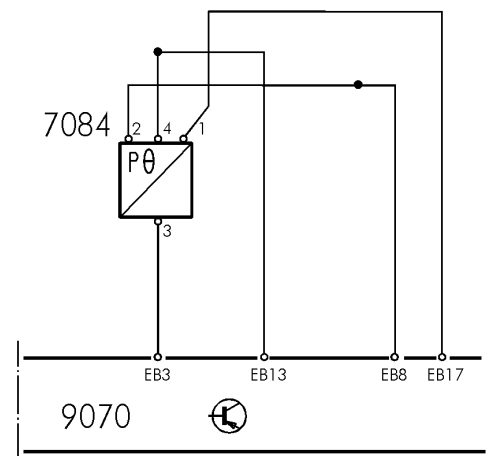


Fig. 13: 7084 - air filter restriction/temperature sensor; 9070 - EECU.

FMI 4

Short circuit to ground.

Conditions for fault code:

- Voltage between EB17–EB8 is under 1.1 V.

Possible cause:

- Short circuit to ground, signal wire.
- Fault in sensor.

Reaction from the EECU:

- Fault code is set.
- Yellow lamp is requested.

Noticeable external symptom:

- Yellow lamp lights up.

Possible checks:

- “MID 128 PID 107 Air Filter Differential Pressure, Check” page 124.

FMI 5:

Break

Conditions for fault code:

- Voltage between EB17–EB8 exceeds 7.7 V.

Possible cause:

- Break in signal wire.
- Fault in sensor.

Reaction from the EECU:

- Fault code is set.
- Yellow lamp is requested.

Noticeable external symptom:

- Yellow lamp lights up.

Possible checks:

- “MID 128 PID 107 Air Filter Differential Pressure, Check” page 124.

MID 128 PID 107 Air Filter Differential Pressure, Check

(D12B, D12C, D7C Engines)

Special tools: 9998534, J-39200, J-43233, J-41132

NOTE!

Check all the particular connectors for loose connections, switch resistance, and oxidation.

For detailed circuit information, refer to "VN/VHD, Electrical Schematics," Group 37.

Measurement at the Component's Connector, to the EECU

1

Note: Check to verify that each of the following values is correct. Incorrect values can also cause this component to fail. It is important to check the component if any of the values are incorrect.

2

Disconnect the connector to the air filter restriction/temperature sensor. Install breakout harness 9998534 to the wiring harness only.

Ground wire:

3

Measure the resistance using DMM J-39200.

Ignition key must be in the OFF position.

Measuring points	Optimal value
2 / alternate ground	<1 Ω

Signal wire/supply wire:

4

Measure the voltage at the supply wire using DMM J-39200.

Ignition key must be in the ON position.

Measuring points	Optimal value
1 / alternate ground	80% B+

Check of Component

Note: Faults in the component can be caused by faults in the wiring harness of the EECU. Thus, a check of the wiring harness should also be made before connecting a new component.

Air Filter Restriction/Temperature Sensor

1

Disconnect the connector to the air filter restriction/temperature sensor. Install breakout harness 9998534 to the sensor harness end only.

2

Measure the resistance with DMM J-39200.

Ignition key must be in the OFF position.

Measuring points	Optimal value
1 / 2	330 Ω (inactive; normal position)
1 / 2	2.2 k Ω (active)

Check of Subsystem

Air Filter Indicator

1

Connect breakout box J-41132 in series between connector EB and the EECU. Connect jumper harness J-43233 in series between connector EA and the EECU.

2

Measure the voltage with DMM J-39200.

Ignition key must be in the ON position.

Measuring points	Optimal value
EB8 / EB17	1.35 V (inactive; normal position) 5.1 V (active)

MID 128 PID 108 Atmospheric Pressure

The sensor is located inside the EECU and therefore cannot be checked. The signal is used to calculate the turbo pressure and to compensate the fuel when driving at high altitudes.

Fault Codes

FMI 3

Short circuit to voltage.

Conditions for fault code:

- The signal from the internal sensor exceeds 4.95 V.

Possible cause:

- Internal fault in the EECU.
- The EECU has been exposed to extremely high pressure.

Reaction from the EECU:

- Fault code is set.
- Yellow lamp is requested.

Noticeable external symptom:

- Yellow lamp lights up.
- Poor response at high altitudes.

FMI 4

Short circuit to ground or open circuit.

Conditions for fault code:

- The signal from the internal sensor is under 0.08 V.

Possible cause:

- Internal fault in the EECU.
- The EECU has been exposed to extremely low pressure.

Reaction from the EECU:

- Fault code is set.
- Yellow lamp is requested.

Noticeable external symptom:

- Yellow lamp lights up.
- Poor response at high altitudes.

MID 128 PID 110 Engine Coolant Temperature

Fault Codes

FMI 0

Temperature too high.

Conditions for fault code:

- The coolant temperature exceeds 102 °C/216 °F.

Possible cause:

- Low coolant level.
- Fault in thermostat.
- Clogged radiator (internally/externally).
- Clogged intercooler (on the outside).
- Poor through-flow in the cooling system.
- Worn coolant pump.
- Fault in pressure cap, expansion tank.
- Fault in sensor.

Reaction from the EECU:

- Fault code is set.
- Power reduction in the first stage.
- The engine is shut down in the second stage (if engine protection is chosen in the data set).

Noticeable external symptom:

- LED lights up at the coolant temperature gauge.
- Low power output.
- The engine is shut down (if engine protection is chosen in the data set).

FMI 3

Short circuit to voltage or open circuit.

Conditions for fault code:

- The voltage on EA25 exceeds 4.95 V.

Possible cause:

- Short circuit to battery or 5 V voltage, signal wire.
- Short circuit to voltage, ground wire.
- Break, signal wire.
- Break, ground wire.
- Fault in sensor.

Reaction from the EECU:

- Fault code is set.
- Yellow lamp is requested.
- The EECU stops sending PID 110.

Noticeable external symptom:

- Yellow lamp lights up.
- The coolant temperature gauge shows 0.

FMI 4

Short circuit to ground.

Conditions for fault code:

- The voltage on EA25 is under 0.08 V.

Possible cause:

- Short circuit to ground, signal wire.
- Fault in sensor.

Reaction from the EECU:

- Fault code is set.
- Yellow lamp is requested.
- The EECU stops sending PID 110.

Noticeable external symptom:

- Yellow lamp lights up.
- The coolant temperature gauge shows 0.

MID 128 PID 110 Engine Coolant Temperature, Check

Special tools: J-43233, J-39200, J-41132, 9998534

NOTE!

Check all the particular connectors for loose connections as well as for switch resistance and oxidation.

For detailed circuit information, refer to "VNL, VNM Electrical Schematics," Group 37.

Measurement at the component's connector, to the EECU

1

Note: An incorrect value (below) can also cause the component to fail; therefore, it is important to check the component if any of the values are incorrect.

2

Disconnect the connector to the coolant temperature sensor. Install breakout harness 9998534 to the wiring harness end only.

9998534

Ground wire:

3

Measure the resistance with ohmmeter J-39200.

J-39200

Ignition key must be in the OFF position.

Measuring points	Optimal value
2 / alternate ground	<1 Ω

Signal wire:

4

Measure the resistance with ohmmeter J-39200.

J-39200

Ignition key must be in the OFF position.

Measuring points	Optimal value
1 / alternate ground	1.4 k Ω

Check of component

Coolant temperature sensor

1

Disconnect the connector to the coolant temperature sensor. Install breakout harness 9998534 to the sensor harness only.

9998534
J-39200

Measure the resistance with ohmmeter J-39200.

Ignition key must be in the OFF position.

Note: For coolant temperature/resistance chart, see "Coolant Temperature Sensor, Temperature/Resistance Chart" page 128.

Measuring points	Optimal value
1 / 2	1.9 k Ω (20 °C/68 °F)
1 / 2	160 Ω (85 °C/185 °F)
1 / alternate ground	open circuit
2 / alternate ground	open circuit

Check of Subsystem

Coolant temperature

1

Ignition key must be in the ON position. Connect breakout box J-41132 in series between connector EA and the EECU. Connect jumper harness J-43233 in series between connector EB and the EECU.


J-41132
J-43233
J-39200

Measuring points	Optimal value
EA25 / EA5	3.0 V (20 °C/68 °F)
EA25 / EA5	0.6 V (85 °C/185 °F)

Note: For coolant temperature/resistance chart, see "Coolant Temperature Sensor, Temperature/Resistance Chart" page 128.

Coolant Temperature Sensor, Temperature/Resistance Chart

Coolant Temperature Sensor

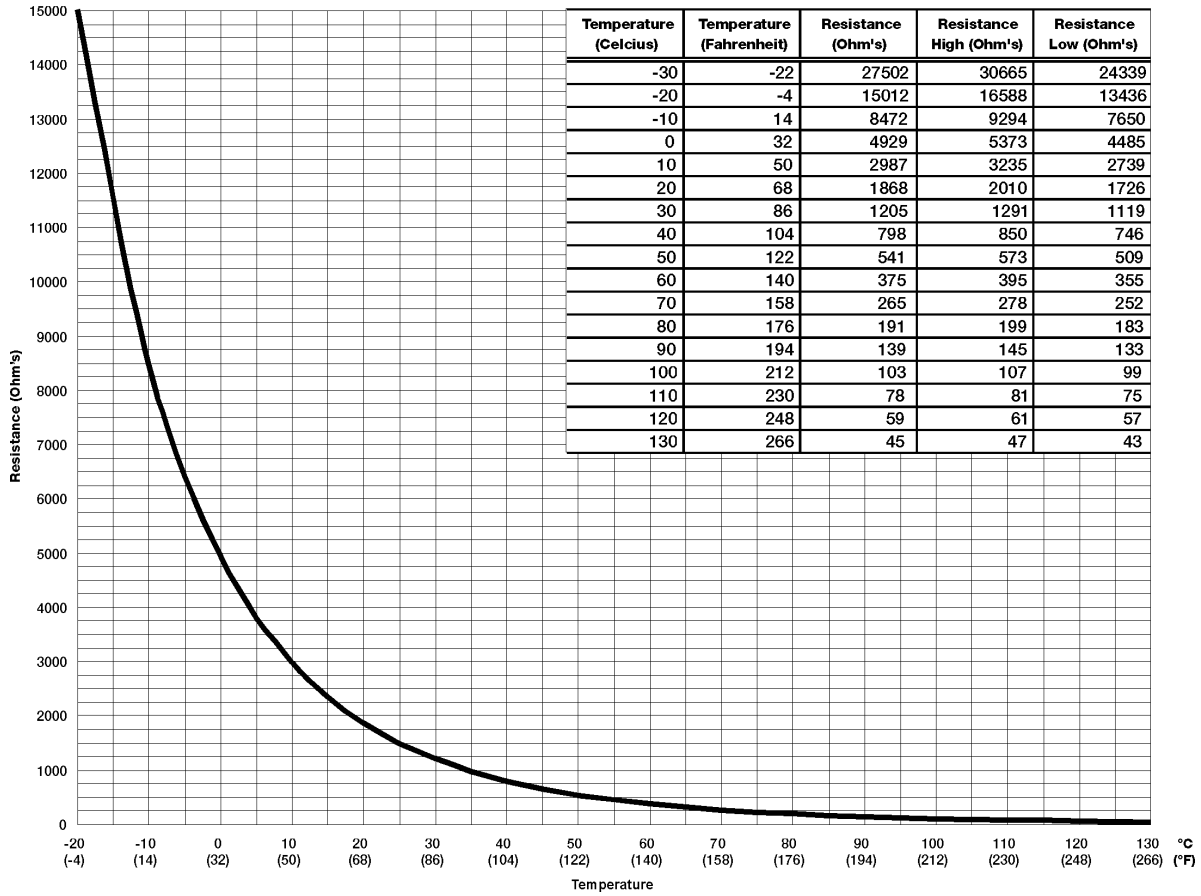

W2002729

MID 128 PID 111 Coolant Level

The information applies only to the magnetic coolant level sensor that is mounted in the bottom of the radiator expansion tank. Some models (WG, AC) are equipped with a capacitive probe and an electronic coolant level module that converts the capacitive signal to an output signal that the EECU can understand.

Fault Codes

FMI 1

Level too low.

Conditions for fault code:

- Coolant level switch closed.
- The voltage on EB7 is under 45% of the battery voltage.

Possible cause:

- Low coolant level.
- Short circuit to ground, signal wire.
- Fault in sensor.

Reaction from the EECU:

- Fault code is set.
- Red lamp is requested.
- The EECU reduces the output after 30 seconds and shuts down the engine if the vehicle speed goes under 5 mph or 3 km/h (if engine protection is chosen in the data set).

Noticeable external symptom:

- Red lamp lights up.
- The EECU reduces the output after 30 seconds and shuts down the engine if the vehicle speed goes under 5 mph or 3 km/h (if engine protection is chosen in the data set).

MID 128 PID 111 Coolant Level, Check

Special tools: J-43233, J-39200, J-41132, J-42472

NOTE!

Check all the particular connectors for loose connections as well as for switch resistance and oxidation.

For detailed circuit information, refer to "VNL, VNM Electrical Schematics," Group 37.

Measurement at the component's connector, to the EECU

1

Note: An incorrect value (below) can also cause the component to fail; therefore, it is important to check the component if any of the values are incorrect.

2

Disconnect the connector to the coolant level sensor. Install breakout harness J-42472 to the wiring harness end only.

J-42472

Ground wire:

3

Measure the resistance with ohmmeter J-39200.

J-39200

Ignition key must be in the OFF position.

Measuring points	Optimal value
1 / alternate ground	<1 Ω

Signal wire:

4

Measure the resistance with ohmmeter J-39200.

J-39200

Ignition key must be in the OFF position.

Measuring points	Optimal value
2 / alternate ground	2.1 k Ω

Check of component

The coolant level sensor

1

Disconnect the connector to the coolant level sensor. Install breakout harness J-42472 to the sensor harness end only.

J-39200
J-42472

Measure the resistance with ohmmeter J-39200.

Ignition key must be in the OFF position.

Measuring points	Optimal value
1 / 2	open circuit (coolant level normal)
1 / 2	<1 Ω (coolant level low)
1 / alternate ground	open circuit
2 / alternate ground	open circuit

Check of Subsystem

Coolant level

1

Ignition key must be in the ON position.

J-41132
J-43233
J-39200

Connect breakout box J-41132 in series between connector EB and the EECU. Connect jumper harness J-43233 in series between connector EA and the EECU.

Measuring points	Optimal value
EB7 / EB8	80% B+ (open, coolant level normal)
EB7 / EB8	0 V (closed, coolant level low)

MID 128 PID 158 Battery Voltage

Fault Codes

FMI 3

Battery voltage too high.

Conditions for fault code:

- The battery voltage exceeds 36 V.

Possible cause:

- Fault in alternator.
- Fast charger connected.

Reaction from the EECU:

- Fault code is set.
- Yellow lamp is requested.

Noticeable external symptom:

- Yellow lamp lights up.

MID 128 PID 158 Battery Voltage, Check

Special tools: J-43233, J-39200, J-41132

NOTE!

Check all the particular connectors for loose connections as well as for switch resistance and oxidation.

For detailed circuit information, refer to "VNL, VNM Electrical Schematics," Group 37.

Check of Subsystem

EECU supply relay

1

Ignition key must be in the ON position. J-41132
J-43233

Connect breakout box J-41132 in series between connector EB and the EECU. Connect jumper harness J-43233 in series between connector EA and the EECU. J-39200

Measuring points	Optimal value
EB9 / EB11	B+
EB10 / EB12	B+
EB9 / EB10	<1 Ω
EB11 / EB12	<1 Ω

MID 128 PID 172 Air Inlet Temperature

An ambient air temperature sensor is mounted in the piping between the air filter and the turbo inlet. In addition to ambient air temperature, the sensor also measures air filter restriction. The air filter restriction function is currently not used.

Fault Codes

FMI 3

Short circuit to voltage or open circuit.

Conditions for fault code:

- The voltage on EB3 exceeds 4.95 V.

Possible cause:

- Short circuit to voltage, signal wire.
- Short circuit to voltage, ground wire.
- Break, signal wire.
- Break, ground wire.
- Fault in sensor.

Reaction from the EECU:

- Fault code is set.
- Yellow lamp is requested.

Noticeable external symptom:

- Yellow lamp lights up.
- Blue smoke in cold weather conditions.

FMI 4

Short circuit to ground.

Conditions for fault code:

- The voltage on EB3 is under 0.08 V.

Possible cause:

- Short circuit to ground, signal wire.
- Fault in sensor.

Reaction from the EECU:

- Fault code is set.
- Yellow lamp is requested.

Noticeable external symptom:

- Yellow lamp lights up.
- Blue smoke in cold weather conditions.

MID 128 PID 172 Air Inlet Temperature, Check

Special tools: J-43233, J-39200, J-41132, 9998534

NOTE!

Check all the particular connectors for loose connections as well as for switch resistance and oxidation.

For detailed circuit information, refer to "VNL, VNM Electrical Schematics," Group 37.

Measurement at the component's connector, to the EECU

1

Note: An incorrect value (below) can also cause the component to fail; therefore, it is important to check the component if any of the values are incorrect.

2

Disconnect the connector to the ambient air temperature sensor. Install breakout harness 9998534 to the wiring harness only.

Ground wire:

3

Measure the resistance with ohmmeter J-39200.

Ignition key must be in the OFF position.

Measuring points	Optimal value
4 / alternate ground	<1 Ω

Signal wire:

4

Measure the resistance with ohmmeter J-39200.

Ignition key must be in the OFF position.

Measuring points	Optimal value
3 / alternate ground	6 k Ω

Check of component

Air temperature sensor

1

Disconnect the connector to the ambient air temperature sensor. Install breakout harness 9998534 to the sensor harness end only.

9998534
J-39200

Measure the resistance with ohmmeter J-39200.

Ignition key must be in the OFF position.

Note: For ambient air temperature/resistance chart, see "Ambient Air Temperature Sensor, Temperature/Resistance Chart" page 135.

Measuring points	Optimal value
3 / 4	5.7 k Ω (20 °C/68 °F)

Check of Subsystem

Ambient air temperature inlet

1

Ignition key must be in the ON position.

Connect breakout box J-41132 in series between connector EB and the EECU. Connect jumper harness J-43233 in series between connector EA and the EECU.


J-41132
J-43233
J-39200

Measuring points	Optimal value
EB3 / EB13	2.6 V (20 °C/68 °F)
EB3 / EB13	1.2 V (50 °C/122 °F)

Note: For ambient air temperature/resistance chart, see "Ambient Air Temperature Sensor, Temperature/Resistance Chart" page 135.

Ambient Air Temperature Sensor, Temperature/Resistance Chart

Air Inlet Temperature Sensor

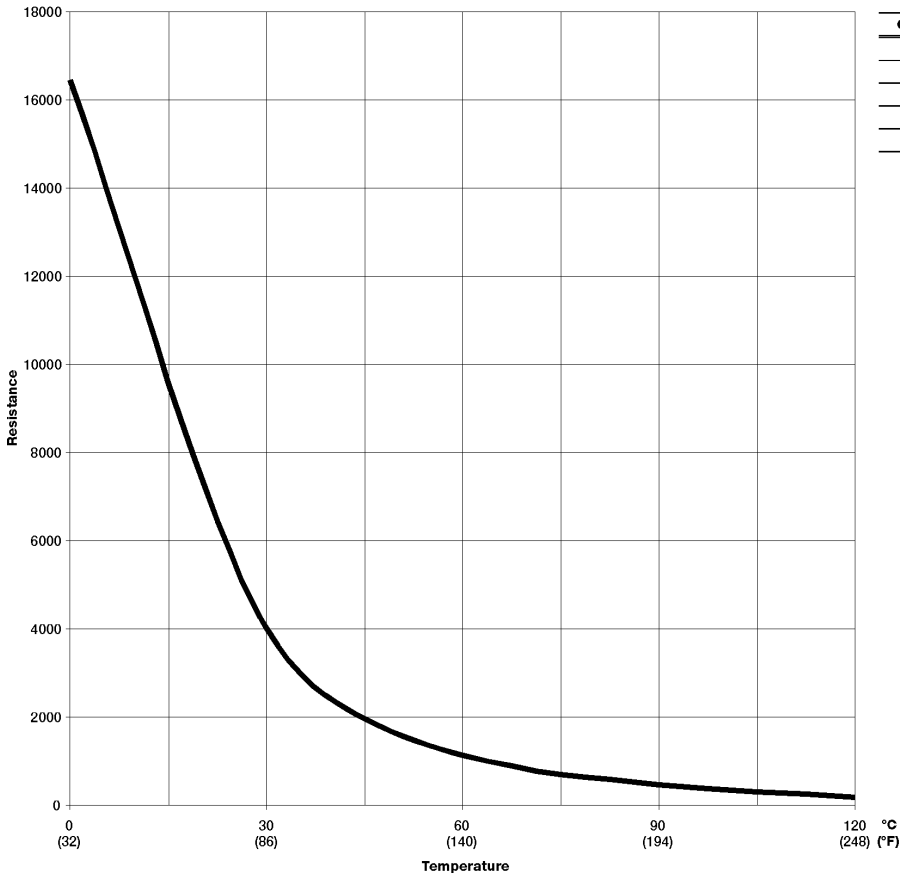

Celcius	Fahrenheit	Resistance
0	32	16445
30	86	4026
60	140	1246
90	194	463
120	248	198

W2002733

MID 128 PID 174 Fuel Temperature

D7C and D12C

In addition to the fuel temperature, the sensor also measures the fuel pressure. The signal is used for fuel density compensation.

Fault Codes

FMI 3

Short circuit to voltage or open circuit.

Conditions for fault code:

- The voltage on EA13 exceeds 4.95 V.

Possible cause:

- Short circuit to voltage, signal wire.
- Short circuit to voltage, ground wire.
- Break, signal wire.
- Break, ground wire.
- Fault in sensor.

Reaction from the EECU:

- Fault code is set.
- Yellow lamp is requested.

Noticeable external symptom:

- Yellow lamp lights up.
- Incorrect fuel quantity.

FMI 4

Short circuit to ground.

Conditions for fault code:

- The voltage on EA13 is under 0.08 V.

Possible cause:

- Short circuit to ground, signal wire.
- Fault in sensor.

Reaction from the EECU:

- Fault code is set.
- Yellow lamp is requested.

Noticeable external symptom:

- Yellow lamp lights up.
- Incorrect fuel quantity.

MID 128 PID 174 Fuel Temperature, Check

Special tools: J-43233, J-39200, J-41132, 9998534

D7C and D12C

Note: Check all the particular connectors for loose connections as well as for switch resistance and oxidation. For detailed circuit information, refer to "VNL, VNM Electrical Schematics," Group 37.

Measurement at the component's connector, to the EECU

1

Note: An incorrect value (below) can also cause the component to fail; therefore, it is important to check the component if any of the values are incorrect.

2

Disconnect the connector to the fuel temperature sensor. Install breakout harness 9998534 to the wiring harness end only.

Ground wire:

3

Measure the resistance with ohmmeter J-39200.

Ignition key must be in the OFF position.

Measuring points	Optimal value
4 / alternate ground	<1 Ω

Supply wire:

4

Measure the voltage with voltmeter J-39200.

Ignition key must be in the ON position.

Measuring points	Optimal value
1 / alternate ground	5 V

Signal wire:

5

Measure the resistance with ohmmeter J-39200.

Ignition key must be in the OFF position.

Measuring points	Optimal value
3 / alternate ground	1.4 k Ω

Check of component

Fuel temperature sensor

1

Disconnect the connector to the fuel temperature sensor. Install breakout harness 9998534 to the sensor connector only.

Measure the resistance with ohmmeter J-39200.

Ignition key must be in the OFF position.

Note: For fuel temperature/resistance chart, see "Fuel Temperature Sensor, Temperature/Resistance Chart" page 139.

Measuring points	Optimal value
3 / 4	1.9 k Ω (20 °C/68 °F)
3 / 4	800 Ω (40 °C/104 °F)
1 / alternate ground	open circuit
3 / alternate ground	open circuit
4 / alternate ground	open circuit

Check of Subsystem

Fuel temperature

1

Ignition key must be in the ON position.

J-41132

J-43233

Connect breakout box J-41132 in series between connector EA and the EECU. Connect jumper harness J-43233 in series between connector EB and the EECU.


J-39200

Measuring points	Optimal value
EA13 / EA5	3.0 V (20 °C/68 °F)
EA13 / EA5	2.0 V (40 °C/104 °F)

Note: For fuel temperature/resistance chart, see "Fuel Temperature Sensor, Temperature/Resistance Chart" page 139.

Fuel Temperature Sensor, Temperature/Resistance Chart

Fuel Temperature Sensor

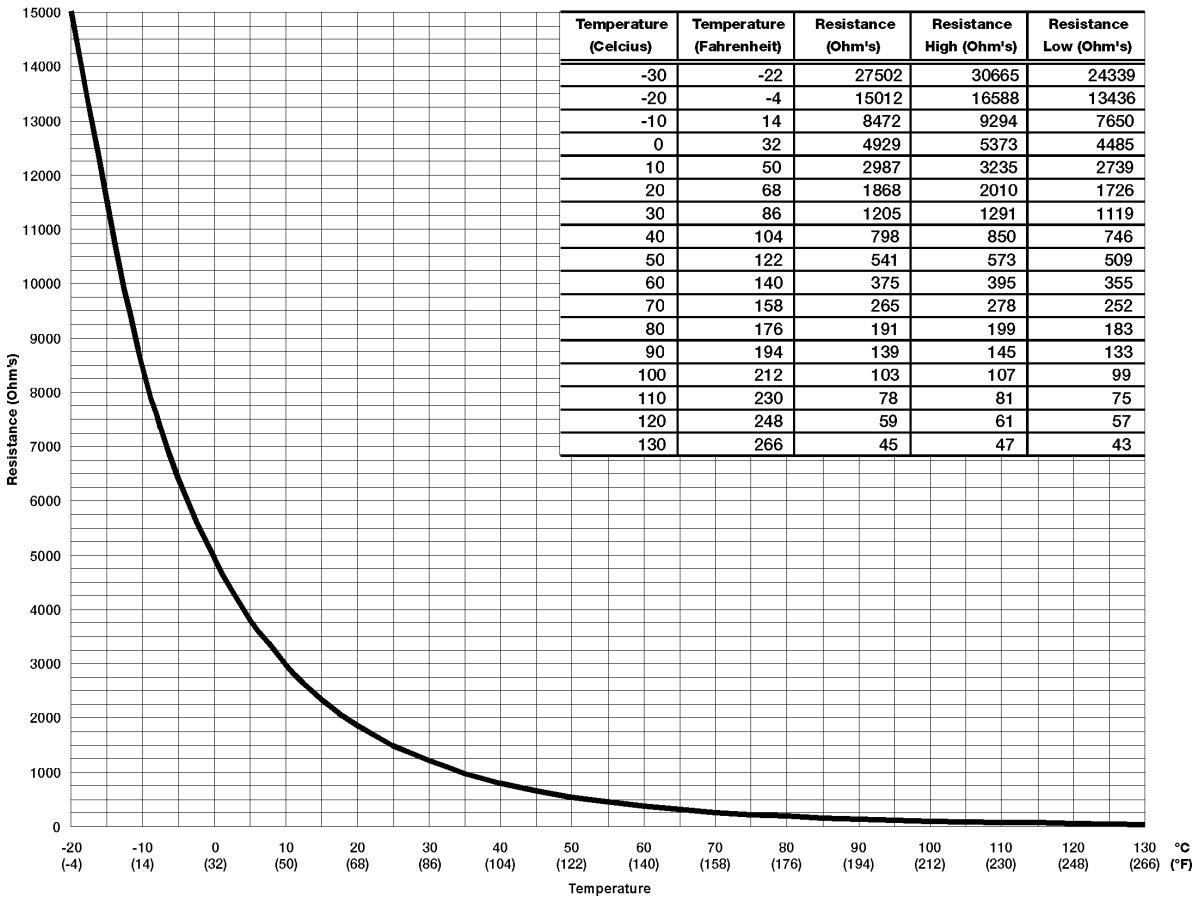

W2002742

MID 128 PID 175 Engine Oil Temperature

In addition to the oil temperature, the sensor also measures the oil pressure.

Fault Codes

FMI 0

Temperature too high.

Conditions for fault code:

- The oil temperature exceeds 130 °C (266 °F).

Possible cause:

- Poor cooling capacity.
- Fault in sensor.

Reaction from the EECU:

- Fault code is set.
- Red lamp is requested.

Noticeable external symptom:

- Red lamp lights up.
- Power reduction in the first stage (at 130 °C (266 °F) and shutdown in 2nd stage (if engine protection is chosen in the data set).

FMI 3

Short circuit to voltage or open circuit.

Conditions for fault code:

- The voltage on EA1 exceeds 4.95 V.

Possible cause:

- Short circuit to voltage, signal wire.
- Short circuit to voltage, ground wire.
- Break, signal wire.
- Break, ground wire.
- Fault in sensor.

Reaction from the EECU:

- Fault code is set.
- Yellow lamp is requested.
- The EECU stops sending PID 175.

Noticeable external symptom:

- Yellow lamp lights up.
- The oil temperature gauge shows 0.

FMI 4

Short circuit to ground.

Conditions for fault code:

- The voltage on EA1 is under 0.08 V.

Possible cause:

- Short circuit to ground, signal wire.
- Fault in sensor.

Reaction from the EECU:

- Fault code is set.
- Yellow lamp is requested.
- The EECU stops sending PID 175.

Noticeable external symptom:

- Yellow lamp lights up.
- The oil temperature gauge shows 0.

MID 128 PID 175 Engine Oil Temperature, Check

Special tools: J-43233, J-39200, J-41132, 9998534

NOTE!

Check all the particular connectors for loose connections as well as for switch resistance and oxidation.

For detailed circuit information, refer to "VN/VHD, Electrical Schematics," Group 37.

Measurement at the component's connector, to the EECU

1

Note: An incorrect value (below) can also cause the component to fail; therefore, it is important to check the component if any of the values are incorrect.

2

Disconnect the connector to the oil temperature sensor. Install breakout harness 9998534 to the wiring harness end only.

Ground wire:

3

Measure the resistance with ohmmeter J-39200.

Ignition key must be in the OFF position.

Measuring points	Optimal value
4 / alternate ground	<1 Ω

Supply wire:

4

Measure the voltage with voltmeter J-39200.

Ignition key must be in the ON position.

Measuring points	Optimal value
1 / alternate ground	5 V

Signal wire:

5

Measure the resistance with ohmmeter J-39200.

Ignition key must be in the OFF position.

Measuring points	Optimal value
3 / alternate ground	1.44 k Ω

Check of component

Oil temperature sensor

1

Disconnect the connector to the oil temperature sensor. Install breakout harness 9998534 to the sensor harness end only.

Measure the resistance with ohmmeter J-39200.

Ignition key must be in the OFF position.

Note: For oil temperature/resistance chart, see "Oil Temperature Sensor, Temperature/Resistance Chart" page 143.

Measuring points	Optimal value
3 / 4	1.9 k Ω (20 °C/68 °F)
3 / 4	100 Ω (100 °C/212 °F)

Check of Subsystem

Oil temperature

1

Ignition key must be in the ON position.

J-41132

J-43233

Connect breakout box J-41132 in series between connector EA and the EECU. Connect jumper harness J-43233 in series between connector EB and the EECU.


J-39200

Measuring points	Optimal value
EA1 / EA5	3.0 V (20 °C/68 °F)
EA1 / EA5	0.4 V (100 °C/212 °F)

Note: For oil temperature/resistance chart, see "Oil Temperature Sensor, Temperature/Resistance Chart" page 143.

Oil Temperature Sensor, Temperature/Resistance Chart

Oil Temperature Sensor

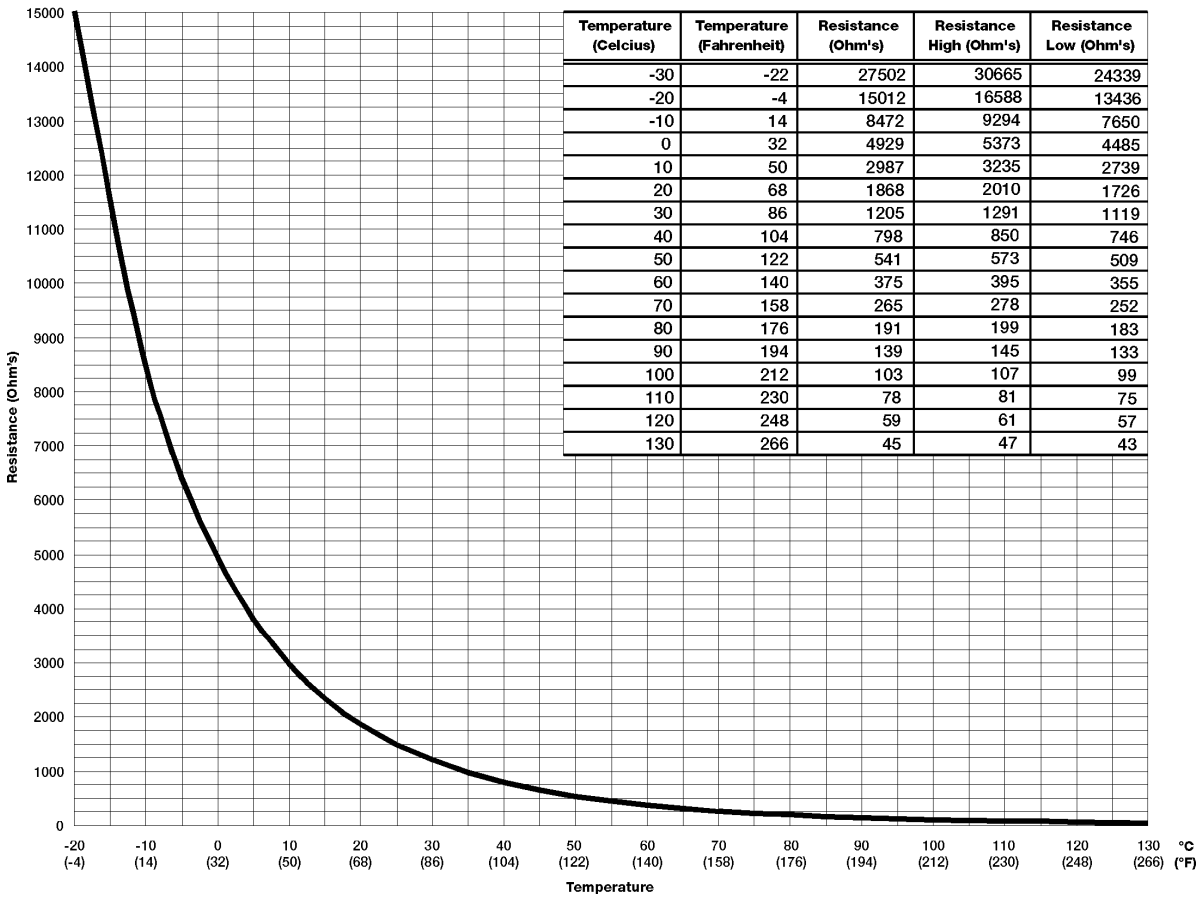

W2002727

MID 128 PID 228 Road Speed Sensor Calibration

Fault Codes

FMI 11

K factor message not available on the information link (SAE J1587).

Conditions for fault code:

- PID 228 the message is not available on the information link (SAE J1587).

Possible cause:

- Fault in the information link (SAE J1587).
- Error from the VECU.

Reaction from the EECU:

- Fault code is set.
- Yellow lamp is requested.

Noticeable external symptom:

- Yellow lamp lights up.

MID 128 PID 228 Road Speed Sensor Calibration, Check

Special tools: J-43233, J-39200, J-41132

NOTE!

Check all the particular connectors for loose connections as well as for switch resistance and oxidation.

For detailed circuit information, refer to "VNL, VNM Electrical Schematics," Group 37.

Also check the VECU. This fault code could be due to the fact that there is a fault in the VECU.

Check of Subsystem

Check of the SAE J1587 Information link

1

Ignition key must be in the ON position. J-41132
J-43233

Connect breakout box J-41132 in series between connector EB and the EECU. Connect jumper harness J-43233 in series between connector EA and the EECU. J-39200

Measuring points	Optimal value
EB25 / DCA (connection A in diagnostics connector)	<1 Ω
EB26 / DCB (connection B in diagnostics connector)	<1 Ω

MID 128 PPID 86 Engine Brake Torque Percent

Fault Codes

FMI 9

Engine brake torque information is not available (SAE J1587 message).

Conditions for fault code:

- PPID 86 the message is not available on the information link (SAE J1587).

Possible cause:

- Fault in the information link (SAE J1587).
- Error from the VECU.

Reaction from the EECU:

- Fault code is set.
- Yellow lamp is requested.

Noticeable external symptom:

- Yellow lamp lights up.

MID 128 PPID 86 Engine Brake Torque Percent, Check

Special tools: J-43233, J-39200, J-41132

NOTE!

Check all the particular connectors for loose connections as well as for switch resistance and oxidation.

For detailed circuit information, refer to "VNL, VNM Electrical Schematics," Group 37.

Also check the VECU. This fault code could be due to the fact that there is a fault in the VECU.

Check of Subsystem

Check of the SAE J1587 Information link

1

Ignition key must be in the ON position. J-41132
J-43233

Connect breakout box J-41132 in series between connector EB and the EECU. Connect jumper harness J-43233 in series between connector EA and the EECU. J-39200

Measuring points	Optimal value
EB25 / DCA (connection A in diagnostics socket)	<1 Ω
EB26 / DCB (connection B in diagnostics socket)	<1 Ω

MID 128 PPID 119 High Coolant Temperature

D12B, D12C, D7C Engines

Fault Codes

FMI 0

Temperature too high.

Conditions for fault code:

- The coolant temperature exceeds 102 °C (216 °F).

Possible cause:

- Low coolant level.
- Fault in thermostat.
- Clogged radiator (internally/externally).
- Clogged intercooler (on the outside).
- Poor through-flow in the cooling system.
- Worn coolant pump.
- Fault in pressure cap, expansion tank.
- Fault in sensor.

Reaction from the EECU:

- Fault code is set.
- Power reduction in the first stage.
- The engine is shut down in the second stage (if engine protection is chosen in the data set).

Noticeable external symptom:

- LED lights up at the coolant temperature gauge.
- Low power output.
- The engine is shut down (if engine protection is chosen in the data set).

Possible checks:

- “MID 128 PPID 119 High Coolant Temperature, Check” page 149.

MID 128 PPID 119 High Coolant Temperature, Check

(D12B, D12C, D7C Engines)

Special tools: 9998534, J-43233, J-39200, J-41132

NOTE!

Check all the particular connectors for loose connections as well as for switch resistance and oxidation.

For detailed circuit information, refer to "VNL, VNM Electrical Schematics," Group 37.

Measurement at the Component's Connector, to the EECU

Note: An incorrect value (below) can also cause the component to fail; therefore, it is important to check the component if any of the values are incorrect.

1

Disconnect the connector to the coolant temperature sensor. Install breakout harness 9998534 to the wiring harness end only.

Ground wire:

2

Measure the resistance using DMM J-39200.

Ignition key must be in the OFF position.

Measuring points	Optimal value
2 / alternate ground	<1 Ω

Signal wire:

3

Measure the resistance using DMM J-39200.

Ignition key must be in the OFF position.

Measuring points	Optimal value
1 / alternate ground	1.4 k Ω

Check of Component

Note: Faults in the component can be caused by faults in the wiring harness of the EECU. Thus, a check of the wiring harness should also be made before connecting a new component.

Coolant Temperature Sensor

1

Disconnect the connector to the coolant temperature sensor. Install breakout harness 9998534 to the sensor harness end only.

2

Measure the resistance with DMM J-39200.

Ignition key must be in the OFF position.

Note: A coolant temperature/resistance chart is available; see "System Check" in Service Publication 200-870, "Fault Codes, Engine Electronic Control Unit," order number PV776-TSP105620/1.

Measuring points	Optimal value
1 / 2	1.9 k Ω / 20 °C (68 °F)
1 / 2	160 Ω / 85 °C (185 °F)
1 / alternate ground	open circuit
2 / alternate ground	open circuit

Check of Subsystem

Coolant Temperature

1

Connect breakout box J-41132 in series between connector EA and the EECU. Connect jumper harness J-43233 in series between connector EB and the EECU.

2

Measure the voltage using DMM J-39200.

J-41132
J-43233
J-39200

Ignition key must be in the ON position.

Measuring points	Optimal value
EA25 / EA5	3,0 V / 20 °C (68 °F)
EA25 / EA5	0,6 V / 85 °C (185 °F)

MID 128 PPID 122 VCB Engine Compression Brake

D12B and D12C Fault Codes

FMI 3

Short circuit to voltage.

Conditions for fault code:

- Output activated.
- Short circuit to battery voltage on EA33.

Possible cause:

- Short circuit to battery voltage between the VCB solenoid valve and EECU.
- Short circuit in VCB solenoid valve.

Reaction from the EECU:

- Fault code is set.
- Yellow lamp is requested.
- The output is switched off.

Noticeable external symptom:

- Yellow lamp lights up.
- Reduced engine brake power because the VCB cannot be activated.

FMI 4

Short circuit to ground.

Conditions for fault code:

- Output switched off.
- Short circuit to ground on EA33.

Possible cause:

- Short circuit to ground between the VCB solenoid valve and EECU.

Reaction from the EECU:

- Fault code is set.
- Yellow lamp is requested.

- The output is switched off.

Noticeable external symptom:

- Yellow lamp lights up.
- VCB is on all the time.
- Low power output.
- Black smoke.
- Extreme uneven operation.

FMI 5

Break.

Conditions for fault code:

- Output switched off.
- Open circuit in the VCB circuit.

Possible cause:

- Open circuit between the VCB solenoid valve and EECU.
- Open circuit in the supply wire to VCB solenoid valve.
- Blown fuse for supply to VCB solenoid valve.
- Open circuit in VCB solenoid valve.

Reaction from the EECU:

- Fault code is set.
- Yellow lamp is requested.
- Output is switched off.

Noticeable external symptom:

- Yellow lamp lights up.
- Reduced engine brake power because the VCB cannot be activated.

MID 128 PPID 122 VCB Engine Compression Brake, Check

Special tools: J-43233, J-39200, J-41132

D12B and D12C

NOTE!

Check all the particular connectors for loose connections as well as for switch resistance and oxidation.

For detailed circuit information, refer to "VNL, VNM Electrical Schematics," Group 37.

Measurement at the component's connector, to the EECU

1

Note: An incorrect value (below) can also cause the component to fail; therefore, it is important to check the component if any of the values are incorrect.

2

Disconnect the two wires at the compression brake solenoid. The compression brake solenoid is located under the valve cover.

"Ground wire"/Control wire:

3

Measure the resistance with ohmmeter J-39200.

Ignition key must be in the OFF position.

Measuring points	Optimal value
Ground control wire / alternate ground	215 k Ω

Supply wire:

4

Measure the voltage with voltmeter J-39200.

Ignition key must be in the ON position.

Measuring points	Optimal value
Supply wire / alternate ground	B+

Check of component

Compression brake solenoid, VCB

1

Disconnect the two wires at the compression brake solenoid. The compression brake solenoid is located under the valve cover. J-39200

Measure the resistance with ohmmeter J-39200.

Ignition key must be in the OFF position.

Measuring points	Optimal value
Solenoid terminal A / B	21 Ω
A / alternate ground	open circuit
B / alternate ground	open circuit

Check of Subsystem

Compression brake, VCB

1

Ignition key must be in the ON position. J-41132
J-43233
J-39200

Connect breakout box J-41132 in series between connector EA and the EECU. Connect jumper harness J-43233 in series between connector EB and the EECU.

Note: Test with "VCB On" can be performed only if the EECU has requested VCB operation.

Measuring points	Optimal value
EA33 / alternate ground	B+ (VCB off)
EA33 / alternate ground	0 V (VCB on)
ground terminal EA33 with a jumper wire	VCB solenoid clicks on

MID 128 PPID 123 EPG 2

D12B and D12C Fault Codes

FMI 3

Short circuit to voltage.

Conditions for fault code:

- Output activated.
- Short circuit to battery voltage on EB36.

Possible cause:

- Short circuit to battery voltage between solenoid valve and EECU.
- Short circuit in solenoid valve.

Reaction from the EECU:

- Fault code is set.
- Yellow lamp is requested.
- EPG1, EPG2 and VCB outputs are switched off.

Noticeable external symptom:

- Yellow lamp lights up.
- The heat retention does not function.
- Blue smoke under cold conditions.
- The engine may be difficult to start.
- Engine brake does not function.

FMI 4

Short circuit to ground.

Conditions for fault code:

- Output switched off.
- Short circuit to ground on EB36.

Possible cause:

- Short circuit to ground between solenoid valve and EECU.

Reaction from the EECU:

- Fault code is set.

- Yellow lamp is requested.

Noticeable external symptom:

- Yellow lamp lights up.
- EPG 2 constantly activated.
- Low power output.
- Black smoke.

FMI 5

Break.

Conditions for fault code:

- Output switched off.
- Open circuit in the EPG2 circuit.

Possible cause:

- Open circuit between solenoid valve and EECU.
- Open circuit in supply wire to solenoid valve.
- Blown fuse for supply to EPG2.
- Open circuit in the solenoid valve.

Reaction from the EECU:

- Fault code is set.
- Yellow lamp is requested.
- EPG1, EPG2 and VCB outputs are switched off.

Noticeable external symptom:

- Yellow lamp lights up.
- The heat retention does not function.
- Blue smoke under cold conditions.
- The engine may be difficult to start.
- Engine brake does not function.

MID 128 PPID 123 EPG 2, Check

D12B and D12C

Special tools: J-43233, J-39200, J-41132, 9998534

NOTE!

Check all the particular connectors for loose connections as well as for switch resistance and oxidation.

For detailed circuit information, refer to "VNL, VNM Electrical Schematics," Group 37.

Measurement at the component's connector, to the EECU

1

Note: An incorrect value (below) can also cause the component to fail; therefore, it is important to check the component if any of the values are incorrect.

2

Disconnect the connector to the EPG control box. Install breakout harness 9998534 to the wiring harness end only.

"Ground wire"/Control wire:

3

Measure the resistance with ohmmeter J-39200.

Ignition key must be in the OFF position.

Measuring points	Optimal value
3 / alternate ground	180 k Ω

Supply wire:

4

Measure the voltage with voltmeter J-39200.

Ignition key must be in the ON position.

Measuring points	Optimal value
1 / alternate ground	B+

Check of component

EPG control (PWM box)

1

Disconnect the connector to the EPG control box. Install breakout harness 9998534 to the EPG control connector only.

9998534
J-39200

Ignition key must be in the OFF position.

Measuring points	Optimal value
1 / 3	23 Ω
1 / alternate ground	open circuit
3 / alternate ground	open circuit

Check of Subsystem

Exhaust pressure governor 2, EPG 2

1

Ignition key must be in the RUN position. Connect breakout box J-41132 in series between connector EB and the EECU. Connect jumper harness J-43233 in series between connector EA and the EECU.

J-41132
J-43233
J-39200

Note: Test with "EPG On" can be performed only if the EECU has requested EPG 2 operation.

Measuring points	Optimal value
EB36 / EB9	B+, EPG 2 off (Engine running, parking brake released, accelerator pedal above idle)
EB36 / EB9	0 V, EPG 2 on (Engine running, parking brake on, accelerator at idle)

MID 128 PPID 124 EPG 1

Fault Codes

FMI 3

Short circuit to voltage.

Conditions for fault code:

- Output activated.
- Short circuit to battery voltage on EB35.

Possible cause:

- Short circuit to battery voltage between solenoid valve and EECU.
- Short circuit in solenoid valve.

Reaction from the EECU:

- Fault code is set.
- Yellow lamp is requested.
- EPG1, EPG2 and VCB outputs are switched off.

Noticeable external symptom:

- Yellow lamp lights up.
- Heat retention does not function.
- Blue smoke under cold conditions.
- Engine may be difficult to start.
- Engine brake does not function.

FMI 4

Short circuit to ground.

Conditions for fault code:

- Output switched off.
- Short circuit to ground on EB35.

Possible cause:

- Short circuit to ground between solenoid valve and EECU.

Reaction from the EECU:

- Fault code is set.

- Yellow lamp is requested.

Noticeable external symptom:

- Yellow lamp lights up.
- EPG 1 constantly activated.
- Low power output.
- Black smoke.

FMI 5

Break.

Conditions for fault code:

- Output switched off.
- Open circuit in the EPG1 circuit.

Possible cause:

- Open circuit between solenoid valve and EECU.
- Open circuit in supply wire to solenoid valve.
- Blown fuse for supply to EPG1.
- Open circuit in the solenoid valve.

Reaction from the EECU:

- Fault code is set.
- Yellow lamp is requested.
- EPG1, EPG2 and VCB outputs are switched off.

Noticeable external symptom:

- Yellow lamp lights up.
- Engine brake does not function.
- Heat retention does not function.
- Blue smoke under cold conditions.
- Engine may be difficult to start.

MID 128 PPID 124 EPG 1, Check

Special tools: J-43233, J-39200, J-41132, 9998534

NOTE!

Check all the particular connectors for loose connections as well as for switch resistance and oxidation.

For detailed circuit information, refer to "VNL, VNM Electrical Schematics," Group 37.

Measurement at the component's connector, to the EECU

1

Note: An incorrect value (below) can also cause the component to fail; therefore, it is important to check the component if any of the values are incorrect.

2

Disconnect the connector to the EPG control box (D12B) or the EPG solenoid (D7C). Install breakout harness 9998534 to the wiring harness end only.

"Ground wire"/Control wire:

3

Measure the resistance with ohmmeter J-39200.

Ignition key must be in the OFF position.

Measuring points	Optimal value
4 / alternate ground	180 Ω

Supply wire:

4

Measure the voltage with voltmeter J-39200.

Ignition key must be in the ON position.

Measuring points	Optimal value
1 / alternate ground	B+

Check of component (D12B only)

EPG control (PWM box)

1

Note: This procedure is for the D12B engine only. The D7C engine uses a single EPG solenoid; to check the solenoid used on the D7C, see publication TSI-270-600-07 (11/96).

2

Disconnect the connector to EPG control. Install breakout harness 9998534 to the EPG control connector only.

Ignition key must be in the OFF position.

Measuring points	Optimal value
1 / 4	23 Ω
1 / alternate ground	open circuit
4 / alternate ground	open circuit

Check of Subsystem

Exhaust pressure governor 1, EPG 1

1

Ignition key must be in the ON position. Connect breakout box J-41132 in series between connector EB and the EECU. Connect jumper harness J-43233 in series between connector EA and the EECU.

Note: Test with "EPG On" can be performed only if the EECU has requested EPG 1 operation.

Measuring points	Optimal value
EB35 / EB9	B+ (EPG off)
EB35 / EB9	0 V (EPG on)

MID 128 SID 1/2/3/4/5/6 Injector

D12B and D12C

Error Code Information

Error code	Explanation
SID 1	Injector 1
SID 2	Injector 2
SID 3	Injector 3
SID 4	Injector 4
SID 5	Injector 5
SID 6	Injector 6

Fault Codes

FMI 2

Short circuit to battery voltage, injectors high side.

Conditions for fault code:

- Injector activated.
- Short circuit to battery voltage on pin EA12 or EA24 (each respective injector bank's high side).

Possible cause:

- Short circuit to battery voltage in the wiring to the injectors' high side.

Reaction from the EECU:

- Fault code is set.
- Yellow lamp is requested.
- The particular injector bank is switched off.

Noticeable external symptom:

- Yellow lamp lights up.
- Low power output.
- Uneven operation.
- Abnormal noise.
- 3 cylinder operation.

FMI 3

Short circuit to battery voltage or short-circuited injector, injector low side.

Conditions for fault code:

- Injector activated.
- Short circuit to battery voltage on each respective injector's low side (EA11, EA22, EA23, EA34, EA35, EA36).

Possible cause:

- Short circuit between high and low side.
- Short circuit to battery voltage in the wiring to the injectors' low side.

Reaction from the EECU:

- Fault code is set.
- Yellow lamp is requested.
- The particular injector or the whole of the affected injector bank is switched off.

Noticeable external symptom:

- Yellow lamp lights up.
- Low power output.
- Uneven operation.
- Abnormal noise.
- 3 or 5 cylinder operation.

FMI 4

Short circuit to ground, injector low or high side.

Conditions for fault code:

- Injector activated.
- Short circuit to ground on each respective injector's low side (EA11, EA22, EA23, EA34, EA35, EA36) or high side (EA12, EA24).

Possible cause:

- Short circuit to ground in the wiring for each respective injector's low or high side.

Reaction from the EECU:

- Fault code is set.
- Yellow lamp is requested.
- The particular injector bank is switched off.

Noticeable external symptom:

- Yellow lamp lights up.
- Low power output.
- Uneven operation.
- Abnormal noise.
- 3 cylinder operation.

FMI 5

Open circuit in the injector circuit.

Conditions for fault code:

- Injector activated.
- Open circuit in the injector circuit.

Possible cause:

- Open circuit in the wiring on low or high side. If 3 fault codes have been set (a bank) the open circuit is on that bank's high side, if there is only one fault code the open circuit is on the particular injector's low side.

Reaction from the EECU:

- Fault code is set.
- Yellow lamp is requested.
- One or three injectors are switched off.

Noticeable external symptom:

- Yellow lamp lights up.
- Low power output.
- Uneven operation.
- Abnormal noise.

- 3 or 5 cylinder operation.

FMI 7

The mechanical system does not respond in the correct way

Conditions for fault code:

- Injector activated.
- Cylinder balancing data too high.

Possible cause:

- Fault in injector.
- Poor compression.

Reaction from the EECU:

- Fault code is set.
- Yellow lamp is requested.
- The particular injector is switched off.

Noticeable external symptom:

- Yellow lamp lights up.
- Low power output.
- Uneven operation.
- Abnormal noise.
- 5 cylinder operation.

FMI 11

Unidentifiable error.

Conditions for fault code:

- Injector activated.

Possible cause:

- Intermittent faults.

Reaction from the EECU:

- Fault code is set.
- Yellow lamp is requested.
- The particular injector or the whole injector bank is switched off.

Noticeable external symptom:

- Yellow lamp lights up.
- Low power output.
- Uneven operation.
- Abnormal noise.
- 3 or 5 cylinder operation.

MID 128 SID 1/2/3/4/5/6 Injector, Check

Special tools: J-43233, J-39200, J-41132

D12B and D12C

NOTE!

Check all the particular connectors for loose connections as well as for switch resistance and oxidation.

For detailed circuit information, refer to "VNL, VNM Electrical Schematics," Group 37.

Note that small resistances are difficult to measure. Use the value instead as a standard value for the open circuit in the injector circuits.

Measurement at the component's connector, to the EECU

1

Note: An incorrect value (below) can also cause the component to fail; therefore, it is important to check the component if any of the values are incorrect.

Wires

2

Connect breakout box J-41132 to the EA connector, wiring harness end only. **DO NOT connect 100pt to the EECU.**

J-39200
J-41132

Measure the resistance with ohmmeter J-39200.

Ignition key must be in the OFF position.

Measuring points	Optimal value
EA11 / EA12	1.7 Ω
EA22 / EA12	1.7 Ω
EA23 / EA12	1.7 Ω
EA34 / EA24	1.7 Ω
EA35 / EA24	1.7 Ω
EA36 / EA24	1.7 Ω
EA11 / alternate ground	open circuit
EA22 / alternate ground	open circuit
EA23 / alternate ground	open circuit
EA34 / alternate ground	open circuit
EA35 / alternate ground	open circuit
EA36 / alternate ground	open circuit

Check of component

Injectors

1

Disconnect both the connections for each respective injector. J-39200

Measure the resistance with ohmmeter J-39200 on the injector.

Ignition key must be in the OFF position.

Measuring points	Optimal value
High side / low side	1.5 - 2.0 Ω
High side / alternate ground	open circuit
Low side / alternate ground	open circuit

MID 128 SID 17 Fuel Shutoff Valve

D7C only

Fault Codes

FMI 3

Short circuit to battery voltage.

Conditions for fault code:

- Output activated.
- Short circuit to battery voltage on EB34.

Possible cause:

- Short circuit to battery voltage on wire between solenoid valve and EECU.
- Short circuit internally in the solenoid valve.

Reaction from the EECU:

- Fault code is set.
- Yellow lamp is requested.
- Output is switched off.

Noticeable external symptom:

- Yellow lamp lights up.
- Engine stops or does not start.
- No fuel reaches the nozzle.

FMI 4

Short circuit to ground.

Conditions for fault code:

- Output switched off.
- Short circuit to ground on EB34.

Possible cause:

- Short circuit to ground on wire between solenoid

valve and EECU.

Reaction from the EECU:

- Fault code is set.
- Yellow lamp is requested.

Noticeable external symptom:

- Yellow lamp lights up.
- The solenoid valve permanently activated.

FMI 5

Open circuit in the fuel shut-off circuit.

Conditions for fault code:

- Output switched off.
- Open circuit in the fuel shut-off circuit.

Possible cause:

- Open circuit between solenoid valve and EECU.
- Open circuit in supply wire to fuel shut-off valve.
- Open circuit in solenoid valve.

Reaction from the EECU:

- Fault code is set.
- Yellow lamp is requested.

Noticeable external symptom:

- Yellow lamp lights up.
- Engine stops or does not start.
- No fuel reaches the nozzle.

MID 128 SID 17 Fuel Shutoff Valve, Check

Special tools: J-43233, J-39200, J-41132, 9998534

D7C only

Measurement at the component's connector, to the EECU

1

Note: An incorrect value (below) can also cause the component to fail; therefore, it is important to check the component if any of the values are incorrect.

2

Disconnect the connector to the fuel shut-off valve solenoid. Install breakout harness 9998534 to the wiring harness end only.

"Ground wire"/Control wire:

3

Measure the resistance with ohmmeter J-39200.

Ignition key must be in the OFF position.

Measuring points	Optimal value
2 / alternate ground	190 k Ω

Supply wire:

4

Measure the voltage with voltmeter J-39200.

Ignition key must be in the ON position.

Measuring points	Optimal value
1 / alternate ground	B+

Check of component

Fuel shut-off valve solenoid

1

Disconnect the connector to the fuel shut-off valve solenoid. Install breakout harness 9998534 to the solenoid harness end only.

Ignition key must be in the OFF position.

Measuring points	Optimal value
1 / 2	10.7 Ω
1 / alternate ground	open circuit
2 / alternate ground	open circuit

Check of Subsystem

Fuel shut-off

1

Ignition key must be in the ON position. Connect breakout box J-41132 in series between connector EB and the EECU. Connect jumper harness J-43233 in series between connector EA and the EECU.

Measuring points	Optimal value
EB34 / EB9	0 V

MID 128 SID 20 Timing Sleeve

D7C only Fault Codes

FMI 2

Short circuit to battery voltage, timing sleeve, positive side.

Conditions for fault code:

- Short circuit to battery voltage on EA9 (EECU checks only when switching on the ignition).

Possible cause:

- Short circuit to battery voltage on positive side.

Reaction from the EECU:

- Fault code is set.
- Yellow lamp is requested.

Noticeable external symptom:

- Yellow lamp lights up.

FMI 3

Short circuit to battery voltage, timing sleeve, ground side.

Conditions for fault code:

- Short circuit to battery voltage on EA21 (EECU checks only when switching on the ignition).

Possible cause:

- Short circuit between power and ground side.
- Short circuit to battery voltage on ground side.

Reaction from the EECU:

- Fault code is set.
- Red lamp is requested.
- The timing sleeve cannot be checked.
- Output for timing sleeve and rack drive are switched off.

Noticeable external symptom:

- Red lamp lights up.
- The engine stops or does not start.

FMI 4

Short circuit to ground, timing sleeve, ground side.

Conditions for fault code:

- Short circuit to ground on EA21.

Possible cause:

162

- Short circuit to ground, ground side.

Reaction from the EECU:

- Fault code is set.
- Red lamp is requested.
- Injection angle cannot be checked.
- Output for timing sleeve and rack drive are switched off.

Noticeable external symptom:

- Red lamp lights up.
- The engine stops or does not start.

FMI 5

Open circuit in the circuit to timing sleeve.

Conditions for fault code:

- Open circuit between the EECU and the injection pump.

Possible cause:

- Open circuit in the wires between the EECU and the injection pump.

Reaction from the EECU:

- Fault code is set.
- Red lamp is requested.
- Output for timing sleeve and rack drive are switched off.

Noticeable external symptom:

- Red lamp lights up.
- The engine stops or does not start.

FMI 6

Short circuit to ground, timing sleeve positive side.

Conditions for fault code:

- Short circuit to ground on EA9.

Possible cause:

- Short circuit to ground, positive side.

Reaction from the EECU:

- Fault code is set.
- Red lamp is requested.
- Output for timing sleeve and rack drive are switched off.

Noticeable external symptom:

- Red lamp lights up.
- The engine stops or does not start.

FMI 7

The mechanical system does not respond in the correct way

Conditions for fault code:

- Needle lift signal available.
- Incorrect timing sleeve.

Possible cause:

- Internal fault in the injection pump.
- Interference in needle lift signal.

Reaction from the EECU:

- Fault code is set.
- Red lamp is requested.
- Output for timing sleeve and rack drive are switched off.

Noticeable external symptom:

- Red lamp lights up.
- The engine stops or does not start.

FMI 8

Current too high to timing sleeve under long period of time.

Conditions for fault code:

- Current too high to timing sleeve.

Possible cause:

- Internal fault in the injection pump.
- Internal fault in the EECU.

Reaction from the EECU:

- Fault code is set.
- Red lamp is requested.
- Output for timing sleeve and rack drive are switched off.

Noticeable external symptom:

- Red lamp lights up.
- The engine stops or does not start.

FMI 11

Unidentifiable error.

Conditions for fault code:

- An unidentifiable error has been found.

Reaction from the EECU:

- Fault code is set.
- Red lamp is requested.
- Output for timing sleeve and rack drive are switched off.

Noticeable external symptom:

- Red lamp lights up.
- The engine stops or does not start.

MID 128 SID 20 Timing Sleeve, Check

Special tools: J-43233, J-39200, J-41132, J-38748

D7C only

NOTE!

Check all the particular connectors for loose connections as well as for switch resistance and oxidation.

For detailed circuit information, refer to:

Service Manuals Function Group 37
Electrical Schematics, VNL, VNM

IMPACT Function Group 2841
Information Type: Diagnostic "Fault Codes"

Note that small resistances are difficult to measure. Use the value instead as a standard value for an open in the timing sleeve circuit.

Measurement at the component's connector, to the EECU

1
Note: An incorrect value (below) can also cause the component to fail; therefore, it is important to check the component if any of the values are incorrect.

2
Disconnect the connector to the timing sleeve (7-pin connector on the rear of the injection pump). Take measurements on the wiring harness connector only.

Ground wire:

3
Measure the resistance with ohmmeter J-39200. J-39200

Ignition key must be in the OFF position.

Measuring points	Optimal value
4 / alternate ground	60 k Ω

Supply wire:

4
Measure the resistance with ohmmeter J-39200. J-39200

Ignition key must be in the OFF position.

Measuring points	Optimal value
3 / alternate ground	40 Ω

Check of component

Timing sleeve

1
Disconnect the connector to the timing sleeve (7-pin connector on the rear of the injection pump). Install breakout box J-38748 to the pump connector end only. J-38748
J-39200

Measure the resistance with ohmmeter J-39200.

Ignition key must be in the OFF position.

Measuring points	Optimal value
3 / 4	1.3 Ω
3 / alternate ground	open circuit
4 / alternate ground	open circuit

MID 128 SID 21 Engine Position Timing Sensor

D12B and D12C

The primary function of the engine position sensor (cam sensor) is to provide engine position information to the EECU. As a secondary function, it also provides engine timing (speed) information.

Fault Codes

FMI 3

Short circuit to voltage or permanent loss of signal.

Conditions for fault code:

- Engine position signal is not available.

Possible cause:

- Short circuit to voltage, positive wire.
- Short circuit to voltage, negative wire.
- Short circuit to ground, positive wire.
- Open circuit in positive wire.
- Open circuit in negative wire.
- An incorrectly installed sensor (incorrect distance to cam sensor wheel).
- Reversed polarity on the sensor.
- Faulty sensor.
- Damaged cam sensor wheel.

Reaction from the EECU:

- Fault code is set.
- Yellow lamp is requested.
- The EECU uses engine timing sensor signal instead; if this is also incorrect, the engine stops.

Noticeable external symptom:

- Yellow lamp lights up.
- Difficult to start at the next start (no symptom if the fault code is set when the engine is running).

FMI 8

Abnormal frequency.

Conditions for fault code:

- The EECU detects extra pulses on the engine position signal.

Possible cause:

- Electrical interference in the engine position signal.
- Poor insulation or faulty wires.
- An incorrectly installed sensor (incorrect distance to

cam sensor wheel).

- Faulty sensor.
- Damaged cam sensor wheel.

Reaction from the EECU:

- Fault code is set.
- Yellow lamp is requested.
- The EECU uses the engine timing sensor signal instead; if this is also incorrect, the engine stops.

Noticeable external symptom:

- Yellow lamp lights up.
- Difficult to start at the next start (no symptom if the fault code is set when the engine is running).

MID 128 SID 21 Engine Position Timing Sensor, Check

Special tools: J-43233, J-39200, J-41132, 998534

D12B and D12C

NOTE!

Check all the particular connectors for loose connections as well as for switch resistance and oxidation.

For detailed circuit information, refer to "VNL, VNM Electrical Schematics," Group 37.

Measurement at the component's connector, to the EECU

1
Note: An incorrect value (below) can also cause the component to fail; therefore, it is important to check the component if any of the values are incorrect.

2
Disconnect the connector to the engine position sensor. Install breakout harness 9998534 to the wiring harness end only.

Ground wire:

3
Measure the resistance with ohmmeter J-39200.

Ignition key must be in the OFF position.

Measuring points	Optimal value
2 / alternate ground	48 k Ω

Supply wire:

4
Measure the voltage with voltmeter J-39200.

Ignition key must be in the ON position.

Measuring points	Optimal value
1 / alternate ground	2 V

Check of component

Engine position sensor

1
Disconnect the connector to the engine position sensor. Install breakout harness 9998534 to the sensor harness end only.

Measure the resistance with ohmmeter J-39200.

Ignition key must be in the OFF position.

Measuring points	Optimal value
1 / 2	775 - 945 Ω
1 / alternate ground	open circuit
2 / alternate ground	open circuit

MID 128 SID 21 Needle Lift Sensor

D7C only

Needle lift sensor. The needle lift sensor is located on first the cylinder.

Fault Codes

FMI 2

Intermittent loss of signal or incorrect signal.

Conditions for fault code:

- Engine speed greater than 450 rpm.
- Fuel injection is carried out.
- Missing signal.

Possible cause:

- Loose connection sensor.
- Open circuit in one of the wires.
- Short circuit to ground on any of the wires.
- Short circuit to battery voltage on any of the wires.
- Lack of fuel.
- Faulty sensor.
- No fuel injection in cylinder 1.

Reaction from the EECU:

- Fault code is set.
- Yellow lamp is requested.
- Timing sleeve (injection angle) is controlled without feedback.

Noticeable external symptom:

- Yellow lamp lights up.
- Higher fuel consumption than normal.

MID 128 SID 21 Needle Lift Sensor, Check

Special tools: J-43233, J-39200, J-41132, 9998534

D7C only

NOTE!

Check all the particular connectors for loose connections as well as for switch resistance and oxidation.

For detailed circuit information, refer to "VNL, VNM Electrical Schematics," Group 37.

Measurement at the component's connector, to the EECU

1

Note: An incorrect value (below) can also cause the component to fail; therefore, it is important to check the component if any of the values are incorrect.

2

Disconnect the connector to the needle lift sensor. Install breakout harness 9998534 to the wiring harness end only.

9998534

Ground wire:

3

Measure the resistance with ohmmeter J-39200.

J-39200

Ignition key must be in the OFF position.

Measuring points	Optimal value
2 / alternate ground	0.5 Ω

Supply wire:

4

Measure the voltage with voltmeter J-39200.

J-39200

Ignition key must be in the ON position.

Measuring points	Optimal value
1 / alternate ground	B+

Check of component

Needle lift sensor

1

Disconnect the connector to the needle lift sensor. Install breakout harness 9998534 to the sensor harness end only.

9998534
J-39200

Measure the resistance with ohmmeter J-39200.

Ignition key must be in the OFF position.

Measuring points	Optimal value
1 / 2	65 - 165 Ω
1 / alternate ground	open circuit
2 / alternate ground	open circuit

MID 128 SID 22 Engine Speed Sensor

The primary function of the engine timing sensor (crank sensor) is to provide engine timing (speed) information to the EECU. As a secondary function, it also provides limited engine position information.

Fault Codes

FMI 2

Intermittent loss of signal or incorrect signal.

Conditions for fault code:

- Incorrect engine timing signal.

Possible cause:

- Electrical interference in the engine timing signal.
- Loose connection.
- Poor insulation or faulty wire.
- An incorrectly installed sensor (incorrect distance to the flywheel).
- Faulty sensor.
- Damaged teeth on flywheel.

Reaction from the EECU:

- Fault code is set.
- Yellow lamp is requested.
- The EECU uses the engine position signal instead. If this is also incorrect, the engine stops.

Noticeable external symptom:

- Yellow lamp lights up.
- The engine stops if the engine position signal also disappears.

FMI 3

Short circuit to voltage or permanent loss of signal.

Conditions for fault code:

- Signal is not available.

Possible cause:

- Short circuit to voltage, positive wire.
- Short circuit to voltage, negative wire.
- Short circuit to ground, positive wire.
- Open circuit in positive wire.
- Open circuit in negative wire.
- An incorrectly installed sensor.
- Faulty sensor.

Reaction from the EECU:

- Fault code is set.
- Yellow lamp is requested.
- The EECU uses the engine position signal instead. If this is also incorrect, the engine stops.

Noticeable external symptom:

- Yellow lamp lights up.
- The engine stops if the engine position signal also disappears.

FMI 8

Abnormal frequency.

Conditions for fault code:

- The EECU detects extra pulses on the engine timing signal.

Possible cause:

- Electrical interference.
- An incorrectly installed sensor.
- Faulty sensor.
- Damaged teeth on flywheel.

Reaction from the EECU:

- Fault code is set.
- Yellow lamp is requested.
- The EECU uses the engine position signal instead. If this is also incorrect, the engine stops.

Noticeable external symptom:

- Yellow lamp lights up.
- The engine stops if the engine position signal also disappears.

MID 128 SID 22 Engine Speed Sensor, Check

Special tools: J-43233, J-39200, J-41132, 9998534

NOTE!

Check all the particular connectors for loose connections as well as for switch resistance and oxidation.

For detailed circuit information, refer to "VNL, VNM Electrical Schematics," Group 37.

Measurement at the component's connector, to the EECU

1

Note: An incorrect value (below) can also cause the component to fail; therefore, it is important to check the component if any of the values are incorrect.

2

Disconnect the connector to the engine timing sensor. Install breakout harness 9998534 to the wiring harness end only.

Ground wire:

3

Measure the resistance with ohmmeter J-39200.

Ignition key must be in the OFF position.

Measuring points	Optimal value
2 / alternate ground	48 k Ω

Supply wire:

4

Measure the voltage with voltmeter J-39200.

Ignition key must be in the ON position.

Measuring points	Optimal value
1 / alternate ground	2 V

Check of component

Engine timing sensor

1

Disconnect the connector to the engine timing sensor. Install breakout harness 9998534 to the sensor harness end only.

Measure the resistance with ohmmeter J-39200.

Ignition key must be in the OFF position.

Measuring points	Optimal value
1 / 2	775 - 945 Ω
1 / alternate ground	open circuit
2 / alternate ground	open circuit

MID 128 SID 23 Rack Actuator

D7C only Fault Codes

FMI 2

Short circuit to battery voltage, rack drive positive side.

Conditions for fault code:

- Short circuit to battery voltage on EA8 (EECU checks only when switching on the ignition).

Possible cause:

- Short circuit to battery voltage, positive side.

Reaction from the EECU:

- Fault code is set.
- Yellow lamp is requested.

Noticeable external symptom:

- Yellow lamp lights up.

FMI 3

Short circuit to battery voltage, rack drive ground side.

Conditions for fault code:

- Fuel injection is requested.
- Short circuit to battery voltage on EA10.

Possible cause:

- Short circuit between power and ground side.
- Short circuit to battery voltage, ground side.

Reaction from the EECU:

- Fault code is set.
- Red lamp is requested.
- EECU connection for power and ground sides is switched off.

Noticeable external symptom:

- Red lamp lights up.
- The engine stops or does not start.

FMI 4

Short circuit to ground, rack drive ground side.

Conditions for fault code:

- Short circuit to ground on EA10.

Possible cause:

- Short circuit to ground, ground side.

Reaction from the EECU:

- Fault code is set.
- Red lamp is requested.
- EECU connection for power and ground sides is switched off.

Noticeable external symptom:

- Red lamp lights up.
- The engine stops or does not start.

FMI 5

Open circuit in the circuit for rack drive.

Conditions for fault code:

- Open circuit in the circuit for rack drive.

Possible cause:

- Open circuit in wires between EECU and rack drive.
- Open circuit in rack drive.

Reaction from the EECU:

- Fault code is set.
- Red lamp is requested.
- EECU connection for power and ground sides is switched off.

Noticeable external symptom:

- Red lamp lights up.
- The engine stops or does not start.

FMI 6

Short circuit to ground, rack drive positive side.

Conditions for fault code:

- Short circuit to ground on EA8.

Possible cause:

- Short circuit to ground, positive side.

Reaction from the EECU:

- Fault code is set.
- Red lamp is requested.
- EECU connection for power and ground sides is switched off.

Noticeable external symptom:

- Red lamp lights up.
- The engine stops or does not start.

FMI 7

The mechanical system does not respond in the correct way

Conditions for fault code:

- The rack drive does not move as expected.

Possible cause:

- Rack drive stuck.
- Mechanical fault in the pump.
- Fault in rack drive position sensor.

Reaction from the EECU:

- Fault code is set.
- Red lamp is requested.
- EECU connection for power and ground sides is switched off.

Noticeable external symptom:

- Red lamp lights up.

- The engine stops or does not start.

FMI 8

Current too high to rack drive under long period of time.

Conditions for fault code:

- The current to rack drive is too high for a long period.

Possible cause:

- Internal fault in the pump.
- Internal fault in the EECU.

Reaction from the EECU:

- Fault code is set.
- Red lamp is requested.
- EECU connection for power and ground sides is switched off.

Noticeable external symptom:

- Red lamp lights up.
- The engine stops or does not start.

FMI 11

Unidentifiable error.

Conditions for fault code:

- An unidentifiable error has been found.

Reaction from the EECU:

- Fault code is set.
- Red lamp is requested.
- EECU connection for power and ground sides is switched off.

Noticeable external symptom:

- Red lamp lights up.
- The engine stops or does not start.

MID 128 SID 23 Rack Actuator, Check

Special tools: J-43233, J-39200, J-41132, J-38748

D7C only

NOTE!

Check all the particular connectors for loose connections as well as for switch resistance and oxidation.

For detailed circuit information, refer to "VNL, VNM Electrical Schematics," Group 37.

Note that small resistances are difficult to measure. Use the value instead as a standard value for an open in the rack drive.

Measurement at the component's connector, to the EECU

1

Note: An incorrect value (below) can also cause the component to fail; therefore, it is important to check the component if any of the values are incorrect.

2

Disconnect the connector to the rack drive (7-pin connector on the rear of the injection pump). Take measurements on the wiring harness connector only.

Ground wire:

3

Measure the resistance with ohmmeter J-39200.

Ignition key must be in the OFF position.

Measuring points	Optimal value
2 / alternate ground	60 k Ω

Supply wire:

4

Measure the resistance with ohmmeter J-39200.

Ignition key must be in the OFF position.

Measuring points	Optimal value
7 / alternate ground	40 k Ω

Check of component

Rack drive

1

Disconnect the connector to the rack drive (7-pin connector on the rear of the injection pump). Install breakout box J-38748 to the pump connector end only.

Measure the resistance with ohmmeter J-39200.

Ignition key must be in the OFF position.

Measuring points	Optimal value
2 / 7	0.7 Ω
1 / alternate ground	open circuit
2 / alternate ground	open circuit

MID 128 SID 24 Rack Position Sensor

D7C only Fault Codes

FMI 2

Incorrect data.

Conditions for fault code:

- Unreasonable measurement value from rack position sensor.

Possible cause:

- Sensor value outside measurement range.
- Open circuit or short circuit in wires.
- Internal fault in the pump.
- Faulty sensor.

Reaction from the EECU:

- Fault code is set.
- Red lamp is requested.
- Output for rack drive is switched off.

Noticeable external symptom:

- Red lamp lights up.
- The engine stops or does not start.

FMI 13

Sensor values outside calibration values.

Conditions for fault code:

- Unreasonable measurement value at start-up.

Possible cause:

- Uncalibrated sensor.
- Faulty sensor.

Reaction from the EECU:

- Fault code is set.
- Red lamp is requested.
- Output for rack drive actuator is switched off.

Noticeable external symptom:

- Red lamp lights up.
- The engine does not start.

MID 128 SID 24 Rack Position Sensor, Check

Special tools: J-43233, J-39200, J-41132, J-38748

D7C only

NOTE!

Check all the particular connectors for loose connections as well as for switch resistance and oxidation.

For detailed circuit information, refer to "VNL, VNM Electrical Schematics," Group 37.

Note that small resistances are difficult to measure. Use the value instead as a standard value for an open in the rack position sensor.

Measurement at the component's connector, to the EECU

1

Note: An incorrect value (below) can also cause the component to fail; therefore, it is important to check the component if any of the values are incorrect.

2

Disconnect the connector to the rack drive (7-pin connector on the rear of the injection pump). Take measurements on the wiring harness connector only.

Reference wire:

3

Measure the resistance with ohmmeter J-39200.

Ignition key must be in the OFF position.

Measuring points	Optimal value
1 / alternate ground	5.5 k Ω

Search wire:

4

Measure the resistance with ohmmeter J-39200.

Ignition key must be in the OFF position.

Measuring points	Optimal value
5 / alternate ground	5.5 k Ω

Check of component

Rack position sensor

1

Disconnect the connector to the rack drive (7-pin connector on the rear of the injection pump). Install breakout box J-38748 to the pump connector end only.

Measure the resistance with ohmmeter J-39200.

Ignition key must be in the OFF position.

Measuring points	Optimal value
5 / 6	20 Ω (search coil)
1 / 6	20 Ω (reference coil)
1, 5, 6 / alternate ground	open circuit

MID 128 SID 33 Fan Control

Fault Codes

FMI 3

Short circuit to voltage.

Conditions for fault code:

- Output activated.
- Short circuit to voltage on EB21.

Possible cause:

- Short circuit to battery voltage between solenoid valve and EECU.
- Short circuit in solenoid valve for fan control.

Reaction from the EECU:

- Fault code is set.
- Yellow lamp is requested.
- Output is switched off.

Noticeable external symptom:

- Yellow lamp lights up.
- The fan is in constant operation.
- Increased fuel consumption.

FMI 4

Short circuit to ground.

Conditions for fault code:

- Output switched off.
- Short circuit to ground on EB21.

Possible cause:

- Short circuit to ground between solenoid valve and EECU.

Reaction from the EECU:

- Fault code is set.
- Yellow lamp is requested.
- Output is switched off.

Noticeable external symptom:

- Yellow lamp lights up.
- The fan does not come on.
- Increased coolant temperature.

FMI 5

Break.

Conditions for fault code:

- Output switched off.
- Open circuit in the circuit for fan control.

Possible cause:

- Open circuit in the wiring between solenoid valve and EECU.
- Open circuit in solenoid valve for fan control.
- Open circuit in supply wire to solenoid valve for fan control.
- Blown fuse to supply for the fan control's solenoid valve.

Reaction from the EECU:

- Fault code is set.
- Yellow lamp is requested.
- Output is switched off.

Noticeable external symptom:

- Yellow lamp lights up.
- The fan is in constant operation.
- Increased fuel consumption.

MID 128 SID 33 Fan Control, Check

Special tools: J-43233, J-39200, J-41132, J-43147

NOTE!

Check all the particular connectors for loose connections as well as for switch resistance and oxidation.

For detailed circuit information, refer to "VNL, VNM Electrical Schematics," Group 37.

Measurement at the component's connector, to the EECU

1

Note: An incorrect value (below) can also cause the component to fail; therefore, it is important to check the component if any of the values are incorrect.

2

Disconnect the connector to the fan control solenoid valve. Install breakout harness J-43147 to the wiring harness end only. J-43147

"Ground wire"/Control wire:

3

Measure the resistance with ohmmeter J-39200. J-39200

Ignition key must be in the OFF position.

Measuring points	Optimal value
B / alternate ground	200 k Ω

Supply wire:

4

Measure the voltage with voltmeter J-39200. J-39200

Ignition key must be in the ON position.

Measuring points	Optimal value
A / alternate ground	B+

Check of component

Fan control solenoid valve

1

Disconnect the connector to the fan control solenoid valve. Install breakout harness J-43147 to the solenoid valve harness end only. J-43147
J-39200

Measure the resistance with ohmmeter J-39200.

Ignition key must be in the OFF position.

Measuring points	Optimal value
A / B	20 Ω

Check of Subsystem

Fan control

1

Ignition key must be in the ON position. J-41132
J-43233
J-39200

Connect breakout box J-41132 in series between connector EB and the EECU. Connect jumper harness J-43233 in series between connector EA and the EECU.

Measuring points	Optimal value
EB21 / EB9	B+ (fan on)
EB21 / EB9	0 V (fan off)
ground terminal EB21 with a jumper wire	fan control solenoid valve releases fan

MID 128 SID 64 Redundant Engine Speed Sensor

D7C only

The redundant engine speed sensor is used as a secondary engine timing (speed) and secondary engine position sensor. Primary engine timing (speed) information is provided by the engine timing (crank) sensor. Primary engine position information is provided by the needle lift sensor.

Fault Codes

FMI 3

Short circuit to voltage or permanent loss of signal.

Conditions for fault code:

- Engine position signal is not available.

Possible cause:

- Short circuit to battery voltage, positive wire.
- Short circuit to voltage, negative wire.
- Short circuit to ground, positive wire.
- Open circuit in positive wire.
- Open circuit in negative wire.
- An incorrectly installed sensor (incorrect distance to pump speed sensor wheel).
- Reversed polarity on the sensor.
- Faulty sensor.
- Damaged pump speed sensor wheel.

Reaction from the EECU:

- Fault code is set.
- Yellow lamp is requested.

Noticeable external symptom:

- Yellow lamp lights up.

FMI 8

Abnormal frequency.

Conditions for fault code:

- The EECU detects extra pulses on the engine position signal.

Possible cause:

- Electrical interference in the engine position signal.
- Poor insulation or faulty wires.
- An incorrectly installed sensor (incorrect distance to pump speed sensor wheel).
- Faulty sensor.
- Damaged pump speed sensor wheel.

Reaction from the EECU:

- Fault code is set.
- Yellow lamp is requested.

Noticeable external symptom:

- Yellow lamp lights up.

MID 128 SID 64 Redundant Engine Speed Sensor, Check

Special tools: J-43233, J-39200, J-41132

D7C only

NOTE!

Check all the particular connectors for loose connections as well as for switch resistance and oxidation.

For detailed circuit information, refer to "VNL, VNM Electrical Schematics," Group 37.

Measurement at the component's connector, to the EECU

1

Note: An incorrect value (below) can also cause the component to fail; therefore, it is important to check the component if any of the values are incorrect.

2

Disconnect the connector to the engine position sensor. Install breakout harness 9998534 to the wiring harness end only.

Ground wire:

3

Measure the resistance with ohmmeter J-39200.

Ignition key must be in the OFF position.

Measuring points	Optimal value
2 / alternate ground	48 k Ω

Supply wire:

4

Measure the voltage with voltmeter J-39200.

Ignition key must be in the ON position.

Measuring points	Optimal value
1 / alternate ground	2 V

Check of component

Redundant engine speed sensor

1

Disconnect the connector to the redundant engine speed sensor. Install breakout harness J-43233 to the sensor harness end only.

Measure the resistance with ohmmeter J-39200.

Ignition key must be in the OFF position.

Measuring points	Optimal value
1 / 2	775 - 945 Ω
1 / alternate ground	open circuit
2 / alternate ground	open circuit

MID 128 SID 70 Preheater Element 1

Each preheater is equipped with a fuse between the preheating relay and element. The fuse and element are monitored by a sense wire that determines if the circuit is intact.

Fault Codes

FMI 3

Short circuit to battery voltage.

Conditions for fault code:

- Preheating relay not activated.
- The voltage on EB5 is greater than 65% B+.

Possible cause:

- Short circuit to battery voltage on EB5.
- Preheating relay constantly on.

Reaction from the EECU:

- Fault code is set.
- Yellow lamp is requested.
- Preheating relay is switched off.

Noticeable external symptom:

- Yellow lamp lights up.
- Preheating relay may be constantly activated.
- High inlet temperature.
- High current consumption.
- Discharged battery.

FMI 4

Short circuit to ground.

Conditions for fault code:

- Preheating requested.
- Short circuit to ground on EB5.

Possible cause:

- Short circuit to ground on EB5.
- Preheating relay damaged.

Reaction from the EECU:

- Fault code is set.
- Yellow lamp is requested.
- Output to pre-heating relay is switched off.

Noticeable external symptom:

- Yellow lamp lights up.
- Preheating does not function.
- White smoke for cold start.
- Difficult to start in extreme cold.

FMI 5

Break.

Conditions for fault code:

- The voltage on EB5 is greater than 5% B+ and less than 65% B+.

Possible cause:

- Open circuit in element or wires.

Reaction from the EECU:

- Fault code is set.
- Yellow lamp is requested.
- Output for the pre-heating relay is switched off.

Noticeable external symptom:

- Yellow lamp lights up.
- Preheating does not function.
- Difficult to start in extreme cold.

MID 128 SID 70 Preheater Element 1, Check

Special tools: J-43233, J-39200, J-41132

NOTE!

Check all the particular connectors for loose connections as well as for switch resistance and oxidation.

For detailed circuit information, refer to "VNL, VNM Electrical Schematics," Group 37.

Measurement at the component's connector, to the EECU

1

Note: An incorrect value (below) can also cause the component to fail; therefore, it is important to check the component if any of the values are incorrect.

2

Disconnect sense wire (small solid red wire) at pre-heat relay #1.

Signal wire:

3

Measure the resistance with ohmmeter J-39200.

Ignition key must be in the OFF position.

Measuring points	Optimal value
Sense wire / alternate ground	1.4 k Ω

Check of component

Preheating 1, element

1

Remove the fuse and support (red plastic part) between the pre-heat relay and the pre-heat element terminal.

Ignition key must be in the OFF position.

Measure the resistance with ohmmeter J-39200.

Measuring points	Optimal value
Preheat element terminal / alternate ground	<1 Ω

Check of Subsystem

Preheating 1, element diagnostics

1

Ignition key must be in the ON position. J-41132 J-43233

Connect breakout box J-41132 in series between connector EB and the EECU. Connect jumper harness J-43233 in series between connector EA and the EECU. J-39200

Note: Test with "Preheat On" can be performed only if the EECU has requested pre-heat.

Measuring points	Optimal value
EB5 / EB9	B+ (Preheating on)
EB5 / EB9	0 V (Preheating off)

MID 128 SID 71 Preheater Element 2

D12B only

Each preheater is equipped with a fuse between the preheating relay and element. The fuse and element are monitored by a sense wire that determines if the circuit is intact.

Fault Codes

FMI 3

Short circuit to battery voltage.

Conditions for fault code:

- Preheating relay not activated.
- The voltage on EB16 is greater than 65% B+.

Possible cause:

- Short circuit to battery voltage on EB16.
- Preheating relay constantly on.

Reaction from the EECU:

- Fault code is set.
- Yellow lamp is requested.
- The preheating relay is switched off.

Noticeable external symptom:

- Yellow lamp lights up.
- Preheating relay may be constantly on.
- High inlet temperature.
- High current consumption.
- Discharged battery.

FMI 4

Short circuit to ground.

Conditions for fault code:

- Preheating requested.
- Short circuit to ground on EB16.

Possible cause:

- Short circuit to ground on EB16.
- Preheating relay damaged.

Reaction from the EECU:

- Fault code is set.
- Yellow lamp is requested.
- Output to preheating relay is switched off.

Noticeable external symptom:

- Yellow lamp lights up.

- Preheating does not function.
- White smoke for cold start.
- Difficult to start in extreme cold.

FMI 5

Break.

Conditions for fault code:

- The voltage on EB16 is greater than 5% B+ and less than 65% B+.

Possible cause:

- Open circuit in element or wires.

Reaction from the EECU:

- Fault code is set.
- Yellow lamp is requested.
- Output for preheating relay is switched off.

Noticeable external symptom:

- Yellow lamp lights up.
- Preheating does not function.
- Difficult to start in extreme cold.

MID 128 SID 71 Preheater Element 2, Check

Special tools: J-43233, J-39200, J-41132

D12B

NOTE!

Check all the particular connectors for loose connections as well as for switch resistance and oxidation.

For detailed circuit information, refer to “VNL, VNM Electrical Schematics,” Group 37.

Measurement at the component's connector, to the EECU

1

Note: An incorrect value (below) can also cause the component to fail; therefore, it is important to check the component if any of the values are incorrect.

2

Disconnect the sense wire (small red/white wire) at pre-heat relay #2.

Signal wire:

3

Measure the resistance with ohmmeter J-39200.

Ignition key must be in the OFF position.

Measuring points	Optimal value
Sense wire / alternate ground	1.4 k Ω

Check of component

Preheating 2, element

1

Remove the fuse and support (red plastic part) between pre-heat relay #2 and pre-heat element #2 terminal. J-39200

Ignition key must be in the OFF position.

Measure the resistance with ohmmeter J-39200.

Measuring points	Optimal value
Preheat element terminal / alternate ground	<1 Ω

Check of Subsystem

Preheating 2, element diagnostics

1

Ignition key must be in the ON position. J-41132 J-43233

Connect breakout box J-41132 in series between connector EB and the EECU. Connect jumper harness J-43233 in series between connector EA and the EECU. J-39200

Note: Test with “Preheat On” can be performed only if the EECU has requested pre-heat.

Measuring points	Optimal value
EB16 / EB9	B+ (Preheating on)
EB16 / EB9	0 V (Preheating off)

MID 128 SID 230 Idle Validation Switch 1

Fault Codes

FMI 3

Short circuit to battery voltage.

Conditions for fault code:

- Accelerator pedal released.
- The voltage on EB4 exceeds 75% of B+.

Possible cause:

- Short circuit to battery voltage on wire between EECU and VECU.
- Error in accelerator pedal.

Reaction from the EECU:

- Fault code is set.
- Yellow lamp is requested.

Noticeable external symptom:

- Yellow lamp lights up.
- The "limp home" function does not function.

FMI 4

Short circuit to ground or open circuit.

Conditions for fault code:

- Accelerator pedal pressed down > 50 %.
- The voltage on EB4 is below 25% of B+.

Possible cause:

- Short circuit to ground on wire between EECU and VECU.
- Open circuit in wire between EECU and VECU.
- Error in accelerator pedal.

Reaction from the EECU:

- Fault code is set.
- Yellow lamp is requested.

Noticeable external symptom:

- Yellow lamp lights up.
- The "limp home" function does not function.

MID 128 SID 230 Idle Validation Switch 1, Check

Special tools: J-43233, J-39200, J-41132

NOTE!

Check all the particular connectors for loose connections as well as for switch resistance and oxidation.

For detailed circuit information, refer to “VNL, VNM Electrical Schematics,” Group 37.

Check of Subsystem

Buffered idle validation switch

1

Ignition key must be in the ON position. J-41132
J-43233

Connect breakout box J-41132 in series between connector EB and the EECU. Connect jumper harness J-43233 in series between connector EA and the EECU. J-39200

Measuring points	Optimal value
EB4 / EB9	< 4 V (accelerator pedal at idle)
EB4 / EB9	> 8 V (accelerator pedal off idle)

MID 128 SID 231 SAE J1939 Control Link

Fault Codes

FMI 2

Communications link (SAE J1939) does not function.

Conditions for fault code:

- No messages are received from the communications link (SAE J1939).

Possible cause:

- Open circuit in communications link (SAE J1939).
- Short circuit to voltage on communications link (SAE J1939).
- Short circuit to ground on communications link (SAE J1939).
- wires in communications link (SAE J1939) short-circuited to each other.

Reaction from the EECU:

- Fault code is set.
- Yellow lamp is requested.
- Information is read/sent instead on the information link (SAE J1587).

Noticeable external symptom:

- Yellow lamp lights up.
- Cruise Control does not function.
- PTO does not function.
- Preheating relay does not function.
- Engine brake does not function.
- Driver position no. 2 does not function.

FMI 9

Communications link (SAE J1939) does not function.

Conditions for fault code:

- Communications link (SAE J1939) does not function.

Possible cause:

- Wires in communications link (SAE J1939) short-circuited to each other.
- Temporary malfunction in hardware.
- Loose connection.
- Intermittent fault in the wiring.

Reaction from the EECU:

- Fault code is set.
- Yellow lamp is requested.

- Information is read/sent instead on the information link (SAE J1587).

Noticeable external symptom:

- Yellow lamp lights up.
- Temporary loss of function on:- Cruise Control- PTO.- Pre-heating- Engine brake- Driver position no. 2

FMI 11

Unidentifiable error.

Conditions for fault code:

- Communications link (SAE J1939) does not function internally in EECU at start-up.

Possible cause:

- Internal fault in EECU.

Reaction from the EECU:

- Fault code is set.
- Yellow lamp is requested.
- Information is read/sent instead on the information link (SAE J1587).

Noticeable external symptom:

- Yellow lamp lights up.
- Cruise Control does not function.
- PTO does not function.
- Preheating does not function.
- Engine brake does not function.
- Driver position no. 2 does not function.

FMI 12

Loss of message from the VECU.

Conditions for fault code:

- The communication between EECU and VECU does not function.

Possible cause:

- No contact with VECU.

Reaction from the EECU:

- Fault code is set.
- Yellow lamp is requested.
- Information is read/sent instead on the information link (SAE J1587).

Noticeable external symptom:

- Yellow lamp lights up.
- Cruise Control does not function.
- PTO does not function.
- Preheating does not function.
- Engine brake does not function.
- Driver position no. 2 does not function.

MID 128 SID 232 5 Volt DC Supply

Fault Codes

FMI 3

Short circuit to voltage.

Conditions for fault code:

- The voltage on EA4 exceeds 5.5 V.

Possible cause:

- Short circuit to battery voltage on the output.

Reaction from the EECU:

- Fault code is set.
- Yellow lamp is requested.

Noticeable external symptom:

- Yellow lamp lights up.
- Incorrect values on oil pressure sensor and boost pressure sensor.
- fault code on oil pressure sensor and boost pressure sensor.
- Low power output.
- Oil pressure gauge and boost pressure gauge show 0 in the instrument.

FMI 4

Short circuit to ground.

Conditions for fault code:

- The voltage on EA4 is under 4.5 V.

Possible cause:

- Short circuit to ground.
- Short circuit in sensor.
- Faulty sensor.

Reaction from the EECU:

- Fault code is set.
- Yellow lamp is requested.

Noticeable external symptom:

- Yellow lamp lights up.
- fault code on oil pressure sensor and boost pressure sensor.
- Oil pressure gauge and boost pressure gauge show 0 in the instrument.
- Low power output.

MID 128 SID 232 5 Volt DC Supply, Check

Special tools: J-43233, J-39200, J-41132, 9998534

NOTE!

Check all the particular connectors for loose connections as well as for switch resistance and oxidation.

For detailed circuit information, refer to "VNL, VNM Electrical Schematics," Group 37.

Measurement at the component's connector, to the EECU

1

Note: An incorrect value (below) can also cause the component to fail; therefore, it is important to check the component if any of the values are incorrect.

2

Disconnect the individual connectors to the fuel temperature sensor (D7C only), boost air temperature/pressure sensor, coolant temperature sensor, and oil temperature/pressure sensor. Install breakout harness 9998534 to the wiring harness end only.

Ground wire:

3

Measure the resistance with ohmmeter J-39200.

Ignition key must be in the OFF position.

Measuring points	Optimal value
2 / alternate ground	<1 Ω (coolant temperature)
4 / alternate ground	<1 Ω (oil pressure/temperature, boost air pressure/temperature, fuel temperature)

Supply wire:

4

Measure the voltage with voltmeter J-39200.

Ignition key must be in the ON position.

Measuring points	Optimal value
1 / alternate ground	5 V (oil pressure/temperature, boost air pressure/temperature, fuel temperature)

Check of sub-system

5 V supply to sensors

1

Ignition key must be in the ON position. Connect breakout box J-41132 in series between connector EA and the EECU. Connect jumper harness J-43233 in series between connector EB and the EECU.

Measuring points	Optimal value
EA4 / EA5	4.8 - 5.15 V

MID 128 SID 240 Program Memory

Fault Codes

FMI 2

Incorrect checksum in program memory.

Conditions for fault code:

- Incorrect checksum (EECU calculates only at start-up).

Possible cause:

- Error when programming.
- Internal fault in the EECU.

Reaction from the EECU:

- Fault code is set.
- Red lamp is requested.

Noticeable external symptom:

- Red lamp lights up.
- The engine does not start.

FMI 12

Incorrect checksum in program memory.

Conditions for fault code:

- Incorrect checksum.

Possible cause:

- Internal fault in the EECU.

Reaction from the EECU:

- Fault code is set.

Noticeable external symptom:

- None.

MID 128 SID 250 SAE J1587/1708 Information Link

Fault Codes

FMI 12

Internal fault in the EECU.

Conditions for fault code:

- The information link (SAE J1587) does not function internally in the EECU.

Possible cause:

- Internal fault in the EECU.

Reaction from the EECU:

- Fault code is set.
- Yellow lamp is requested.

Noticeable external symptom:

- Yellow lamp lights up.
- Information from the EECU is not available on the information link (SAE J1587).
- The boost pressure gauge shows 0.
- The oil pressure gauge shows 0.
- The oil temperature gauge shows 0.
- The coolant temperature gauge shows 0.
- The tachometer shows 0.

MID 128 SID 253 Data Set Memory EEPROM

Fault Codes

FMI 2

Incorrect checksum in data set memory.

Conditions for fault code:

- Checksum error.

Possible cause:

- Internal fault in the EECU.
- Error when programming.

Reaction from the EECU:

- Fault code is set.
- Red lamp is requested.

Noticeable external symptom:

- Red lamp lights up.
- The engine does not start.

FMI 12

Incorrect checksum in data set memory.

Conditions for fault code:

- Checksum error.

Possible cause:

- Internal fault in the EECU.

Reaction from the EECU:

- Fault code is set.
- Red lamp is requested.

Noticeable external symptom:

- Red lamp lights up.
- The engine does not start.

MID 128 SID 254 Engine Electronic Control Unit (EECU)

Fault Codes

FMI 2

Internal fault in the EECU.

Conditions for fault code:

- Incorrect self test in the EECU.

Possible cause:

- Internal fault in the EECU.

Reaction from the EECU:

- Fault code is set.
- Red lamp is requested.

Noticeable external symptom:

- Red lamp lights up.
- The engine does not start.

FMI 8

Internal fault in the EECU.

Conditions for fault code:

- Incorrect self test in the EECU.

Possible cause:

- Internal fault in the EECU.

Reaction from the EECU:

- Fault code is set.
- Red lamp is requested.

Noticeable external symptom:

- Red lamp lights up.
- The engine does not start.

FMI 9

Internal fault in the EECU.

Conditions for fault code:

- Incorrect self test in the EECU.

Possible cause:

- Internal fault in the EECU.

Reaction from the EECU:

- Fault code is set.
- Red lamp is requested.

Noticeable external symptom:

- Red lamp lights up.
- The engine does not start.

FMI 11

Internal fault in the EECU.

Conditions for fault code:

- Incorrect self test in the EECU.

Possible cause:

- Internal fault in the EECU.

Reaction from the EECU:

- Fault code is set.
- Red lamp is requested.

Noticeable external symptom:

- Red lamp lights up.
- The engine does not start.

FMI 12

Internal fault in the EECU.

Conditions for fault code:

- Incorrect self test in the EECU.

Possible cause:

- Internal fault in the EECU.

Reaction from the EECU:

- Fault code is set.
- Red lamp is requested.

Noticeable external symptom:

- Red lamp lights up.
- The engine does not start.

FMI 13

Internal fault in the EECU.

Conditions for fault code:

- Incorrect self test in the EECU.

Possible cause:

- Internal fault in the EECU.

Reaction from the EECU:

- The EECU restarts.
- fault code can be requested, will not automatically be shown.

Noticeable external symptom:

- The engine falters.

MID 144 VECU

MID 144 Fault Code Table

MID:Message Identification Description.

SID:Subsystem Identification Description.

PID:Parameter Identification Description.

FMI:Failure Mode Identifier.

Error code	Component/Function	FMI	Section
MID 144-PID 29	Second Accelerator Pedal Position	3, 4, 5	"MID 144 PID 29 Second Accelerator Pedal Position Sensor" page 198
MID 144-PID 84	Road Speed	9	"MID 144 PID 84 Road Speed" page 201
MID 144-PID 91	Accelerator Pedal Position	9, 11	"MID 144 PID 91 Accelerator Pedal Position" page 204
MID 144-PID 152	VECU, Number of Resets	9	"MID 144 PID 152 VECU, Number of Resets" page 207
MID 144-PPID 69	Idle Validation Switch	9, 11	"MID 144 PPID 69 Idle Validation Switch" page 208
MID 144-PPID 70	Pedal Switches, Supply	1, 3, 4	"MID 144 PPID 70 Pedal Switches, Supply" page 211
MID 144-PPID 71	Cruise Control and Engine Brake, Supply Switch	1, 3, 4	"MID 144 PPID 71 Cruise Control and Engine Brake, Supply Switch" page 215
MID 144-PPID 72	Accelerator Pedal, Supply Sensors	3, 4	"MID 144 PPID 72 Accelerator Pedal, Supply Sensors" page 220
MID 144-PPID 73	Second Accelerator Pedal, Supply Sensors	3, 4	"MID 144 PPID 73 Second Accelerator Pedal, Supply Sensors" page 223
MID 144-PPID 75	Range Inhibitor, Solenoid Valve Status	0, 3, 4, 5	"MID 144 PPID 75 Range Inhibitor, Solenoid Valve Status" page 226
MID 144-SID 230	Idle Validation Switch 1	3, 4	"MID 144 SID 230 Idle Validation Switch 1" page 229
MID 144-SID 231	SAE J1939 Control Link	0, 3, 4	"MID 144 SID 231 SAE J1939 Control Link" page 232
MID 144-SID 240	Program Memory	1	"MID 144 SID 240 Program Memory" page 234
MID 144-SID 243	Cruise Control Set Switch	3	"MID 144 SID 243 Cruise Control Set Switch" page 235

Error code	Component/Function	FMI	Section
MID 144–SID 250	SAE J1587/1708 Information Link	3, 4	“MID 144 SID 250 SAE J1587/1708 Information Link” page 238
MID 144–SID 253	Data Set Memory EEPROM	3, 4	“MID 144 SID 253 Data Set Memory EEPROM” page 240
MID144-PSID 3	Idle Validation Switch 3	7	“MID 144 PSID 3 Idle Validation Switch 3” page 241

MID 144 PID 29 Second Accelerator Pedal Position Sensor

Applies only to vehicles with a second accelerator pedal assembly (such as the WX).

- **Text Messages**
In vehicles equipped with diagnostic display, the following message(s) will appear:
- **Instrument Cluster Graphics Display (VN):**
Second throttle.
- **Data Link Instrument Cluster (WG, AC, WX):**
The Data Link instrument cluster graphics display used on WG-, AC-, and WX-series vehicles can display a limited number of text messages. For information, see "Data Link Instrumentation," Volvo Service Publication PV776-381-620SM.
- **VCADS Pro Display:**
Second throttle position, %

Fault Codes

FMI 3

Abnormally high voltage.

Conditions for fault code:

- If the VECU receives a signal from the sensor that is higher than 4.3 V, the VECU interprets this as a fault and an fault code is set.

Possible cause:

- Open circuit in ground wire.
- Signal wire short circuited to higher voltage.
- Faulty second accelerator position sensor.
- Faulty idle validation switch 3.

Reaction from the VECU:

- Fault code is set.
- Yellow lamp is requested.

Noticeable external symptom:

- Yellow lamp lights up.
- The engine does not respond when the second accelerator pedal is depressed.

FMI 4

Abnormally low voltage.

Conditions for fault code:

- If the VECU receives a signal from the sensor that is lower than 0.4 V, the VECU interprets this as a fault and an fault code is set.

Possible cause:

- Open circuit in supply wire.
- Open circuit in signal wire.
- Signal wire short-circuited to ground.
- Faulty second accelerator position sensor.
- Switch resistance and oxidation.

Reaction from the VECU:

- Fault code is set.
- Yellow lamp is requested.

Noticeable external symptom:

- Yellow lamp lights up.
- The engine does not respond when the second accelerator pedal is depressed.

MID 144 PID 29 Second Accelerator Pedal Position Sensor, Check

Other special equipment: J-39200, J-41133, 9998551, J-43340, J-43234

NOTE!

- Read off the other fault codes for the VECU.
- Check the particular connectors during the fault tracing for oxidation and switch resistance. For detailed circuit information, refer to "VNL, VNM Electrical Schematics," Group 37.

Appropriate Tests in the VCADS Pro Tool

The following test(s) are useful for closely examining the component's function:

27104-8 Extra accelerator control, switches and sensor, test

Measurement at the Component's Connector, to the VECU

Note: Faults in the wiring harness to the VECU can damage the component. Therefore, a check of the component should also be made if any of the measurement values deviate from the expected value.

1 Disconnect the connector at the second accelerator pedal. Install 5-pin breakout harness J-41133 to the wiring harness end only.

Ground wire:

2 Turn the ignition key to the OFF position.

3 Connect an ohmmeter to the breakout harness pins and measure the resistance.

Measuring points	Expected value
Pin E / alternate ground	<1 Ω

Supply wire:

4 Turn the ignition key to the ON position.

5 Connect a voltmeter to the breakout harness pins and measure the voltage. J-39200

Measuring points	Expected value
Pin A / Pin E	5.4 \pm 20% V

Signal wire:

6 Turn the ignition key to the OFF position.

7 Connect an ohmmeter to the breakout harness pins and measure the resistance. J-39200

Measuring points	Expected value
Pin B / Pin E	100 \pm 20% k Ω

Wiring harness

8 To check the wiring harness, see "VNL, VNM Electrical Schematics," Group 37.

Check of component

Second accelerator position sensor

Note: Faults in the component can be caused by faults in the wiring harness of the VECU. A check of the wiring harness should also therefore be made before connecting a new component.

1 Disconnect the connector at the second accelerator pedal. Install 5-pin breakout harness J-41133 to the second accelerator pedal harness end only. J-41133

2 Turn the ignition key to the OFF position.

3 Connect an ohmmeter to the breakout harness pins and measure the resistance. J-39200

Measuring points	Expected value
Pin A / Pin E	4 \pm 20% k Ω
Pin A / Pin B	4.5 \pm 20% k Ω (accelerator pedal at idle)

Check of Subsystem

1
Disconnect the VECU and install adapter J-43234 between the VECU and wiring harness connectors PB/PA.

2
Connect the 60-pin breakout box 9998551 (with overlay J-43340) to the adapter.

Ground wire:

3
Turn the ignition key to the OFF position.

4
Connect an ohmmeter to the 60-pin breakout box and measure the resistance.

Measuring points	Optimal value
PB23 / Alternate ground	<1 Ω

Supply wire:

5
Ignition key in ON position.

6
Connect a voltmeter to the 60-pin breakout box and measure the voltage.

Measuring points	Optimal value
PB26 / PB23	5 \pm 20% V

Signal wire:

7
Turn the ignition key to the ON position.

8
Connect a voltmeter to the 60-pin breakout box and measure the voltage.

Measuring points	Expected value
PB25 / PB23	0.5 \pm 20% V (accelerator pedal at idle)
	3.2 \pm 20% V (full acceleration)

Verification

To verify that the fault has been corrected, use the test in the VCADS Pro tool (see "Appropriate Tests in the VCADS Pro Tool" page 198).

MID 144 PID 84 Road Speed

The speed signal comes from a sensor on the transmission or as a digital signal if an electronically-controlled transmission is used (i.e. Allison). Diagnostic settings (level 1.5 parameters) are factory programmed based on the transmission type used.

- **Text Messages**

In vehicles equipped with diagnostic display, the following message(s) will appear:

- **Instrument Cluster Graphics Display (VN):**

Road speed.

- **Data Link Instrument Cluster (WG, AC, WX):**

The Data Link instrument cluster graphics display used on WG-, AC-, and WX-series vehicles can display a limited number of text messages. For information, see "Data Link Instrumentation," Volvo Service Publication PV776-381-620SM.

- **VCADS Pro Display:**

Road speed

Fault Codes

FMI 5

Abnormally low current or open circuit.

Conditions for fault code:

- If the VECU registers a current lower than 90 μA on any of the signal wires from the speed sensor the VECU interprets this as a fault and a fault code is set.

Possible cause:

- Poor contact, sensor connection.
- Switch resistance and oxidation.
- Break, signal wire.
- Fault in sensor.

Reaction from the VECU:

- Yellow lamp lights up.

Noticeable external symptom:

- No vehicle speed on gauge.
- No PTO.
- No cruise control.

FMI 6

Abnormally high current or short circuit.

Conditions for fault code:

- If the VECU registers a current higher than 140 μA on any of the signal wires from the speed sensor, the VECU interprets this as a fault and a fault code is set.

Possible cause:

- Signal wire short-circuited to higher voltage.
- Signal wire short-circuited to ground.
- Fault in sensor.

Reaction from the VECU:

- Yellow lamp lights up.

Noticeable external symptom:

- No vehicle speed on gauge.
- No PTO.
- No cruise control.

MID 144 PID 84 Road Speed, Check

Other special equipment: J-39200, 9998551, J-43340, J-43234

NOTE!

- Read off the other fault codes for the VECU.
- Check the particular connectors during the fault tracing for oxidation and switch resistance. For detailed circuit information, refer to “VNL, VNM Electrical Schematics,” Group 37.

Appropriate Tests in the VCADS Pro Tool

The following test(s) are useful for closely examining the component’s function:

N/A No test currently available.

Measurement at the Component’s Connector, to the VECU

Note: Faults in the wiring harness to the VECU can damage the component. Therefore, a check of the component should also be made if any of the measurement values deviate from the expected value.

1
Disconnect the VECU and install adapter J-43234 to the wiring harness connector PB only.

2
Connect 60–pin breakout box 9998511 (with overlay J-43340) to the adapter.

Signal wire

3
Turn the ignition key to the OFF position.

4
Connect an ohmmeter to the 60–pin breakout box and measure resistance.

Measuring points	Expected value	Transmission
PB6/PB20	265 ± 20% Ω	Volvo
	3.4k ± 20% Ω	Fuller
	3.17k ± 20% Ω	Allison HT-740
	NO DIAG-NOSTICS	Allison Automatic
* Value may vary depending on transmission manufacturer.		

Wiring Harness

5
To check the wiring harness, refer to “VNL, VNM Electrical Schematics,” Group 37.

Check of Component — Vehicle Speed Sensor

Note: Faults in the component can be caused by faults in the wiring harness of the VECU. A check of the wiring harness should also therefore be made before connecting a new component.

1
Disconnect the 2–pin vehicle speed sensor connector at the transmission.

2
Turn the ignition key to the OFF position.

3
Connect an ohmmeter to the vehicle speed sensor connector and measure the resistance. J-39200

Measuring points	Expected value*	Transmission
Pin A / Pin B	265 ± 20% Ω	Volvo
	3.4k ± 20% Ω	Fuller
	3.17k ± 20% Ω	Allison HT-740
	NO DIAG-NOSTICS	Allison Automatic
* Value may vary depending on transmission manufacturer.		

Check of Subsystem



Before working on a vehicle, set the parking brakes, place the transmission in neutral, and block the wheels. Failure to do so can result in unexpected vehicle movement and can cause serious personal injury or death.

1
Disconnect the VECU and install adapter J-43234 between the VECU and wiring harness connector PA/PB.

2
Connect 60-pin breakout box 9998551 (with overlay J-43340) to the adapter.

3



Personal injury hazard. Never work under or around a raised vehicle unless it is securely supported on jack stands of adequate rating and the front wheels are securely chocked. Failure to use adequate jack stands and chock the wheels can result in the vehicle falling, which can cause serious injury or death to anyone under or near the vehicle.

Chock the front wheels. Release the parking brake and jack up one rear wheel so that it can be turned by hand.

Signal wire

4
Turn the ignition key to the OFF position.

5
Connect a voltmeter to the 60-pin breakout box and measure the voltage while turning the wheel by hand. The voltage will alternate from positive to negative and will vary with speed. Voltmeter function "MIN/MAX" may be useful to determine value.

J-39200

Note: The transmission output shaft must be turning.

Measuring points	Expected minimum value	Transmission
PB6 / PB20	+0.1 V to -0.1 V	Volvo
	+0.1 V to -0.1 V	Fuller
	+0.1 V to -0.1 V	Allison HT-740
	NO DIAG-NOSTICS	Allison Automatic

Verification

No VCADS Pro tool test is currently available to verify this fault correction.

MID 144 PID 91 Accelerator Pedal Position

- **Text Messages**
In vehicles equipped with diagnostic display, the following message(s) will appear:
- **Instrument Cluster Graphics Display (VN):**
Acc. pedal pos. %
- **Data Link Instrument Cluster (WG, AC, WX):**
The Data Link instrument cluster graphics display used on WG-, AC-, and WX-series vehicles can display a limited number of text messages. For information, see “Data Link Instrumentation,” Volvo Service Publication PV776–381–620SM.
- **VCADS Pro Display:**
Accelerator pedal position, %

Fault Codes

FMI 3

Abnormally high voltage.

Conditions for fault code:

- If the VECU receives a signal from the sensor that is higher than 4.3 V, the VECU interprets this as a fault and a fault code is set.

Possible cause:

- Open circuit in ground wire.
- Open circuit in supply wire.
- Signal wire short-circuited to higher voltage.
- Faulty accelerator position sensor.
- Faulty idle validation switch 1.
- Switch resistance and oxidation.

Reaction from the VECU:

- Fault code is set.
- Yellow lamp is requested.

Noticeable external symptom:

- Yellow lamp lights up.
- The engine does not respond when the accelerator pedal is depressed.

FMI 4

Abnormally low voltage.

Conditions for fault code:

- If the VECU receives a signal from the sensor that is lower than 0.4 V, the VECU interprets this as a fault and a fault code is set.

Possible cause:

- Open circuit in supply wire.
- Open circuit in signal wire.
- Signal wire short-circuited to ground.
- Faulty accelerator position sensor.
- Switch resistance and oxidation.

Reaction from the VECU:

- fault code is set.
- Yellow lamp is requested.

Noticeable external symptom:

- Yellow lamp lights up.
- The engine does not respond when the accelerator pedal is depressed.

MID 144 PID 91 Accelerator Pedal Position, Check

Other special equipment: J-39200, J-43234, 9998551, J-41133, J-43340

NOTE!

- Read off the other fault codes for the VECU.
- Check the particular connectors during the fault tracing for oxidation and switch resistance. For detailed circuit information, refer to “VNL, VNM Electrical Schematics,” Group 37.

Appropriate Tests in the VCADS Pro Tool

The following test(s) are useful for closely examining the component's function:

27102-8 Accelerator pedal, switches and sensor, test

Measurement at the Component's Connector, to the VECU

Note: Faults in the wiring harness to the VECU can damage the component. Therefore, a check of the component should also be made if any of the measurement values deviate from the expected value.

1
Disconnect the connector at the accelerator pedal. Install 5-pin breakout harness J-41133 to the wiring harness end only.

Ground wire:

2
Turn the ignition key to the OFF position.

3
Using ohmmeter J-39200, measure resistance from pin E (5-pin harness) to alternate ground.

Measuring points	Expected value
Pin E / alternate ground	<1 Ω

Supply Wire:

4
Turn the ignition key to the ON position.

5
Connect a voltmeter to the connector and measure the voltage from pin A to pin E (5-pin harness). J-39200

Measuring points	Expected value
Pin A / Pin E	5.4 \pm 20% V

Signal Wire:

6
Turn the ignition key to the OFF position.

7
Using an ohmmeter, measure the resistance from pin B to pin E (5-pin harness). J-39200

Measuring points	Expected value
Pin B / Pin E	100 \pm 20% k Ω

Wiring harness

8
To check the wiring harness, refer to “VNL, VNM Electrical Schematics,” Group 37.

Check of component — accelerator pedal position sensor

Note: Faults in the component can be caused by faults in the wiring harness of the VECU. A check of the wiring harness should also therefore be made before connecting a new component.

1
Disconnect the connector at the accelerator pedal. Install 5-pin breakout harness J-41133 to the accelerator pedal harness only.

2

Turn the ignition key to the OFF position.

3

Using an ohmmeter, measure the resistance of pin A to pin E, and pin A to pin B.

J-39200

Measuring points	Expected value
Pin A / Pin E	$4 \pm 20\% \text{ k}\Omega$
Pin A / Pin B	$4.5 \pm 20\% \text{ k}\Omega$

4

Remove the 5-pin breakout harness and reconnect the connector at the accelerator pedal.

Check of Subsystem

1

Disconnect the VECU and install adapter J-43234 between the VECU and wiring harness connectors PA/PB.

J-43234

2

Connect 60-pin breakout box 9998551 (with overlay J-43340) to the adapter.

9998551
J-43340

Ground Wire

3

Turn the ignition key to the OFF position.

4

Using an ohmmeter at the 60-pin breakout box, measure the resistance between pin PB22 and the alternate ground.

J-39200

Measuring points	Expected value
PB22 / alternate ground	$<1 \Omega$

Supply Wire:

5

Turn the ignition key to the ON position.

6

Using a voltmeter at the 60-pin breakout box, measure the voltage from pin PB10 to PB22.

J-39200

Measuring points	Expected value
PB10 / PB22	$5 \pm 20\% \text{ V}$

Signal Wire:

7

Ignition key in the ON position.

8

Using a voltmeter at the 60-pin breakout box, measure the voltage from pin PB8 to PB22.

J-39200

Measuring points	Expected value
PB8 / PB22	$0.5 \pm 20\% \text{ V}$ (accelerator at idle)
	$3.2 \pm 20\% \text{ V}$ (full acceleration)

Verification

To verify that the fault has been corrected, use the test in the VCADS Pro tool (see "Appropriate Tests in the VCADS Pro Tool" page 204).

MID 144 PID 152 VECU, Number of Resets

The software in the VECU contains an internal checking function that restarts the VECU when there is a fault in the execution of the software. PID 152 contains information about how many such restarts that have been made.

- **Text Messages**

In vehicles equipped with diagnostic display, the following message(s) will appear:

- **Instrument Cluster Graphics Display (VN):**

No. of ECU resets

- **Data Link Instrument Cluster (WG, AC, WX):**

The Data Link instrument cluster graphics display used on WG-, AC-, and WX-series vehicles can display a limited number of text messages. For information, see "Data Link Instrumentation," Volvo Service Publication PV776-381-620SM.

- **VCADS Pro Display:**

Number of ECU resets

Fault Codes

FMI 12

Faulty unit or component.

Conditions for fault code:

- If an internal software fault occurs an fault code is set.

Possible cause:

- The system has been switched off by disconnecting the battery or using a battery master switch instead of switching it off with the ignition key.
- The system has been restarted due to an internal software fault.

Reaction from the VECU:

- Fault code is set.
- The system is restarted.

MID 144 PPID 69 Idle Validation Switch

The function is used to be able to drive the vehicle in “limp home mode” if a fault has occurred in the wiring to the engine electronic control unit (EECU).

- **Text Messages**

In vehicles equipped with diagnostic display, the following message(s) will appear:

- **Instrument Cluster Graphics Display (VN):**

Buff. idle val. sw.

- **Data Link Instrument Cluster (WG, AC, WX):**

The Data Link instrument cluster graphics display used on WG-, AC-, and WX-series vehicles can display a limited number of text messages. For information, see “Data Link Instrumentation,” Volvo Service Publication PV776–381–620SM.

- **VCADS Pro Display:**

Buffered idle validation switch

Fault Codes

FMI 4

Abnormally low voltage.

Conditions for fault code:

- If the output signal from the buffered idle validation switch deviates from the input signal from idle validation switch 1, the VECU interprets this as a fault and a fault code is set.

Note: The fault code is set first when the accelerator pedal is depressed.

Possible cause:

- Short circuit to ground, signal wire

Reaction from the VECU:

- Fault code is set.
- Yellow lamp is requested.

Noticeable external symptom:

- Yellow lamp lights up.

MID 144 PPID 69 Idle Validation Switch, Check

Other special equipment: J-39200, J-41132, J-43234, J-43233, 9998551, J-43340

NOTE!

- Read off the other fault codes for the VECU.
- Check the particular connectors during the fault tracing for oxidation and switch resistance. For detailed circuit information, refer to “VNL, VNM Electrical Schematics,” Group 37.

Appropriate Tests in the VCADS

Pro Tool

The following test(s) are useful for closely examining the component's function:

N/A No test currently available.

Measurement at the Component's Connector, to the VECU

Note: Faults in the wiring harness to the VECU can damage the component. Therefore, a check of the component should be made if any of the measurements deviate from the expected values.

1

Disconnect connector (EA and EB) at the engine electronic control unit (EECU).

2

Connect jumper J-43233 between EECU's EA (upper) connector and the wiring harness. J-43233

3

Connect the 36-pin breakout box J-41132 between the EECU's EB (lower) connector and the wiring harness. J-41132

Signal Wire:

4

Turn the ignition key to the ON position.

5

Connect voltmeter J-39200 to the 36-pin breakout box at pin 4 (buffered idle validation switch) and pin 9 (ground). J-39200

Measuring points	Expected value
EB4 / EB9	0 V (accelerator pedal at idle)
	B+ (accelerator pedal above idle)

Wiring harness

6

To check the wiring harness, refer to “VNL, VNM Electrical Schematics,” Group 37.

Check of component — buffered idle validation switch

Note: Faults in the component can be caused by faults in the wiring harness of the VECU. Therefore, a check of the wiring harness should be made before connecting a new component.

1

Disconnect connector (EA and EB) at the EECU.

2

Connect jumper J-43233 between EECU's EA (upper) connector and the wiring harness. J-43233

3

Connect the 36-pin breakout box J-41132 between the EECU's EB (lower) connector and the wiring harness. J-41132

4

Turn the ignition key to the OFF position.

5

Using ohmmeter J-39200 at the 36-pin breakout box, measure resistance from pin 4 to pin 9. J-39200

Measuring points	Expected value
EB4 / EB9	2.9 ± 20% kΩ

Check of subsystem

1

Disconnect the VECU and install adapter J-43234 between the VECU and wiring harness connectors PA/PB.

J-43234

2

Connect the 60-pin breakout box 9998551 (with overlay J-43340) to the adapter.

9998551

J-43340

Signal Wire:

3

Turn the ignition key to the ON position.

4

Connect voltmeter J-39200 to the 60-pin breakout box and measure the voltage.

J-39200

Measuring points	Expected value
PB17 / PB22	0 V (accelerator pedal at idle)
	B+ (accelerator pedal above idle)

Verification

No VCADS Pro tool test is currently available to verify this fault correction.

MID 144 PPID 70 Pedal Switches, Supply

Voltage supply to pedal switches.

- **Text Messages**
In vehicles equipped with diagnostic display, the following message(s) will appear:
- **Instrument Cluster Graphics Display (VN):**
Output supply #3
- **Data Link Instrument Cluster (WG, AC, WX):**
The Data Link instrument cluster graphics display used on WG-, AC-, and WX-series vehicles can display a limited number of text messages. For information, see "Data Link Instrumentation," Volvo Service Publication PV776-381-620SM.
- **VCADS Pro Display:**
Pedal switches supply

Fault Codes

FMI 4

Abnormally low voltage.

Conditions for fault code:

- If the VECU registers a voltage lower than 2.5 V on the supply wire, the VECU interprets this as a fault and a fault code is set.

Possible cause:

- The supply wire short-circuited to ground.
- The signal wire for brakes/clutch short-circuited to ground.
- Signal wire for idle validation switch 1 short-circuited to ground.
- Faulty switch.

Reaction from the VECU:

- Fault code is set.
- Yellow lamp is requested.

Noticeable external symptom:

- Yellow lamp lights up.
- The cruise control function does not work.

MID 144 PPID 70 Pedal Switches, Supply, Check

Other special equipment: J-39200, J-43234, 9998551, J-43340, J-41133

NOTE!

- Read off the other fault codes for the VECU.
- Check the particular connectors during the fault tracing for oxidation and switch resistance. For detailed circuit information, refer to “VNL, VNM Electrical Schematics,” Group 37.

Appropriate Tests in the VCADS Pro Tool

The following test(s) are useful for closely examining the component's function:

27102–8 Accelerator pedal, switches and sensor, test

27503–8 Cruise control, switch, test

Measurement at the Component's Connector, to the VECU

Note: Faults in the wiring harness to the VECU can damage the component. Therefore, a check of the component should also be made if any of the measurement values deviate from the expected value.

1
Disconnect the connector at the accelerator pedal. Install 5-pin breakout harness J-41133 to the wiring harness end only. J-41133

2
Disconnect the connector at the brake pedal switch (two pin, Common-558A wire and Normal Open-567B wire).

3
Disconnect the connector at the clutch pedal switch (two pin, Normal Open-571 wire and Common 558B wire).

Supply wire, idle validation switch 1:

4
Turn the ignition key to the ON position.

5
Connect a voltmeter to the breakout harness connector and measure the voltage. J-39200

Measuring points	Expected value
Pin D / alternate ground	B+

Supply wire, brake pedal switch:

6
Turn the ignition key to the ON position.

7
Connect a voltmeter to the wiring harness connector and measure the voltage. J-39200

Measuring points	Expected value
"COMMON" / alternate ground	B+

Supply wire, clutch pedal switch:

8
Turn the ignition key to the ON position.

9
Connect a voltmeter to the wiring harness connector and measure the voltage. J-39200

Measuring points	Expected value
"COMMON" / alternate ground	B+

Signal wire, idle validation switch 1:

10
Turn the ignition key to the OFF position.

11
Connect an ohmmeter to the breakout harness connector and measure the resistance. J-39200

Measuring points	Expected value
Pin C / alternate ground	1.2 ± 20% kΩ

Signal wire, brake pedal switch:

12
Turn the ignition key to the OFF position.

13

Connect an ohmmeter to the wiring harness connector and measure the resistance. J-39200

Measuring points	Expected value
"Normal Open" / alternate ground	1.2 ± 20% kΩ

*Signal wire, clutch pedal switch:***14**

Turn the ignition key to the OFF position.

15

Connect an ohmmeter to the wiring harness connector and measure the resistance. J-39200

Measuring points	Expected value
"Normal Open" / alternate ground	1.2 ± 20% kΩ

*Wiring harness***16**

To check the wiring harness, see "VNL, VNM Electrical Schematics," Group 37.

Check of component

- Idle validation switch
- Brake pedal switch
- Clutch pedal switch

Note: Faults in the component can be caused by faults in the wiring harness of the VECU. A check of the wiring harness should also therefore be made before connecting a new component.

*Check of idle validation switch 1:***1**

Disconnect the connector at the accelerator pedal. Install 5-pin breakout harness J-41133 to the accelerator pedal harness end only. J-41133

2

Turn the ignition key to the OFF position.

3

Connect an ohmmeter to the connector and measure the resistance. J-39200

Measuring points	Expected value
Pin D / Pin C	Open circuit (accelerator pedal at idle)
	20-90 Ω (full acceleration)

*Check of the brake pedal switch:***4**

Disconnect the connector at the brake pedal switch (two pin).

5

Turn the ignition key to the OFF position.

6

Connect an ohmmeter to the switch terminals and measure the resistance. J-39200

Measuring points	Expected value
"COMMON" / "Normal Open"	<1 Ω (brake pedal not depressed)
	open circuit (brake pedal depressed)

*Check of clutch pedal switch:***7**

Disconnect the connector at the clutch pedal switch (two pin).

8

Turn the ignition key to the OFF position.

9

Connect an ohmmeter to the switch terminals and measure the resistance. J-39200

Measuring points	Expected value
"COMMON" / "Normal Open"	<1 Ω (clutch pedal not depressed)
	open circuit (clutch pedal depressed)

Check of Subsystem

1
Disconnect the VECU and install adapter J-43234 between the VECU and wiring harness PA/PB.

2
Connect 60-pin breakout box 9998551 (with overlay J-43340) to the adapter.

Supply wire:

3
Turn the ignition key to the ON position.

4
Connect a voltmeter to the 60-pin breakout boxes and measure the voltage.

Measuring points	Expected value
PB19 / PA12	B+

Signal wire, idle validation switch 1:

5
Turn the ignition key to the ON position.

6
Connect a voltmeter to the 60-pin breakout box and measure the voltage.

Measuring points	Expected value
PA23 / PA12	0 V (accelerator pedal at idle)
	B+ (full acceleration)

Signal wire, brake pedal switch:

7
Turn the ignition key to the ON position.

8
Connect a voltmeter to the 60-pin breakout box and measure the voltage.

Measuring points	Expected value
PA5 / PA12	B+ (brake pedal not depressed)
	0 V (brake pedal depressed)

Signal wire, clutch pedal switch:

9
Turn the ignition key to the ON position.

10
Connect a voltmeter to the 60-pin breakout box and measure the voltage.

Measuring points	Expected value
PA8 / PA12	B+ (clutch pedal not depressed)
	0 V (clutch pedal depressed)

Verification

To check that the fault has been corrected, use the test in the VCADS Pro tool (see "Appropriate Tests in the VCADS Pro Tool" page 211).

MID 144 PPID 71 Cruise Control and Engine Brake, Supply Switch

Voltage supply to the cruise control and exhaust brake control switches. Also voltage supply to the idle validation switch 3 (on second accelerator pedal), if so equipped

- **Text Messages**
In vehicles equipped with diagnostic display, the following message(s) will appear:
- **Instrument Cluster Graphics Display (VN):**
Output supply #4
- **Data Link Instrument Cluster (WG, AC, WX):**
The Data Link instrument cluster graphics display used on WG-, AC-, and WX-series vehicles can display a limited number of text messages. For information, see "Data Link Instrumentation," Volvo Service Publication PV776-381-620SM.
- **VCADS Pro Display:**
Cruise control and retarder switch supply

Fault Codes

FMI 4

Abnormally low voltage.

Conditions for fault code:

- If the VECU registers a voltage lower than 2.5 V on the supply wire, the VECU interprets this as a fault and a fault code is set.

Possible cause:

- The supply wire short-circuited to ground.
- The signal wire for the cruise control (SET+/SET-/RESUME/ON) short-circuited to ground.
- The signal wire for the exhaust brake switch (EPG/VEB) short-circuited to ground.
- The signal wire for the idle validation switch 3 short-circuited to ground.

Reaction from the VECU:

- Fault code is set.
- Yellow lamp is requested.

Noticeable external symptom:

- Yellow lamp lights up.
- The cruise control does not function.
- Exhaust brake does not function.
- Idle validation switch 3 does not function.

MID 144 PPID 71 Cruise Control and Engine Brake, Supply Switch, Check

Other special equipment: J-39200, 9998551, J-41133, J-43340, J-43234

NOTE!

- Read off the other fault codes for the VECU.
- Check the particular connectors during the fault tracing for oxidation and switch resistance. For detailed circuit information, refer to “VNL, VNM Electrical Schematics,” Group 37.
- Note: checks concerning VCB only apply to vehicles equipped with Volvo Compression Brake.

Appropriate Tests in the VCADS Pro Tool

The following test(s) are useful for closely examining the component's function:

27503-8	Cruise control, switch, test
25336-8	Exhaust brake, switch, test
27104-8	Extra accelerator control, switches and sensor, test

Measurement at the Component's Connector, to the VECU

Note: Faults in the wiring harness to the VECU can damage the component. Therefore, a check of the component should also be made if any of the measurement values deviate from the expected value.

1

Disconnect the connector at the switch for the cruise control. Measurements should be taken only on the wiring harness connector end.

2

Disconnect the connector at the switch for the exhaust brake, if the vehicle is equipped with one. Measurements should be taken only on the wiring harness connector end.

3

Disconnect the connector at the second accelerator pedal, if the vehicle is equipped with one. Install the 5-pin breakout harness J-41133 to the wiring harness end only.

Supply wire, cruise control switch:

4

Turn the ignition key to the ON position.

5

Connect a voltmeter to the connector and measure the voltage. J-39200

Measuring points	Expected value
Pin A (wire #597A) / alternate ground	B+

Supply wire, exhaust brake switch:

6

Turn the ignition key to the ON position.

7

Connect a voltmeter to the connector and measure the voltage. J-39200

Measuring points	Expected value
Pin 1 (wire #597B) / alternate ground	B+

Supply wire, idle validation switch 3

8

Turn the ignition key to the ON position.

9

Connect a voltmeter to the connector and measure the voltage. J-39200

Measuring points	Expected value
Pin D / alternate ground	B+

Signal wire, cruise control switch:

10

Turn the ignition key to the OFF position.

11

Connect an ohmmeter to the connector and measure the resistance.

J-39200

Measuring points	Expected value
Pin E (wire #563A) / alternate ground	SET+ 1.2 ± 20% kΩ
Pin G (wire #564A) / alternate ground	SET- 1.2 ± 20% kΩ
Pin C (wire #562A) / alternate ground	ON 1.2 ± 20% kΩ
Pin H (wire #565A) / alternate ground	RESUME 1.2 ± 20% kΩ

Signal wire, exhaust brake switch:**12**

Turn the ignition key to the OFF position.

13

Connect an ohmmeter to the connector and measure the resistance.

J-39200

Measuring points	Expected value
Pin 6 (wire #628) / alternate ground	EPG 1.2 ± 20% kΩ
Pin 5 (wire #629) / alternate ground	VCB 1.2 ± 20% kΩ

Signal wire, idle validation switch 3:**14**

Turn the ignition key to the OFF position.

15

Connect an ohmmeter to the connector and measure the resistance.

J-39200

Measuring points	Expected value
Pin C / alternate ground	1.2 ± 20% kΩ

Wiring harness:**16**

To check the wiring harness, see "VNL, VNM Electrical Schematics," Group 37.

Check of component

- Cruise control switch
- Exhaust brake switch
- Idle validation switch 3

Note: Faults in the component can be caused by faults in the wiring harness of the VECU. A check of the wiring

harness should also therefore be made before connecting a new component.

Check of the switch for the cruise control:**1**

Disconnect the connector at the switch for cruise control. Measurements should be taken only on the cruise control switch connector.

2

Turn the ignition key to the OFF position.

3

Connect an ohmmeter to the connector pins and measure the resistance.

J-39200

Measuring points	Expected value
Pin E / Pin A	open circuit (SET+ inactive)
	<1 Ω (SET+ active)
Pin H / Pin A	open circuit (RESUME inactive)
	<1 Ω (RESUME active)
Pin C / Pin A	open circuit (OFF)
	<1 Ω (ON)
	<1 Ω (RESUME active)
Pin G / Pin A	<1 Ω (SET- active)
	open circuit (SET- inactive)

Check of the switch for the exhaust brake:**4**

Disconnect the connector at the switch for exhaust brake. Measurements should be taken only on the exhaust brake switch pins.

5

Turn the ignition key to the OFF position.

6

Connect an ohmmeter to the switch pins and measure the resistance.

J-39200

Measuring points	Expected value
Pin 1 / Pin 6	open circuit (switch OFF) <1 Ω (switch position 1 - EPG) <1 Ω (switch position 2 - VCB)
Pin 1 / Pin 5	open circuit (switch OFF) open circuit (switch position 1 - EPG) <1 Ω (switch position 2 - VCB)

Check of the idle validation switch 3:

7

Disconnect the connector at the second accelerator pedal. Install the 5-pin breakout harness J-41133 to the accelerator pedal harness end only.

J-41133

8

Turn the ignition key to the OFF position.

9

Connect an ohmmeter to the switch pins and measure the resistance.

J-39200

Measuring points	Expected value
Pin C / Pin D	open circuit (accelerator at idle)
	20-90 Ω (full acceleration)

Check of Subsystem

1

Disconnect the VECU and install adapter J-43234 between the VECU and wiring harness connectors PA/PB.

J-43234

2

Connect 60-pin breakout box 9998551 (with overlay J-43234) to the adapter.

9998551

J-43234

Supply wire:

3

Turn the ignition key to the ON position.

4

Connect a voltmeter to the connector and measure the voltage.

J-39200

Measuring points	Expected value
PB5 / PA12	B+

Signal wire, cruise control switch:**5**

Turn the ignition key to the ON position.

6

Connect a voltmeter to the 60-pin breakout box and measure the voltage.

J-39200

Measuring points	Expected value
PA2 / PA12	0 V (SET+ inactive)
	B+ (SET+ active)
PA30 / PA12	0 V (RESUME inactive)
	B+ (RESUME active)
PA3 / PA12	0 V (cruise switch OFF)
	B+ (cruise switch ON)
PA1 / PA12	0 V (SET- inactive)
	B+ (SET- active)
PA30 / PA12	B+ (RESUME active)
	0 V (RESUME inactive)

Signal wire, exhaust brake switch:**7**

Turn the ignition key to the ON position.

8

Connect a voltmeter to the 60-pin breakout box and measure the voltage.

J-39200

Measuring points	Expected value
PA21 / PA12	0 V (exhaust brake switch OFF)
	B+ (exhaust brake switch position 1 - EPG)
	B+ (exhaust brake switch position 2 - VCB)
PA20 / PA12	0 V (exhaust brake switch OFF)
	0 V (exhaust brake switch position 1 - EPG)
	B+ (exhaust brake switch position 2 - VCB)

Signal wire, idle validation switch 3:**9**

Turn the ignition key to the ON position.

10

Connect a voltmeter to the 60-pin breakout box and measure the voltage.

J-39200

Measuring points	Expected value
PB30 / PA12	0 V (accelerator at idle)
	B+ (full acceleration)

Verification

To check that the fault has been corrected, use the test in the VCADS Pro tool (see “Appropriate Tests in the VCADS Pro Tool” page 215).

MID 144 PPID 72 Accelerator Pedal, Supply Sensors

The accelerator pedal position sensor is supplied with a reference voltage of 5.0 V. Each change of the accelerator pedal angle controls the input signal to the VECU.

- **Text Messages**
In vehicles equipped with diagnostic display, the following message(s) will appear:
- **Instrument Cluster Graphics Display (VN):**
Output supply #1
- **Data Link Instrument Cluster (WG, AC, WX):**
The Data Link instrument cluster graphics display used on WG-, AC-, and WX-series vehicles can display a limited number of text messages. For information, see "Data Link Instrumentation," Volvo Service Publication PV776-381-620SM.
- **VCADS Pro Display:**
Accelerator pedal and retarder sensor supply

Fault Codes

FMI 3

Abnormally high voltage.

Conditions for fault code:

- If the VECU registers a voltage higher than 5.5 V on the supply wire, the VECU interprets this as a fault and a fault code is set.

Possible cause:

- Open circuit in ground wire.
- Supply wire short-circuited to higher voltage.
- Open circuit in supply wire.
- Faulty accelerator position sensor.
- Switch resistance and oxidation.

Reaction from the VECU:

- Fault code is set.
- Yellow lamp is requested.

Noticeable external symptom:

- Yellow lamp lights up.
- The engine does not respond when the accelerator pedal is depressed.

FMI 4

Abnormally low voltage.

Conditions for fault code:

- If the VECU registers a voltage lower than 4.5 V on the supply wire, the VECU interprets this as a fault and a fault code is set.

Possible cause:

- Supply wire short-circuited to ground or lower voltage.
- Faulty accelerator position sensor.

Reaction from the VECU:

- Fault code is set.
- Yellow lamp is requested.

Noticeable external symptom:

- Yellow lamp lights up.
- Engine does not respond when the accelerator pedal is depressed.

MID 144 PPID 72 Accelerator Pedal, Supply Sensors, Check

Other special equipment: J-39200, J-41133, 9998551, J-43340, J-43234

NOTE!

- Read off the other fault codes for the VECU.
- Check the particular connectors during the fault tracing for oxidation and switch resistance. For detailed circuit information, refer to “VNL, VNM Electrical Schematics,” Group 37.

Appropriate Tests in the VCADS Pro Tool

The following test(s) are useful for closely examining the component's function:

27102-8 Accelerator pedal, switches and sensor, test

Measurement at the Component's Connector, to the VECU

Note: Faults in the wiring harness to the VECU can damage the component. Therefore, a check of the component should also be made if any of the measurement values deviate from the expected value.

1 Disconnect the connector at the accelerator pedal. Install 5-pin breakout harness J-41133 to the wiring harness end only.

Ground wire:

2 Turn the ignition key to the OFF position.

3 Using ohmmeter J-39200, measure the resistance from pin E (5-pin harness) to the alternate ground.

Measuring points	Expected value
Pin E / alternate ground	<1 Ω

Supply wire:

4 Turn the ignition key to the ON position.

5 Connect a voltmeter to the connector and measure the voltage from pin A to pin E (5-pin harness). J-39200

Measuring points	Expected value
Pin A / Pin E	5.4 \pm 20% V

Signal wire:

6 Turn the ignition key to the OFF position.

7 Connect an ohmmeter to the 5-pin breakout harness and measure the resistance. J-39200

Measuring points	Expected value
Pin B / Pin E	100 \pm 20% k Ω

Wiring harness

8 To check the wiring harness, see “VNL, VNM Electrical Schematics,” Group 37.

Check of component

Accelerator position sensor

Note: Faults in the component can be caused by faults in the wiring harness of the VECU. A check of the wiring harness should also therefore be made before connecting a new component.

1 Disconnect the connector at the accelerator pedal. Install 5-pin breakout harness J-41133 to the accelerator pedal harness end only. J-41133

2 Turn the ignition key to the OFF position.

3 Connect an ohmmeter to the breakout harness pins and measure the resistance. J-39200

Measuring points	Expected value
Pin A / Pin E	4 \pm 20% k Ω
Pin A / Pin B	4.5 \pm 20% k Ω (accelerator pedal at idle)

Check of Subsystem

1
Disconnect the VECU and install adapter J-43234 between the VECU and wiring harness connectors PB/PA.

2
Connect the 60-pin breakout box 9998551 (with overlay J-43340) to the adapter.

Ground wire:

3
Turn the ignition key to the OFF position.

4
Connect an ohmmeter to the 60-pin breakout box and measure the resistance between pin PB22 and the alternate ground.

Measuring points	Optimal value
PB22/ Alternate ground	<1 Ω

Supply wire:

5
Ignition key in ON position.

6
Connect a voltmeter to the 60-pin breakout box and measure the voltage from pin PB10 to PB22.

Measuring points	Optimal value
PB10 / PB22	5 \pm 20% V

Signal wire:

7
Turn the ignition key to the ON position.

8
Connect a voltmeter to the 60-pin breakout box and measure the voltage from pin PB8 to PB22.

Measuring points	Expected value
PB8 / PB22	0.5 \pm 20% V (accelerator pedal at idle)
	3.2 \pm 20% V (full acceleration)

Verification

To verify that the fault has been corrected, use the test in the VCADS Pro tool (see "Appropriate Tests in the VCADS Pro Tool" page 220).

MID 144 PPID 73 Second Accelerator Pedal, Supply Sensors

The second accelerator pedal position sensor is supplied with a reference voltage of 5.0 V. Each change of the second accelerator pedal angle controls the input signal to the VECU.

Note: Applies only to vehicles with a second accelerator pedal assembly (such as the WX).

- **Text Messages**

In vehicles equipped with diagnostic display, the following message(s) will appear:

- **Instrument Cluster Graphics Display (VN):**

Output supply #2

- **Data Link Instrument Cluster (WG, AC, WX):**

The Data Link instrument cluster graphics display used on WG-, AC-, and WX-series vehicles can display a limited number of text messages. For information, see "Data Link Instrumentation," Volvo Service Publication PV776-381-620SM.

- **VCADS Pro Display:**

Second throttle and wet tank sensor supply

Fault Codes

FMI 3

Abnormally high voltage.

Conditions for fault code:

- If the VECU registers a voltage higher than 5.5 V on the supply wire, the VECU interprets this as a fault and a fault code is set.

Possible cause:

- Open circuit in ground wire.
- Supply wire short-circuited to higher voltage.
- Open circuit in supply wire.
- Faulty second accelerator pedal position sensor.
- Switch resistance and oxidation.

Reaction from the VECU:

- Fault code is set.
- Yellow lamp is requested.

Noticeable external symptom:

- Yellow lamp lights up.
- The engine does not respond when the second accelerator pedal is depressed.

Conditions for fault code:

- If the VECU registers a voltage lower than 4.5 V on the supply wire, the VECU interprets this as a fault and a fault code is set.

Possible cause:

- Supply wire short-circuited to ground or lower voltage.
- Faulty second accelerator pedal position sensor.

Reaction from the VECU:

- Fault code is set.
- Yellow lamp is requested.

Noticeable external symptom:

- Yellow lamp lights up.
- Engine does not respond when the second accelerator pedal is depressed.

FMI 4

Abnormally low voltage.

MID 144 PPID 73 Second Accelerator Pedal, Supply Sensors, Check

Other special equipment: J-39200, J-41133, 9998551, J-43340, J-43234

NOTE!

- Read off the other fault codes for the VECU.
- Check the particular connectors during the fault tracing for oxidation and switch resistance. For detailed circuit information, refer to “VNL, VNM Electrical Schematics,” Group 37.

Appropriate Tests in the VCADS Pro Tool

The following test(s) are useful for closely examining the component's function:

27104-8 Extra accelerator pedal, switches and sensor, test

Measurement at the Component's Connector, to the VECU

Note: Faults in the wiring harness to the VECU can damage the component. Therefore, a check of the component should also be made if any of the measurement values deviate from the expected value.

1 Disconnect the connector at the second accelerator pedal. Install 5-pin breakout harness J-41133 to the wiring harness end only. J-41133

Ground wire:

2 Turn the ignition key to the OFF position.

3 Using ohmmeter J-39200, measure the resistance from pin E (5-pin harness) to the alternate ground. J-39200

Measuring points	Expected value
Pin E / alternate ground	<1 Ω

Supply wire:

4 Turn the ignition key to the ON position.

5 Connect a voltmeter to the connector and measure the voltage from pin A to pin E (5-pin harness). J-39200

Measuring points	Expected value
Pin A / Pin E	5.4 ± 20% V

Signal wire:

6 Turn the ignition key to the OFF position.

7 Connect an ohmmeter to the 5-pin breakout harness and measure the resistance. J-39200

Measuring points	Expected value
Pin B / Pin E	100 ± 20% kΩ

Wiring harness

8 To check the wiring harness, see “VNL, VNM Electrical Schematics,” Group 37.

Check of component Second accelerator position sensor

Note: Faults in the component can be caused by faults in the wiring harness of the VECU. A check of the wiring harness should also therefore be made before connecting a new component.

1 Disconnect the connector at the second accelerator pedal. Install 5-pin breakout harness J-41133 to the second accelerator pedal harness end only. J-41133

2 Turn the ignition key to the OFF position.

3 Connect an ohmmeter to the breakout harness pins and measure the resistance. J-39200

Measuring points	Expected value
Pin A / Pin E	4 ± 20% kΩ
Pin A / Pin B	4.5 ± 20% kΩ (accelerator pedal at idle)

Check of Subsystem

1
Disconnect the VECU and install adapter J-43234 between the VECU and wiring harness connectors PB/PA.

2
Connect the 60-pin breakout box 9998551 (with overlay J-43340) to the adapter.

Ground wire:

3
Turn the ignition key to the OFF position.

4
Connect an ohmmeter to the 60-pin breakout box and measure the resistance between pin PB23 and the alternate ground.

Measuring points	Optimal value
PB23/ Alternate ground	<1 Ω

Supply wire:

5
Ignition key in ON position.

6
Connect a voltmeter to the 60-pin breakout box and measure the voltage from pin PB26 to PB23.

Measuring points	Optimal value
PB26 / PB23	5 \pm 20% V

Signal wire:

7
Turn the ignition key to the ON position.

8
Connect a voltmeter to the 60-pin breakout box and measure the voltage from pin PB25 to PB23.

Measuring points	Expected value
PB25 / PB23	0.5 \pm 20% V (accelerator pedal at idle)
	3.2 \pm 20% V (full acceleration)

Verification

To verify that the fault has been corrected, use the test in the VCADS Pro tool (see "Appropriate Tests in the VCADS Pro Tool" page 223).

MID 144 PPID 75 Range Inhibitor, Solenoid Valve Status

This applies only to vehicles with Volvo transmissions.

- **Text Messages**
In vehicles equipped with diagnostic display, the following message(s) will appear:
- **Instrument Cluster Graphics Display (VN):**
Range inhibitor
- **Data Link Instrument Cluster (WG, AC, WX):**
The Data Link instrument cluster graphics display used on WG-, AC-, and WX-series vehicles can display a limited number of text messages. For information, see “Data Link Instrumentation,” Volvo Service Publication PV776–381–620SM.
- **VCADS Pro Display:**
Range inhibitor solenoid valve

Fault Codes

FMI 3

Abnormally high voltage.

Conditions for fault code:

- If the VECU registers a voltage higher than 6.5 V when the function is active, the VECU interprets this as a fault and a fault code is set.

Note: The fault code is set first at the speed when the inhibitor is to engage — at approx 40 km/h (25 mph).

Possible cause:

- The wire between the solenoid valve and the VECU short-circuited to battery voltage (B+).
- Faulty solenoid valve.

Reaction from the VECU:

- Fault code is set.
- Yellow lamp is requested.

Noticeable external symptom:

- Yellow lamp lights up.
- The range inhibitor is not activated.

FMI 4

Abnormally low voltage.

Conditions for fault code:

- If the VECU registers a voltage lower than 2.3 V when the function is inactive, the VECU interprets this as a fault and a fault code is set.

Note: The fault code is set first at the speed when

the inhibitor is to be released — approximately 36 km/h (23 mph).

Possible cause:

- The wire between the solenoid valve and the VECU short-circuited to ground.
- Open circuit, wire between solenoid valve and VECU.
- Open circuit, supply wire to solenoid valve.
- Faulty solenoid valve.
- Switch resistance and oxidation.

Reaction from the VECU:

- Fault code is set.
- Yellow lamp is requested.

Noticeable external symptom:

- Yellow lamp lights up.
- The range inhibitor is not activated or is constantly active.

MID 144 PPID 75 Range Inhibitor, Solenoid Valve Status, Check

Other special equipment: J-39200, 9998551, J-43340, J-43234, J-42472

NOTE!

- Read off the other fault codes for the VECU.
- Check the particular connectors during the fault tracing for oxidation and switch resistance. For detailed circuit information, refer to “VNL, VNM Electrical Schematics,” Group 37.

Appropriate Tests in the VCADS Pro Tool

The following test(s) are useful for closely examining the component's function:

N/A No test currently available.

Measurement at the Component's Connector, to the VECU

Note: Faults in the wiring harness to the VECU can damage the component. Therefore, a check of the component should also be made if any of the measurement values deviate from the expected value.

- 1** Disconnect the connector at the range inhibitor solenoid valve. Install 2-pin breakout harness J-42472 to the wiring harness end only.

Ground wire:

- 2** Turn the ignition key to the OFF position.

- 3** Connect an ohmmeter and measure the resistance. J-39200

Measuring points	Expected value
Terminal 2 (breakout harness) / alternate ground	1.5 ± 20% MΩ

Supply wire:

- 4** Turn the ignition key to the ON position.

- 5** Connect a voltmeter from the breakout harness terminals to the alternate ground and measure the voltage. J-39200

Measuring points	Expected value
Terminal 1 (breakout harness) / alternate ground	B+

Wiring harness:

- 6** To check the wiring harness, refer to “VNL, VNM Electrical Schematics,” Group 37.

Check of Component

Range Inhibitor Solenoid

Note: Faults in the component can be caused by faults in the wiring harness of the VECU. A check of the wiring harness should also therefore be made before connecting a new component.

- 1** Disconnect the connector at the range inhibitor solenoid valve.

- 2** Install 2-pin breakout harness J-42472 between the solenoid valve and the wiring harness. J-42472

- 3** Turn the ignition key to the ON position.

4

Ground the #2 breakout pin to an alternate ground. Listen for the range inhibitor valve to click.

**CAUTION**

Accidental grounding of pin #1 may blow a fuse or cause wiring damage.

Check of Subsystem**1**

Disconnect the VECU and install adapter J-43234 between the VECU and wiring harness connectors PA/PB.

J-43234

2

Connect 60-pin breakout box 9998551 (with overlay J-43340) to the adapter.

9998551

J-43340

3

Turn the ignition key to the ON position.

4

Connect a voltmeter to the 60-pin breakout box and measure the voltage.

J-39200

Measuring points	Expected value
PB18 / PA12	B+
Connect a jumper wire from PB18 to an alternate ground	Click at range inhibitor solenoid

Verification

No VCADS Pro tool test is currently available to verify this fault correction.

MID 144 SID 230 Idle Validation Switch 1

Idle validation switch 1 is located at the driver's accelerator pedal assembly.

- **Text Messages**
In vehicles equipped with diagnostic display, the following message(s) will appear:
- **Instrument Cluster Graphics Display (VN):**
Idle valid switch
- **Data Link Instrument Cluster (WG, AC, WX):**
The Data Link instrument cluster graphics display used on WG-, AC-, and WX-series vehicles can display a limited number of text messages. For information, see "Data Link Instrumentation," Volvo Service Publication PV776-381-620SM.
- **VCADS Pro Display:**
Idle validation switch

Fault Codes

FMI 7

Incorrect response from mechanical system.

Conditions for fault code:

- If the signal from the idle validation switch is not available, with the accelerator position sensor below 13% travel, the VECU interprets this as a fault and a fault code is set.

Possible cause:

- Incorrect or faulty idle validation switch.
- Open circuit in the supply wire.
- Open circuit in the signal wire.
- The signal wire short-circuited to ground.
- The signal wire short-circuited to voltage.
- Switch resistance or oxidation.

Reaction from the VECU:

- Fault code is set.
- Yellow lamp is requested.

Noticeable external symptom:

- Yellow lamp lights up.
- The engine does not respond correctly to acceleration.

MID 144 SID 230 Idle Validation Switch 1, Check

Other special equipment: J-39200, 9998551, J-43340, J-41133, J-43234

NOTE!

- Read off the other fault codes for the VECU.
- Check the particular connectors during the fault tracing for oxidation and switch resistance. For detailed circuit information, refer to “VNL, VNM Electrical Schematics,” Group 37.

Appropriate Tests in the VCADS Pro Tool

The following test(s) are useful for closely examining the component's function:

27102-8 Accelerator pedal, switches and sensor, test

Measurement at the Component's Connector, to the VECU

Note: Faults in the wiring harness to the VECU can damage the component. Therefore, a check of the component should also be made if any of the measurement values deviate from the expected value.

1 Disconnect the connector at the accelerator pedal. Install 5-pin breakout harness J-41133 to the wiring harness end only.

Supply wire:

2 Turn the ignition key to the ON position.

3 Connect a voltmeter to the breakout harness pins and measure the voltage. J-39200

Measuring points	Expected value
Pin D / alternate ground	B+

Signal wire:

4 Turn the ignition key to the OFF position.

5 Connect an ohmmeter to the breakout harness pins and measure the resistance. J-39200

Measuring points	Expected value
Pin C / alternate ground	1.2 ± 20% kΩ

Wiring harness

6 To check the wiring harness, refer to “VNL, VNM Electrical Schematics,” Group 37.

Check of Component

Idle validation switch 1

Note: Faults in the component can be caused by faults in the wiring harness of the VECU. A check of the wiring harness should also therefore be made before connecting a new component.

1 Disconnect the connector at the accelerator pedal. Install 5-pin breakout harness J-41133 to the accelerator pedal harness only. J-41133

2 Turn the ignition key to the OFF position.

3 Connect an ohmmeter to the breakout harness pins and measure the resistance.

Measuring points	Expected value
Pin C / Pin D	open circuit (accelerator at idle)
	20-90 Ω (full acceleration)

Check of Subsystem

1

Disconnect the VECU and install adapter J-43234 between the VECU and wiring harness connectors PA/PB.

J-43234

2

Connect 60-pin breakout box 9998551 (with overlay J-43340) to the adapter.

9998551

J-43340

Signal wire:

3

Turn the ignition key to the ON position.

4

Connect a voltmeter to the 60-pin breakout box and measure the voltage.

J-39200

Measuring points	Expected value
PA23 / PA12	0 V (accelerator at idle)
	B+ (full acceleration)

Verification

To check that the fault has been corrected, use the test in the VCADS Pro tool (see "Appropriate Tests in the VCADS Pro Tool" page 229).

MID 144 SID 231 SAE J1939 Control Link

High-speed digital communication between different electronic control units takes place over the J1939 Control Link; this is used to control vehicle operation. If the J1939 Control Link fails, the J1587/1708 Information Link serves as a “back-up” control link.

- **Text Messages**
In vehicles equipped with diagnostic display, the following message(s) will appear:
- **Instrument Cluster Graphics Display (VN):**
SAE J1939 data link
- **Data Link Instrument Cluster (WG, AC, WX):**
The Data Link instrument cluster graphics display used on WG-, AC-, and WX-series vehicles can display a limited number of text messages. For information, see “Data Link Instrumentation,” Volvo Service Publication PV776–381–620SM.
- **VCADS Pro Display:**
SAE J1939 data link

Fault Codes

FMI 2

Intermittent or incorrect data.

Conditions for fault code:

- If the VECU does not receive confirmation for the messages on the J1939 Control Link, the VECU interprets this as a fault and a fault code is set.

Possible cause:

- Loose connection.
- Open circuit in J1939 Control Link wire.
- Switch resistance and oxidation.

Reaction from the VECU:

- Fault code is set.
- Yellow lamp is requested.

Noticeable external symptom:

- Yellow lamp lights up.

FMI 12

Faulty unit or component.

Conditions for fault code:

- If the expected messages are not available from a control unit on the J1939 Control Link, the VECU interprets this as a fault and a fault code is set.

Possible cause:

- Open circuit in J1939 Control Link wire.

- Switch resistance and oxidation.

Reaction from the VECU:

- Fault code is set.
- Yellow lamp is requested.

Noticeable external symptom:

- Yellow lamp lights up.

MID 144 SID 231 SAE J1939 Control Link, Check

Other special equipment: J-39200

NOTE!

- Read off the other fault codes for the VECU.
- Check the particular connectors during the fault tracing for oxidation and switch resistance. For detailed circuit information, refer to “VNL, VNM Electrical Schematics,” Group 37.

Appropriate Tests in the VCADS Pro Tool

The following test(s) are useful for closely examining the component's function:

N/A No test currently available.

Check of Subsystem

1

Turn the ignition key to the OFF position.

2

Using an ohmmeter, back probe connector PC (Green 5-pin) at connectors PC4 and PC5 with the connector installed in the VECU.

J-39200

Measuring points	Expected value
PC4 / PC5	60 ± 10 Ω

3

Turn the ignition key to the ON position.

4

Using a voltmeter, back probe connector PC (Green 5-pin) at connectors PC4 and PC5 with the connector installed in the VECU.

Note: This may require the use of voltmeter function MIN/MAX.

Measuring points	Expected value
PC4 / Alternate ground	2-5 V DC
PC5 / Alternate ground	0-3 V DC
PC4 / PC5	0-5 V DC

Note: The voltage of the control link varies and is dependent on the number of electronic control units and traffic on the control link.

Verification

No VCADS Pro tool test is currently available to verify this fault correction.

MID 144 SID 240 Program Memory

At startup, a checksum is calculated for the software in the VECU's flash memory. This is compared with the previously stored checksum to verify that the checksum is correct.

- **Text Messages**
In vehicles equipped with diagnostic display, the following message(s) will appear:
- **Instrument Cluster Graphics Display (VN):**
Program memory
- **Data Link Instrument Cluster (WG, AC, WX):**
The Data Link instrument cluster graphics display used on WG-, AC-, and WX-series vehicles can display a limited number of text messages. For information, see "Data Link Instrumentation," Volvo Service Publication PV776-381-620SM.
- **VCADS Pro Display:**
Programm memory

Fault Codes

FMI 2

Intermittent or incorrect data.

Conditions for fault code:

- If the checksum stored at start up does not agree with the previously stored checksum, the VECU interprets this as a fault and a fault code is set.

Possible cause:

- Internal software fault.
- Faulty memory circuit.

Reaction from the VECU:

- The VECU continuously restarts.

Noticeable external symptom:

- Yellow lamp is lit by the instrument control unit since the VECU does not respond to the call.
- The vehicle can only be run in "limp home mode."

MID 144 SID 243 Cruise Control Set Switch

- **Text Messages**

In vehicles equipped with diagnostic display, the following message(s) will appear:

- **Instrument Cluster Graphics Display (VN):**

CC Set switch

- **Data Link Instrument Cluster (WG, AC, WX):**

The Data Link instrument cluster graphics display used on WG-, AC-, and WX-series vehicles can display a limited number of text messages. For information, see "Data Link Instrumentation," Volvo Service Publication PV776-381-620SM.

- **VCADS Pro Display:**

CC set switch

Fault Codes

FMI 7

Incorrect response from mechanical system.

Conditions for fault code:

- If the VECU receives the signals for SET+ and SET- at the same time, the VECU interprets this as a fault and a fault code is set.

Possible cause:

- Faulty switch.
- Signal wire short-circuited to voltage.

Reaction from the VECU:

- Fault code is set.
- Yellow lamp is requested.

Noticeable external symptom:

- Yellow lamp lights up.
- The cruise control function does not work. The speed cannot be set.

Note: If the speed has been previously set, it can be "resumed."

MID 144 SID 243 Cruise Control Set Switch, Check

Other special equipment: J-39200, 9998551, J-43340, J-43234

NOTE!

- Read off the other fault codes for the VECU.
- Check the particular connectors during the fault tracing for oxidation and switch resistance. For detailed circuit information, refer to "VNL, VNM Electrical Schematics," Group 37.

Appropriate Tests in the VCADS Pro Tool

The following test(s) are useful for closely examining the component's function:

27503-8 Cruise control, switch, test

Measurement at the Component's Connector, to the VECU

Note: Faults in the wiring harness to the VECU can damage the component. Therefore, a check of the component should also be made if any of the measurement values deviate from the expected value.

1

Disconnect the connector at the switch for the cruise control. Measurements should be taken only on the wiring harness connector.

Supply wire:

2

Turn the ignition key to the ON position.

3

Connect a voltmeter to the connector and measure the voltage. J-39200

Measuring points	Expected value
Wiring harness connector A / alternate ground	B+

Signal wire:

SET+

4

Turn the ignition key to the OFF position.

5

Connect an ohmmeter to the connector and measure the resistance. J-39200

Measuring points	Expected value
Wiring harness connector E / alternate ground	1.2 ± 20% kΩ

RESUME

6

Turn the ignition key to the OFF position.

7

Connect an ohmmeter to the connector and measure the resistance. J-39200

Measuring points	Expected value
Wiring harness connector H / alternate ground	1.2 ± 20% kΩ

ON

8

Turn the ignition key to the OFF position.

9

Connect an ohmmeter to the connector and measure the resistance. J-39200

Measuring points	Expected value
Wiring harness connector C / alternate ground	1.2 ± 20% kΩ

SET-

10

Turn the ignition key to the OFF position.

11

Connect an ohmmeter to the connector and measure the resistance. J-39200

Measuring points	Expected value
Wiring harness connector G / alternate ground	1.2 ± 20% kΩ

Wiring harness

12

To check the wiring harness, see "VNL, VNM Electrical Schematics," Group 37.

Check of Component

Cruise control set switch

Note: Faults in the component can be caused by faults in the wiring harness of the VECU. A check of the wiring harness should also therefore be made before connecting a new component.

1

Disconnect the connector at the switch for the cruise control. Measurements should be taken only on the cruise control switch connector.

2

Turn the ignition key to the OFF position.

3

Connect an ohmmeter to the connector and measure the resistance.

J-39200

Measuring points	Expected value
Cruise control switch connectors E / G	open circuit (SET+ and SET- inactive)
	open circuit (ON and SET+ active)
	open circuit (RESUME active and SET+ active)
	open circuit (ON and SET- active)
	open circuit (RESUME active and SET- active)

Check of Subsystem

1

Disconnect the VECU and install adapter J-43234 between the VECU and wiring harness connectors PA/PB.

J-43234

2

Connect 60-pin breakout box 9998551 (with overlay J-43340) to the adapter.

9998551
J-43340

Signal wire:

3

Turn the ignition key to the ON position.

4

Connect a voltmeter to the 60-pin breakout box and measure the voltage.

J-39200

Measuring points	Expected value
PA1 / PA12	B+ (OFF and SET- active)
	0 V (OFF and SET+ active)
	0 V (ON and SET+ active)
	0 V (RESUME active and SET+ active)
PA2 / PA12	B+ (OFF and SET+ active)
	0 V (OFF and SET- active)
	0 V (ON and SET- active)
	0 V (RESUME active and SET- active)

Verification

To check that the fault has been corrected, use the test in the VCADS Pro tool (see "Appropriate Tests in the VCADS Pro Tool" page 235).

MID 144 SID 250 SAE J1587/1708 Information Link

The J1587/1708 Information Link is used to communicate gauge information and diagnostic messages.

High-speed digital communication between different electronic control units takes place over the J1939 Control Link; this is used to control vehicle operation. If the J1939 Control Link fails, the J1587/1708 Information Link serves as a “back-up” control link.

- **Text Messages**

In vehicles equipped with diagnostic display, the following message(s) will appear:

- **Instrument Cluster Graphics Display (VN):**

SAE J1708 data link

- **Data Link Instrument Cluster (WG, AC, WX):**

The Data Link instrument cluster graphics display used on WG-, AC-, and WX-series vehicles can display a limited number of text messages. For information, see “Data Link Instrumentation,” Volvo Service Publication PV776–381–620SM.

- **VCADS Pro Display:**

SAE J1587/1708 data link

Fault Codes

FMI 2

Intermittent or incorrect data.

Conditions for fault code:

- If the VECU registers incorrect messages on the J1587/1708 Information Link, the VECU interprets this as a fault and a fault code is set.

Possible cause:

- Several units are sending at the same time on the J1587/1708 Information Link.

Reaction from the VECU:

- Fault code is set.
- Yellow lamp is requested.

Noticeable external symptom:

- Yellow lamp lights up.

MID 144 SID 250 SAE J1587/1708 Information Link, Check

Special tools: J-39200

NOTE!

- Read off the other fault codes for the VECU.
- Check the particular connectors during the fault tracing for oxidation and switch resistance. For detailed circuit information, refer to “VNL, VNM Electrical Schematics,” Group 37.

Appropriate Tests in the VCADS Pro Tool

The following test(s) are useful for closely examining the component's function:

N/A No test currently available.

Check of Subsystem

1

Turn the ignition key to the ON position.

2

Using a voltmeter, back the probe connector PC (Green, 5-pin) at connectors PC1 and PC2 with the connector installed in the VECU.

J-39200

Note: This may require the use of voltmeter function MIN/MAX.

Measuring points	Expected value
PC1 / Alternate ground	0-5 V DC
PC2 / Alternate ground	0-5 V DC
PC1 / PC2	2-5 V DC

Note: The voltage of the information link varies and is dependent on the number of electronic control units and traffic on the information link.

Verification

No VCADS Pro tool test is currently available to verify this fault correction.

MID 144 SID 253 Data Set Memory EEPROM

At start-up, a checksum is calculated for the data set in the VECU's EEPROM memory. This is compared with the previously stored checksum to verify that the data set is correct.

- **Text Messages**
In vehicles equipped with diagnostic display, the following message(s) will appear:
- **Instrument Cluster Graphics Display (VN):**
Calibration memory
- **Data Link Instrument Cluster (WG, AC, WX):**
The Data Link instrument cluster graphics display used on WG-, AC-, and WX-series vehicles can display a limited number of text messages. For information, see "Data Link Instrumentation," Volvo Service Publication PV776-381-620SM.
- **VCADS Pro Display:**
Calibration memory EEPROM

Fault Codes

FMI 2

Intermittent or incorrect data.

Conditions for fault code:

- If the VECU receives an error in calculating the checksum in the calibration memory, the VECU interprets this as a fault and a fault code is set.

Possible cause:

- The memory circuit is faulty.
- Error when programming.

Reaction from the VECU:

- Fault code is set.
- Red lamp is requested.

Noticeable external symptom:

- Red lamp lights up.
- The vehicle can only be driven in the "limp home mode."

FMI 13

Values outside calibration values.

Conditions for fault code:

- If the VECU receives an error when calculating the checksums for the data sets, the VECU interprets this as a fault and a fault code is set.

Possible cause:

- The memory circuit is faulty.

- Error when programming of the data sets.

Reaction from the VECU:

- Fault code is set.
- Red lamp is requested.

Noticeable external symptom:

- Red lamp lights up.
- The vehicle can only be driven in the "limp home mode."

MID 144 PSID 3 Idle Validation Switch 3

This applies only to vehicles with a second accelerator pedal assembly (WX).

Note: Idle validation switch 2 is not used in North American applications.

- **Text Messages**

In vehicles equipped with diagnostic display, the following message(s) will appear:

- **Instrument Cluster Graphics Display (VN):**

Idle validation switch 3

- **Data Link Instrument Cluster (WG, AC, WX):**

The Data Link instrument cluster graphics display used on WG-, AC-, and WX-series vehicles can display a limited number of text messages. For information, see "Data Link Instrumentation," Volvo Service Publication PV776-381-620SM.

- **VCADS Pro Display:**

Idle validation switch 3

Fault Codes

FMI 7

Incorrect response from mechanical system.

Conditions for fault code:

- If the signal from the idle validation switch is not available with the accelerator position sensor below 13% travel, the VECU interprets this as a fault and a fault code is set.

Possible cause:

- Faulty idle validation switch.
- Open circuit in the supply wire.
- Open circuit in the signal wire.
- The signal wire short-circuited to ground.
- The signal wire short-circuited to voltage.
- Switch resistance and oxidation.

Reaction from the VECU:

- Fault code is set.
- Yellow lamp is requested.

Noticeable external symptom:

- Yellow lamp lights up.
- The engine does not respond correctly when the second accelerator pedal is depressed.

MID 144 PSID 3 Idle Validation Switch 3, Check

Other special equipment: J-39200, 9998551, J-43340, J-43234, J-41133

NOTE!

- Read off the other fault codes for the VECU.
- Check the particular connectors during the fault tracing for oxidation and switch resistance. For detailed circuit information, refer to “VNL, VNM Electrical Schematics,” Group 37.

Appropriate Tests in the VCADS Pro Tool

The following test(s) are useful for closely examining the component’s function:

27104–8 Extra accelerator control, switches and sensor, test

Measurement at the Component’s Connector, to the VECU

Note: Faults in the component can be caused by faults in the wiring harness of the VECU. A check of the wiring harness should also therefore be made before connecting a new component.

1 Disconnect the connector at the second accelerator pedal. Install 5-pin breakout harness J-41133 to the wiring harness end only. J-41133

Supply wire:

2 Turn the ignition key to the ON position.

3 Connect a voltmeter to the connector and measure the voltage. J-39200

Measuring points	Expected value
Pin D / alternate ground	B+

Signal wire:

4 Turn the ignition key to the OFF position.

5 Connect an ohmmeter to the connector and measure the resistance. J-39200

Measuring points	Expected value
Pin C / alternate ground	1.2 ± 20% kΩ

Wiring harness

6 To check the wiring harness, see “VNL, VNM Electrical Schematics,” Group 37.

Check of Component

Idle validation switch 3

Note: Faults in the component can be caused by faults in the wiring harness of the VECU. A check of the wiring harness should also therefore be made before connecting a new component.

1 Disconnect the connector at the second accelerator pedal. Install 5-pin breakout harness J-41133 to the accelerator pedal harness end only. J-41133

2 Turn the ignition key to the OFF position.

3 Connect an ohmmeter to the connector and measure the resistance. J-39200

Measuring points	Expected value
Pin C / Pin D	open circuit (accelerator at idle)
	20-90 Ω (full acceleration)

Check of Subsystem

1

Disconnect the VECU and install adapter J-43234 between the VECU and wiring harness connectors PA/PB.

J-43234

2

Connect a 60-pin breakout box 9998551 (with overlay J-43340) to the adapter.

9998551

J-43340

Signal wire:

3

Turn the ignition key to the ON position.

4

Connect a voltmeter to the 60-pin breakout box and measure the voltage.

J-39200

Measuring points	Expected value
PB30 / PA12	0 V (accelerator at idle)
	B+ (full acceleration)

Verification

To check that the fault has been corrected, use the test in the VCADS Pro tool (see "Appropriate Tests in the VCADS Pro Tool" page 241).

Service Procedures

2841-03-02-01

Engine ECU, Replacement

Special tools: 9998482

1

Note: Make sure that the parking brake is applied.

2

Disconnect the power with main switch



DANGER

Before working on a vehicle, set the parking brakes, place the transmission in neutral, and block the wheels. Failure to do so can result in unexpected vehicle movement and can cause serious personal injury or death.



WARNING

Fuel leaked or spilled onto hot surfaces or electrical components can cause a fire. Clean up fuel spills immediately.

3




T2014053

Remove the connector from the control unit by pressing the catch and pushing the handle up.

4

Cut the clamps round the cable harness under the control unit and fold away the connector for the control unit.

5

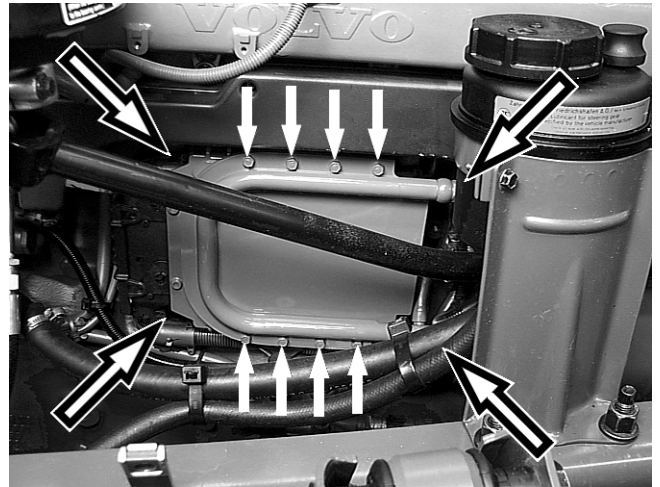

T2014052

Remove the bolts for the cooling coil on the control unit.

Note: Do not release the fuel lines on the cooling coil.

6

Remove the control unit's hold-down bolts (4, see previous illustration) and lift off the control unit.

7

Install the new control unit.

Note: Make sure that the framework line is positioned correctly and that the mating surface on the engine block is free from rust.

If the control unit is painted where the cooling coil is to be installed: Remove the paint where the cooling coil is in contact with the control unit to ensure maximum cooling.

8

Install the cooling coil on the control unit.

9

Check the clamping force of the terminal in the connector for the control unit by means of gauge 9998482.

9998482

10

Install the connector on the control unit. Make sure that the catch locks on the connector.

11

Clamp the cables under the control unit.

12

Switch on the power.

Note: When starting the engine with cab up, make sure that a gear is not engaged. The parking brake should be applied.

13

Conduct a function check. Check that there are no fault codes in the control unit.

Feedback

One of our objectives is that workshop personnel should have access to correct and appropriate service manuals where it concerns fault tracing, repairs and maintenance of Volvo trucks.

In order to maintain the high standards of our literature, your opinions and experience when using this manual would be greatly appreciated.

If you have any comments or suggestions, make a copy of this page, write down your comments and send them to us, either via telefax or mailing directly to the address listed below.

To

Volvo Trucks North America, Inc.

Dept. 516 Service Publications

7825 National Service Road

P.O. Box 26115

Greensboro, NC 27402-6115

USA

Fax (336) 393-3170

From

.....

.....

.....

.....

.....

.....

.....

Comments/proposals

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

Concerns Service Manual:

Operation Numbers

2841-03-02-01 Engine ECU, Replacement 243

VOLVO

Volvo Trucks North America, Inc.

P.O. Box 26115, Greensboro, NC 27402-6115

Volvo Trucks Canada, Ltd.

6490 Vipond Drive, Mississauga, Ontario L5T 1W8

<http://www.volvotrucks.volvo.com>